


AURORA SERIES UMHLAHLANDLELA WOKUQALA OKUSHESHAYO


SIONYX Aurora Ikhamera Yokukhanya Okuphansi

UKUSETHA IKHAMELA


1. Donsela i-latch phansi ukuze ususe isitholi sokubuka futhi ufinyezele indawo yebhethri

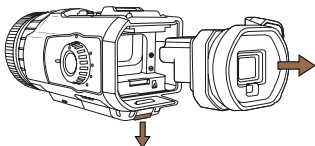


3. Phinda ufake isitholi sokubuka ekhamera

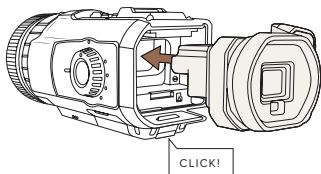


5. Xhuma embobeni ye-USB nge ukuphakamisa i-flap yerabha bese ushaja ikhamera

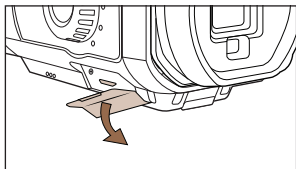


2. Faka ibhethri nekhadi le-Micro SD

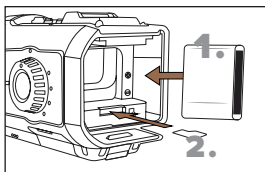

4. Qiniseka ukuthi ikhamera isethwe ukuthi IVALI

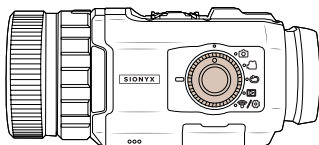

6. VULA ikhamera kunoma iyiphi imodi

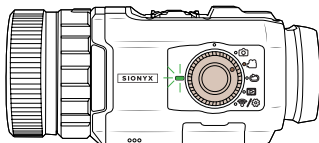

NGENXA ekusetheni ikhamera kuqhubekile

SIONYX

www.sionyx.com




UKUSETHA IKHAMELA IYAQHUBEKA


7. Landa i-SIONYX Aurora App kusuka ku-App Store noma ku-Google Play




9. Zungezisa indandatho yesikhethi ukuze ushintshe phakathi kwemodi yasemini, ukuhwalala, kanye nemodi yasebusuku

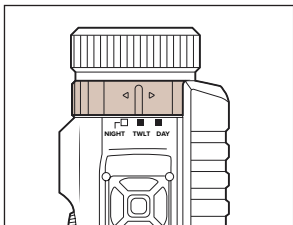

8. Bheka kusitholi sokubuka bese uzungezisa i-diopter ukuze ulethe imenyu ekugxilweni kwayo. Ikhamera yakho manje isilungele ukusetshenziswa

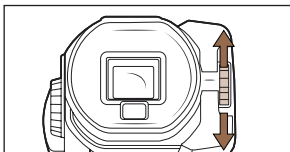

10. Izilungiselelo ezengeziwe zingabukwa futhi zifinyelelwe ngokucindezela isikhathi eside SET phezulu kwekhamera

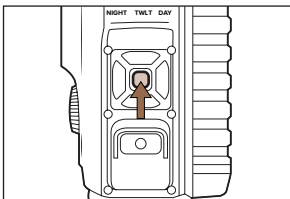

QAPHELA: Izinhlobo ze-Aurora Sport kanye neziMnyama zihamba ne-Electronic Viewfinder Display Timeout isethelwe kumasekhondi angu-60 ukonga ibhethi uma ingasebenzi. Ukuze ukhubaze, finyelela imenyu yesendlalelo sesibili.

100
Cummings
Center

Beverly, MA
01915 USA

SIONYX

www.sionyx.com