



SIONYX

AURORA SERIEKAMEROR

Användarmanual

SIONYX, LLC

Cummings Center

Beverly, MA 01915

U.S.A.

(978) 922-0684

support@SIONYX.com

Följ oss på Facebook@SiOnyxNightVision



SiOnyx, LLC
AURORA
4.2/3.6DC $\approx$ 0.72/0.84A



Pat.: sionyx.com/patents
Contains FCC ID:2AOI7-CDV18A
Contains IC:23556-CDV18A





Table of Contents

Chapter 1. Getting Started 6

- 1.1 Unpacking the Box
- 1.2 Charging the Battery
 - 1.2.1 Removing the Battery
 - 1.2.2 Viewing the Battery Charge
- 1.3 Viewing the Camera Modes and Settings
 - 1.3.1 Button Overview
 - 1.3.2 Settings Dial
 - 1.3.3 Viewfinder
 - 1.3.4 Scene Ring
 - 1.3.5 Focusing Ring
- 1.4 Inserting the Micro SD Card
- 1.5 Setting the Date and Time
- 1.6 Downloading the Mobile App to Connect to Your Camera

Chapter 2. Photos and Videos 22

- 2.1 Taking a Photo and Shooting a Video
 - 2.1.1 Taking a Photo
 - 2.1.2 Shooting a Video
 - 2.1.3 Adjusting the Focus
 - 2.1.4 Zooming In and Out
 - 2.1.5 Setting Exposure Compensation
 - 2.1.6 Using the Scene Ring
- 2.2 Viewing and Deleting Photos and Videos
 - 2.2.1 Viewing and Zooming In on Photos and Videos
 - 2.2.2 Viewing Thumbnails of Photos and Videos
 - 2.2.3 Playing Videos
 - 2.2.4 Deleting Photos and Videos
 - 2.2.5 Deleting Multiple Photos and Videos
- 2.3 Shooting Photos: Settings
 - 2.3.1 Shutter Speed
 - 2.3.2 Burst
 - 2.3.3 HDR

- 2.3.4 Self Timer
 - 2.3.5 Panorama
 - 2.3.6 Time Lapse
- 2.4 Shooting Photos and Videos: Advanced Settings
 - 2.4.1 Brightness
 - 2.4.2 Overlay
 - 2.4.3 EVF Time Out
 - 2.4.4 Night Glow
 - 2.4.5 Quick Review
 - 2.4.6 Invert Image
- 2.5 Shooting Videos: Settings
 - 2.5.1 EIS
 - 2.5.2 Setting the Frame Rate
 - 2.5.3 Resolution
 - 2.5.4 HDR

Chapter 3. Loop Mode 72

- 3.1 Trigger Type
- 3.2 Trigger Mode

Chapter 4. WIFI/Settings Mode 76

- 4.1 About
 - 4.1.1 Factory Reset
- 4.2 Auto Power OFF
- 4.3 Compass
- 4.4 Date and Time
 - 4.4.1 GPS Set
 - 4.4.2 Format
- 4.5 SD Card
- 4.6 Chimes
- 4.7 Audio
- 4.8 GPS
 - 4.8.1 Turning GPS On
 - 4.8.2 Changing the GPS Format
 - 4.8.3 GeoTag Image
- 4.9 WIFI



Chapter 5. Reference Information 95

- 5.1 Battery
 - 5.1.1 Operating Temperature Range
 - 5.1.2 Tips on Reducing Battery Usage
 - 5.1.3 Battery Storage and Handling
 - 5.1.4 Battery Disposal
- 5.2 Camera Specifications
- 5.3 SIONYX Customer Care

Chapter 6. Troubleshooting 98

Chapter 7. Warranty 99

Kapitel 1. Komma igång

Grattis till köpet av din nya SIONYX Aurora Night Vision-kamera! Låt oss börja!

1.2 Ladda Batteriet

Det första du behöver göra efter att du packat upp kameran är att ladda batteriet. Ladda batteriet via USB-porten.

Så här laddar du batteriet:

1. Se till att kameran är i AV-läge.



2. Ta bort sökaren genom att dra ned sökarens frigöringsknapp.



3. Dra sökaren rakt ut.




4. Skjut in batteriet i batterifacket.

Kapitel 1. Komma igång

5. Sätt in mikro-USB-kabeln i kamerans USB-port.



6. Anslut kameran till en påslagen dator med den medföljande Micro USB-kabeln.

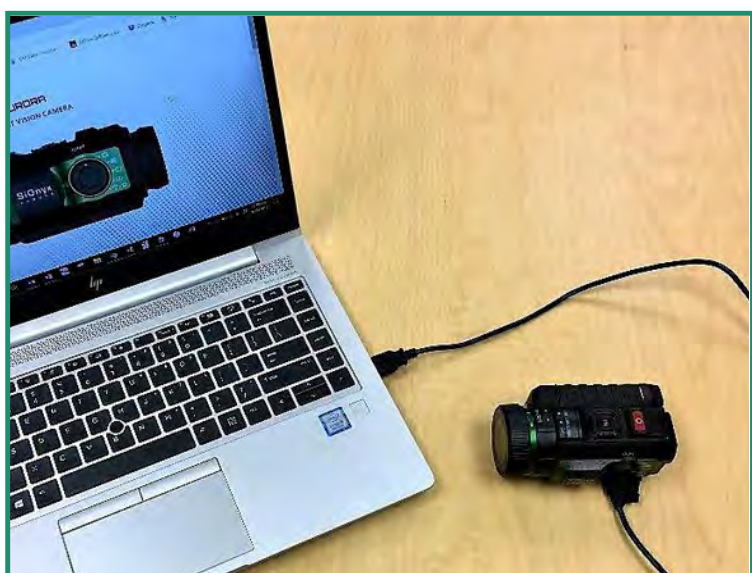

En grön lampa tänds och blinkar långsamt under laddningsprocessen. När batteriet är fulladdat släcks lampan.

Obs: Det kommer att ta cirka 2-3 timmar att ladda batteriet till 100 % och det räcker till ~2 timmar med videoinspelning.

Kapitel 1. Komma igång

1.2.1 Ta bort batteriet

1. Öppna sökaren genom att dra ned sökarens frigöringsknapp.




2. Dra sökaren rakt ut.



3. Tryck på fliken på vänster sida av batteriet och skjut ut batteriet. Skjut tillbaka sökaren i dess öppning.

1.2.2 Titta på batteriladdningen

För att se återstående batteriladdning, vrid inställningsratten till Foto, Video, Loop eller WiFi/Inställningar.

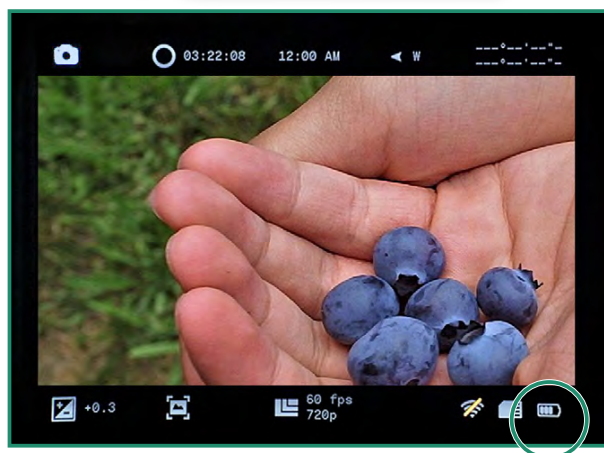


Batterimätarikonen finns längst ner till höger på skärmen.

Kapitel 1. Komma igång

1.3 Visa kameralägen och inställningar

Här är en översikt över kameraknapparna.

1.3.1 Knappöversikt

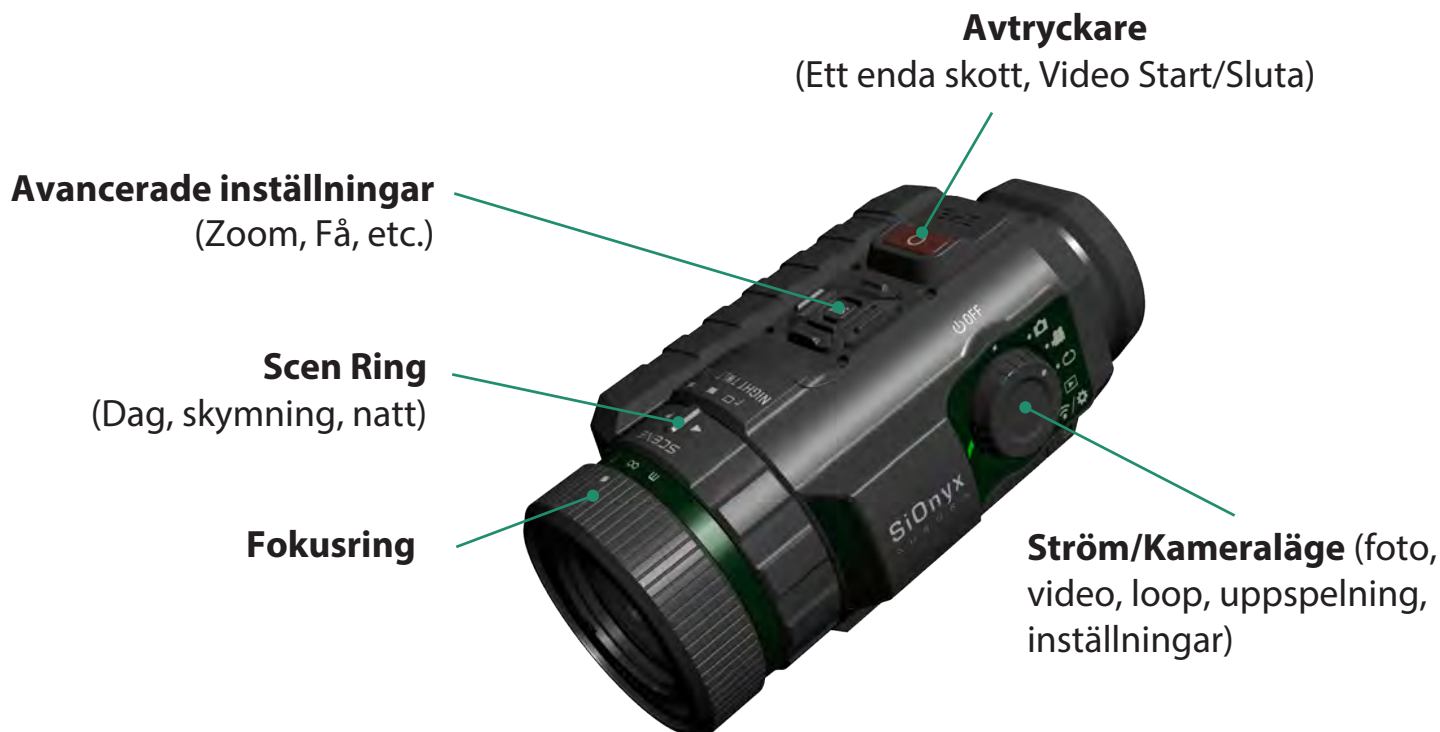

1.3.2 Inställningsratt

Inställningsratten slår på och av kameran samt för att ställa in kameraläget.



Stäng av

Foto

Video

Slinga

Uppspelning

WiFi/inställningar



Kapitel 1. Komma igång

1.3.3 Sökare

Den elektroniska sökaren (EVF) innehåller en meny och kontrollsystem för kameran. På höger sida av EVF finns dioptriratten. ANVÄND DETTA FÖR ATT FOKUSERA PÅ DITT ÖGA INNAN DU FOKUSERA LINSEN.



1.3.4 Scen Ring

Använd scenringen för att justera linsen till tiden på dygnet.



1.3.5 Fokuseringsring

Använd fokuseringsringen för att justera fokus visuellt eller genom avståndsställningarna på ratten.



Kapitel 1. Komma igång

1.4 Sätta i Micro SD-kortet

Micro SD-kortet innehåller alla dina videor och foton.

1. För att sätta i Micro SD-kortet, ta bort sökaren genom att dra ned sökarens frigöringsknapp.
2. Dra sökaren rakt ut.
3. Sätt i SD-kortet i dess kortplats och tryck på det tills det låses. För att ta bort den, tryck på den igen och den släpps.
4. Skjut tillbaka sökaren i dess skåra.




Obs: Tvinga inte in SD-kortet i kortplatsen eftersom data kan skadas.



1.5 Ställa in datum och tid


1. För att ställa in datum och tid, vrid inställningsratten till menyn WiFi/Inställningar.
2. Tryck på SET för att komma åt menyn WiFi/inställningar.
3. Denna varning visas tills datum och tid har ställts in.
4. Växla ner till Datum och tid och växla höger till alternativen Datum och tid.
5. Du kan antingen ställa in tiden med GPS (INTE TILLGÄNGLIG PÅ ALLA KAMEROR) (se "Avsnitt 4.4.1 GPS-inställning". Du kan också ändra formatet för datum och tid (se "Avsnitt 4.4.2 Format").

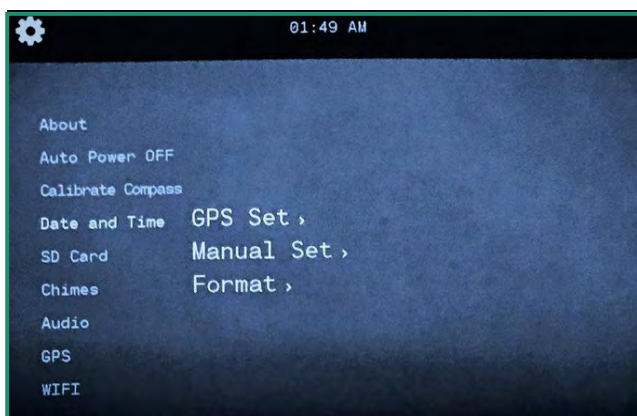


Kapitel 1. Komma igång

För att ställa in datum och tid manuellt, växla ner till **Manuell inställning**.

1. Vrid inställningsratten till läget WiFi & inställningar.
2. Växla ner till Datum och tid och sedan höger till Manuell inställning.
3. Växla höger till Datum och tryck på SET. Datumet högst upp i meny är nu i ändringsläge.
4. Växla upp och ner för att ändra datum och tryck på SET. Upprepa dessa steg för att ställa in tiden.

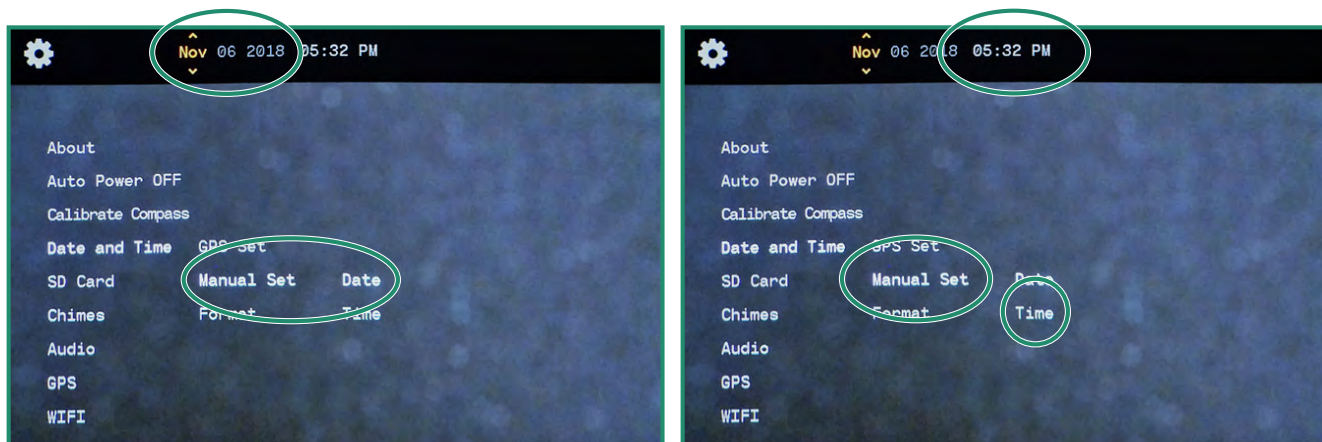


5. För att ställa in datumformat, växla åt höger till datumformat och tryck på SET.

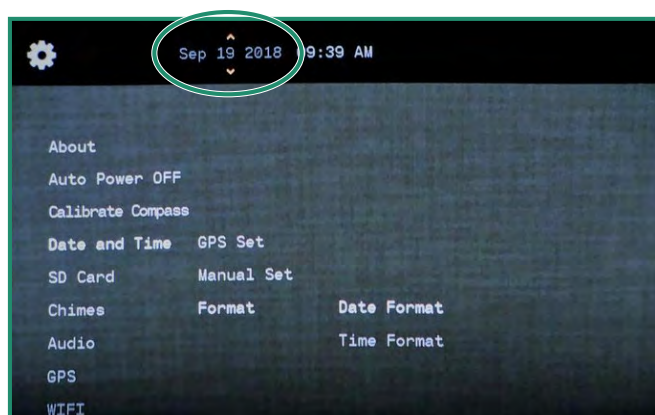

6. Välj datumformat längst upp på skärmen. Välj ett alternativ och tryck på SET. Se "Avsnitt 4.4.2 Format".

Kapitel 1. Komma igång


7. Gå ner till Tidsformat och tryck på SET och välj det alternativ du vill ha högst upp på skärmen och tryck på SET.
8. Växla vänster två gånger för att lämna huvudmenyn och växla vänster två gånger för att återgå till huvudmenyn för WIFI/Inställningar.

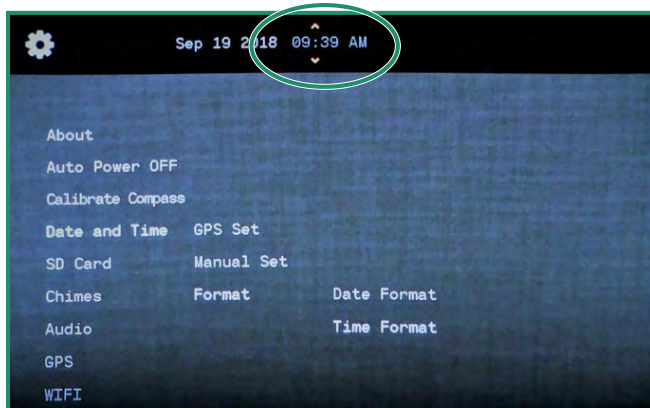

1.6 Ladda ner mobilappen för att ansluta till din kamera

Mobilappen fungerar låter dig styra din kamera från en mobil enhet och se en Live View. Appen finns tillgänglig i App Store och Google Play.

1. Ladda ner SIONYX Aurora Mobile App från App Store eller Google Play.


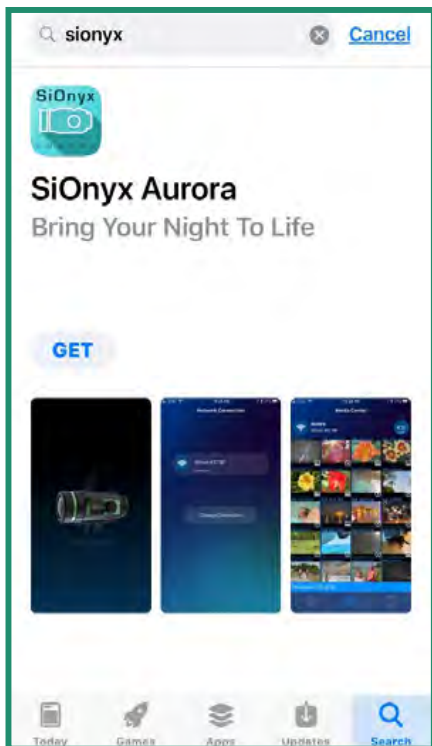


Kapitel 1. Komma igång



2. För att ansluta din mobila enhet till kameran, vrid inställningsratten till WiFi/Inställningsläge för att komma åt menyn.



3. Växla ner till WIFI och växla åt höger till WIFI On och tryck på SET.

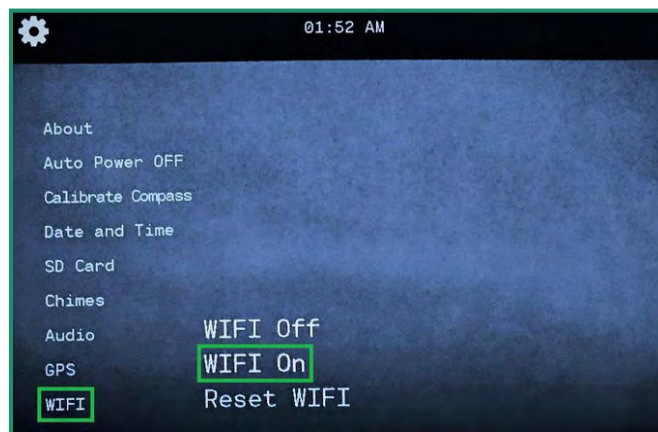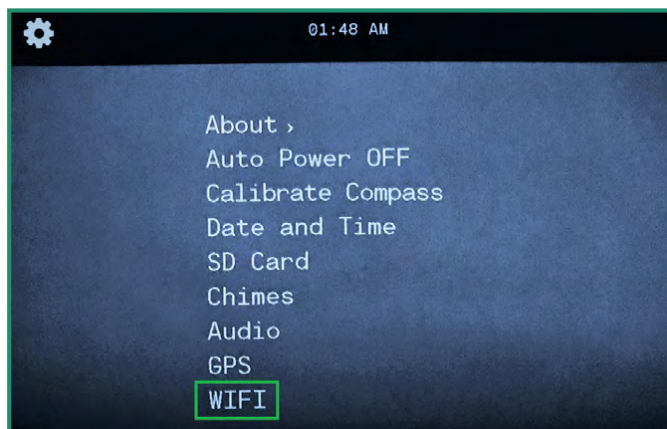

4. Skärmen visar "Väntar på WIFI-anslutning..."

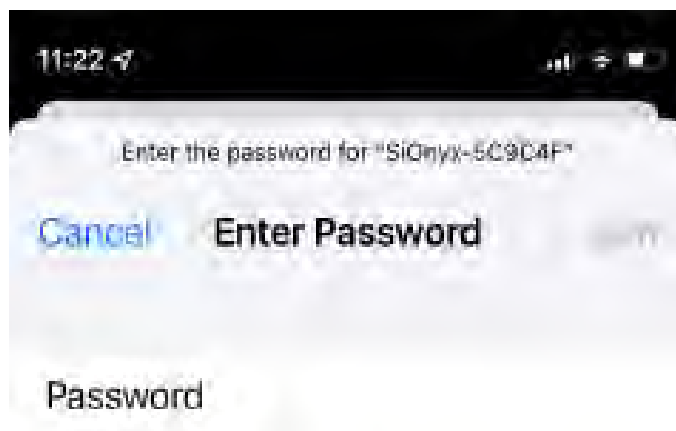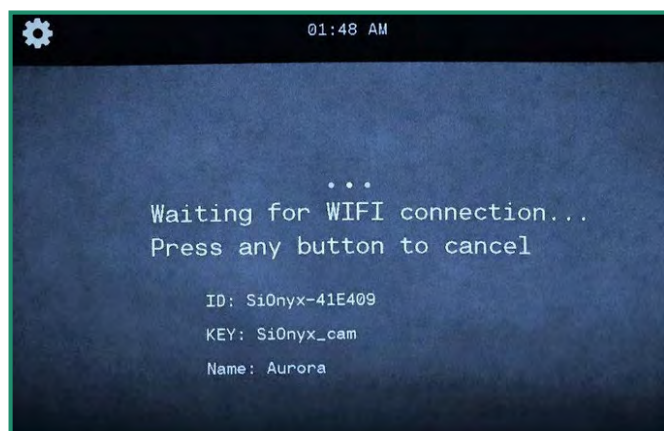


5. Gå till WiFi-inställningen på din mobila enhet:

- **stäng av BLUETOOTH OCH CELLULÄR SERVICE**
- **välj SIONYX kamera WiFi-anslutning**
- **ange Wi-Fi-lösenordet, "SiOnyx_cam"**

Kapitel 1. Komma igång

Lösenordet visas som KEY i sökaren.

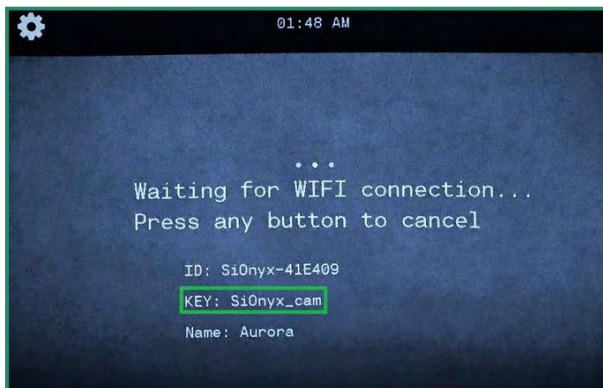


När WiFi-anslutningen har upprättats visar sökaren "WiFi-anslutning upprättad."

6. Öppna mobilappen och tryck på kameranamnet.



Nu är du på startskärmen för appen, som kallas Media Center.

Obs: För mer information om hur du använder SIONYX Aurora Mobile App, ladda ner mobilappguiden från vårt supportcenter: <https://support.SIONYX.com/support/home>.

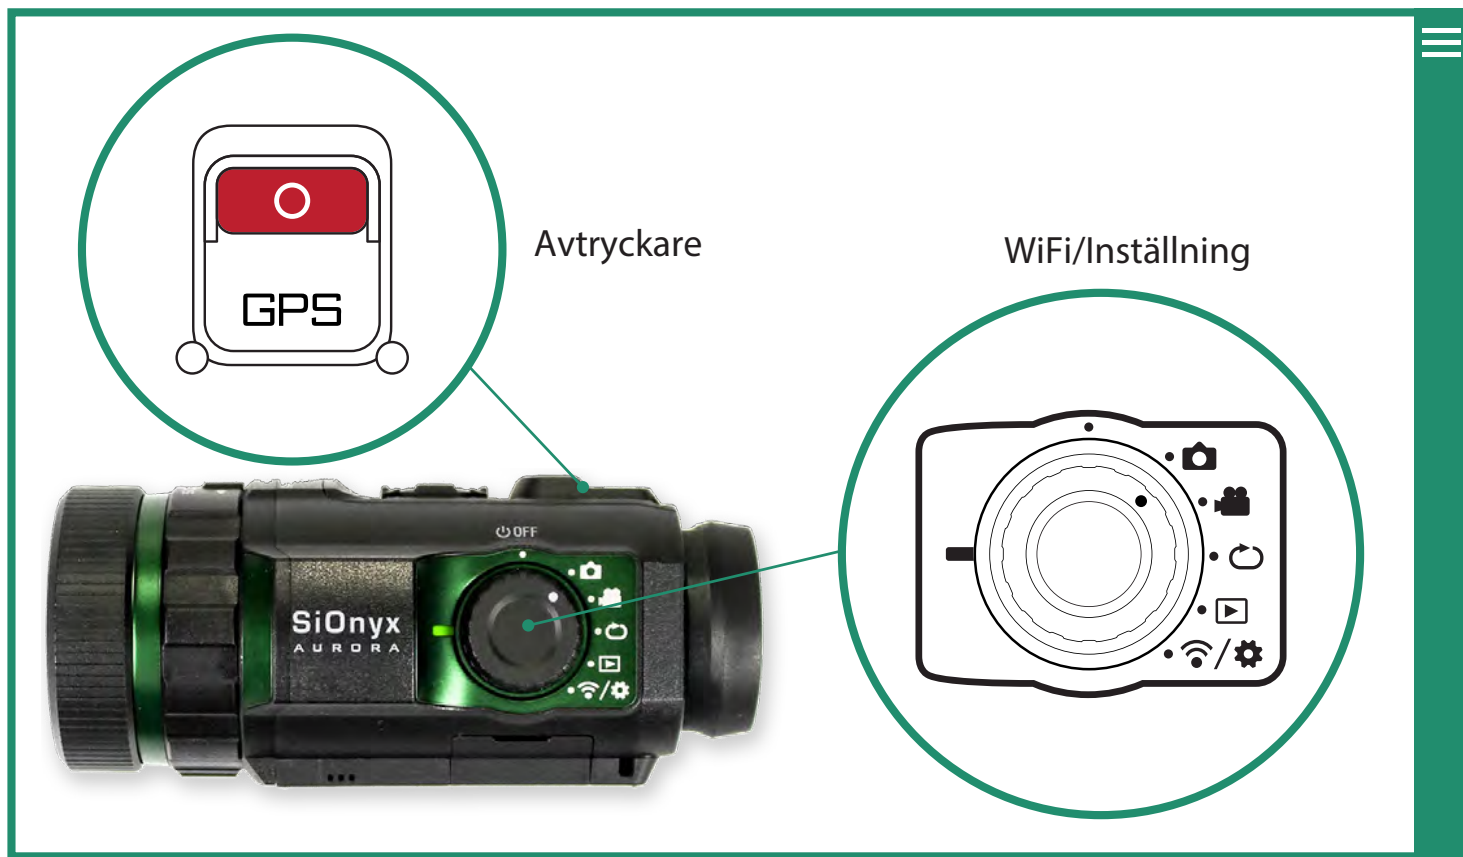

2.1 Ta ett foto och spela in en video

2.1.1 Tar ett Foto





1. För att ta ett foto, vrid inställningsratten till fotoläge
2. Tryck på slutarknappen för att ta ett foto.

2.1.2 Spela in en Video




1. För att spela in en video, vrid inställningsratten till videoläge
2. Tryck på slutarknappen för att starta och stoppa videon.

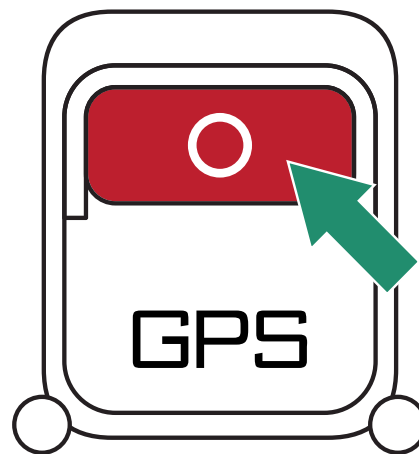

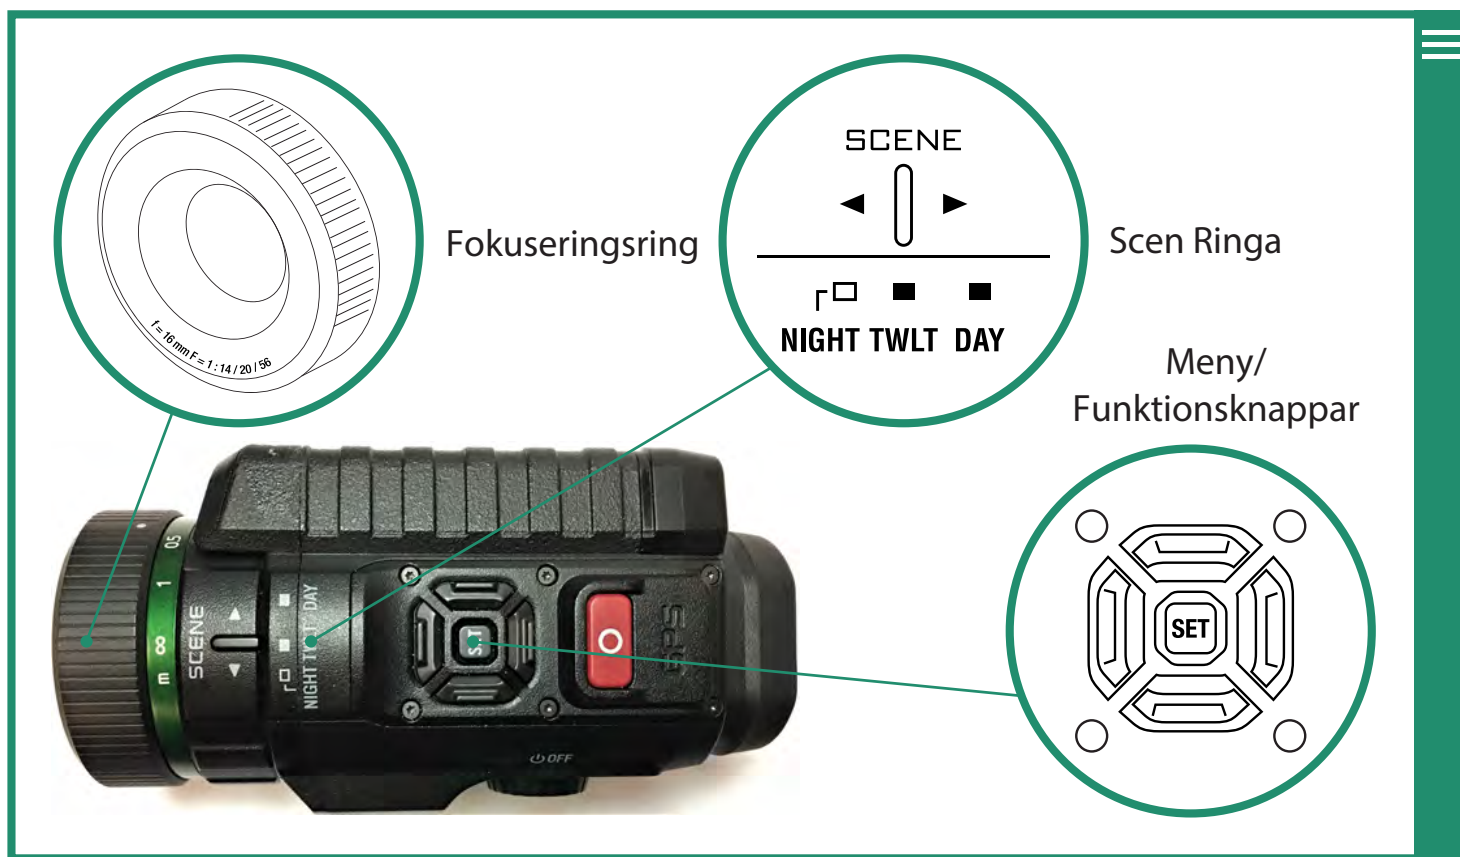

2.1.3 Justera fokus

För att få en bild i fokus, vrid fokuseringen åt vänster och höger.

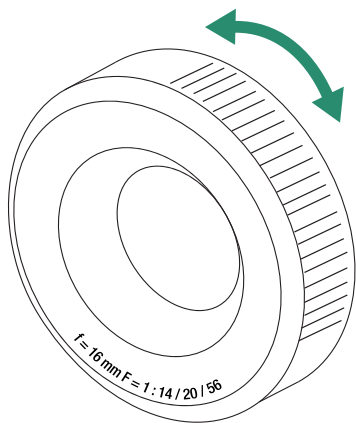


Obs: För att hjälpa till med fokuseringen, uppskatta avståndet där handlingen i din scen kommer att inträffa och ställ in det avståndet i meter på fokusskalan. Du kan också aktivera Focus Peak under Överlägg-menyn.

Kapitel 2. Foton och videor


2.1.4 Zoom

För att zooma in och ut, växla åt vänster och höger. Tre högerklick ger dig bildåtergivning i 1:1.

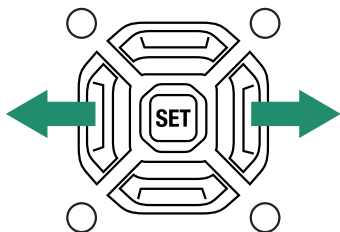

2.1.5 Ställa in Exponeringskompensation (Förstärkning)

Exponeringskompensation (eller förstärkning) justerar ljusstyrkan och mörkret i scenen. Växla upp och ner för att justera exponeringskompensationen.

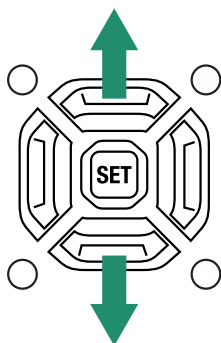

Inställningen för exponeringskompensation/förstärkning finns längst ner till vänster på menyn Sökare.

Kapitel 2. Foton och videor

2.1.6 Scenringen

Kameran har inställningar för Natt, Skymning och Dag:



- Natt – fullt mörkerseende (f/1,4)
- Skymning – ungefär en timme före soluppgången och en timme efter dagsljus (f/2.0)
- Dag – sol eller moln (f/5.6)

2.2 Visa och ta bort foton och videor

Du kan använda funktionerna för uppspelningsläge för att visa och radera foton och videor.

2.2.1 Visa och zooma in på foton och videoklipp

Du kan visa och zooma in på foton och videor i uppspelningsläget.

1. Vrid inställningsratten till uppspelningsläge.
2. Du kommer att se det senaste fotot eller videon du tog.
3. Växla vänster och höger för att visa dina foton eller videor.
4. Du kan zooma in tillfälligt genom att trycka länge på SET.




Kapitel 2. Foton och videor


2.2.2 Visa Miniaturer av Foton och Videor

Du kan visa fyra eller nio miniatyrer av foton och videor i uppspelningsläget.

1. Vrid inställningsratten till uppspelningsläge.
2. Du ser det senaste fotot eller videoklippet du tog.
3. Växla snabbt två gånger för att visa fyra miniatyrer.

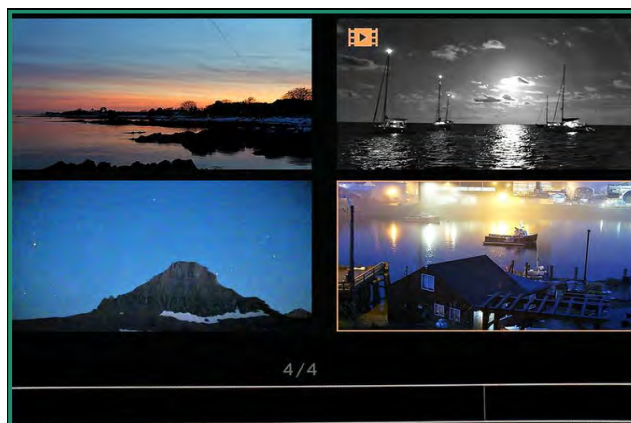

4. Växla upp två gånger snabbt igen för att visa nio miniatyrer.

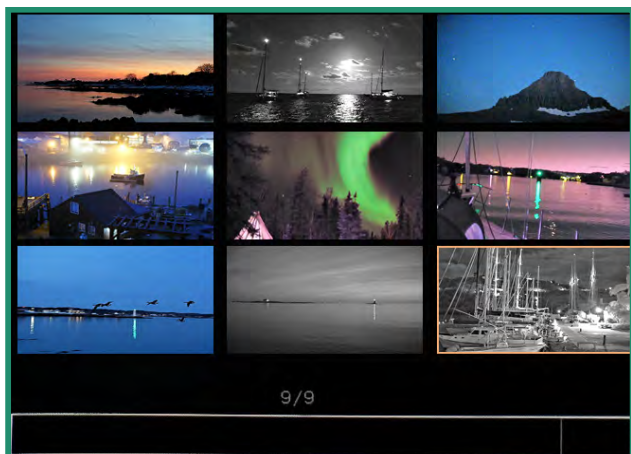

5. Växla vänster och höger för att markera fotot eller videon.
6. Gå ur miniatyrläge genom att snabbt växla upp två gånger.

Kapitel 2. Foton och videor

2.2.3 Spelar upp videor

Visa videor i uppspelningsläget





1. Vrid inställningsratten till uppspelningsläge.
2. Växla till videon som du vill spela och tryck länge på SET tills videon börjar spelas.

2.2.4 Ta Bort Foton och Videor

Radera foton och videor i uppspelningsläget

1. Vrid inställningsratten till uppspelningsläge.
2. Växla till fotot eller videon som du vill radera och tryck på SET. En grön bock visas i det nedre högra hörnet.
3. Tryck länge på SET tills en papperskorgsbild visas.
4. För att radera fotot eller videon, tryck länge på SET tills papperskorgen börjar blinka och släpp sedan SET-knappen. Bilden eller videon är nu raderad.

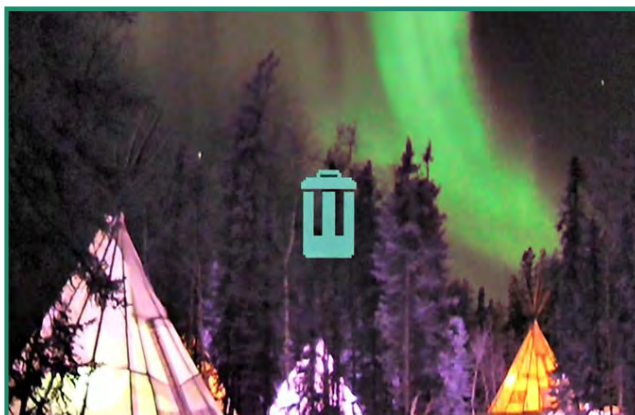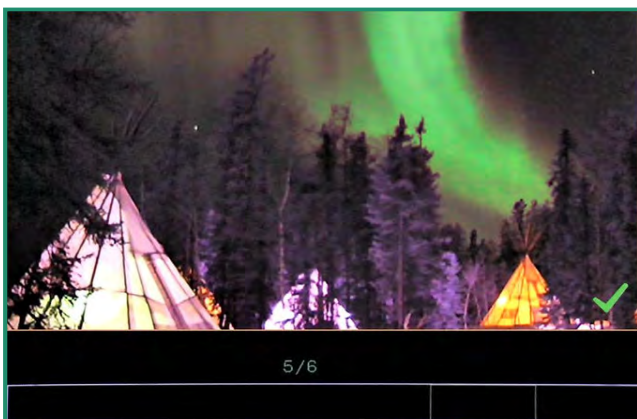

Om du bestämmer dig för att inte ta bort fotot eller videon, växla till vänster och bilden återgår till den som har den gröna bocken. Tryck på SET för att ta bort bocken.


Kapitel 2. Foton och videor

2.2.5 Ta bort flera foton och videor

Du kan radera flera foton och videor samtidigt.



1. Vrid inställningsratten till uppspelningsläge.
2. Visa miniatyrbilderna av dina foton eller videor, följ instruktionerna i "Avsnitt 2.2 Visa och ta bort foton och videor".
3. Växla till de foton eller videor som du vill radera.
4. Välj bilden och tryck på SET. Du kommer att se en grön bock i det nedre högra hörnet. Gör detta för varje bild som du vill ta bort.

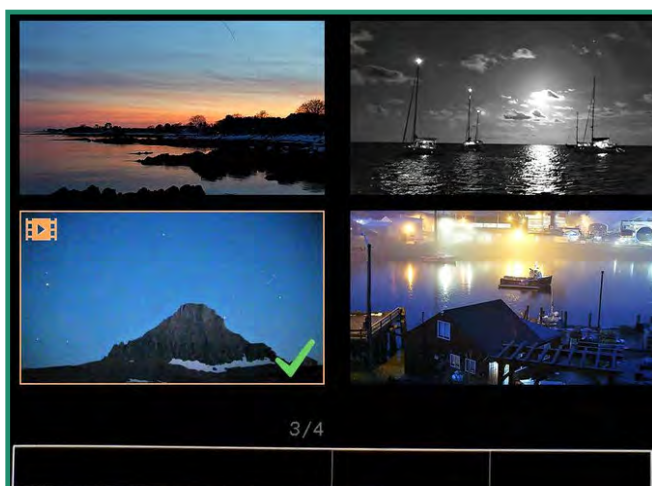

5. Tryck länge på SET tills en papperskorg dyker upp.
6. För att fortsätta med radering, tryck länge på SET tills papperskorgen börjar blinka.
7. Fotot eller videorna är nu raderade.

Om du bestämmer dig för att du inte vill ta bort foton eller videorna, växla till vänster och den gröna bockmarkeringen visas. Tryck på SET för att ta bort bockarna.

Kapitel 2. Foton och videor

2.3 Ta bilder: Inställningar





2.3.1 Slutartid


Slutartid är den tid som slutaren är öppen när du tar ett foto. Snabbare slutartid släpper in mindre ljus och minskar motivets rörelse.

Det finns två slutarinställningar: Auto och Manuell. Din kamera är inställd på Auto som standard. Du kan justera slutartiden.

1. Slå på kameran genom att vrida inställningsratten till fotoläge.
2. Tryck på SET för att komma åt kameramenyn.
3. Växla höger på Slutaren till Auto eller Manuell.

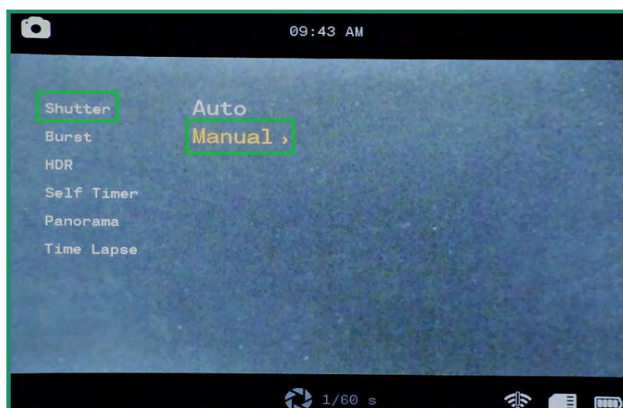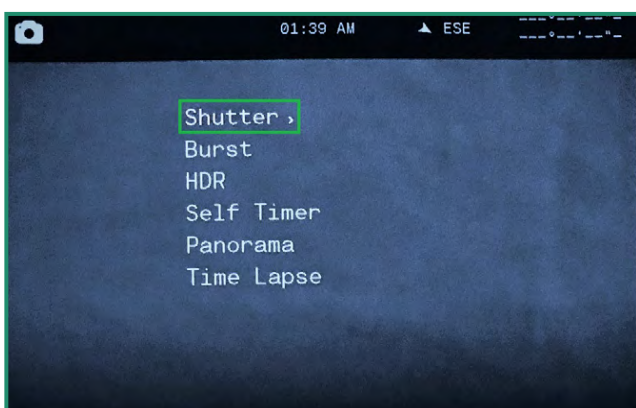

4. För att ställa in slutarinställningarna manuellt, växla ner till Manuell och höger till slutartiderna.

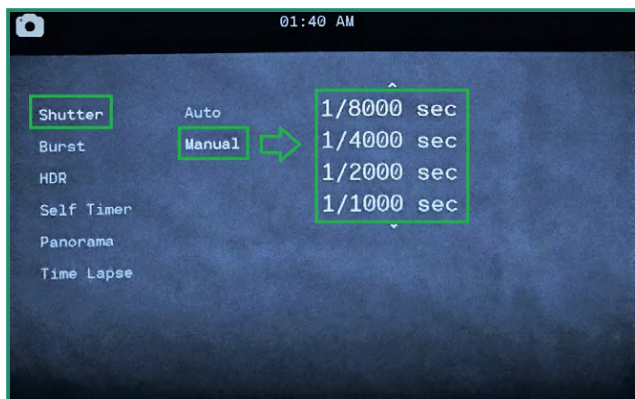



5. Växla upp och ner för att bläddra igenom slutarhastighetsinställningarna.
6. Tryck på SET för att välja den slutartid som bäst passar din scen. Du kan ställa in slutartiden från 1/8000 av en sekund till 1,5 sekunder.
7. Växla åt vänster och tryck på SET för att avsluta slutartiden. Slutartiden är nu synlig längst ner på skärmen.

Kapitel 2. Foton och videor


2.3.2 Brista

Burst-läget gör att du kan ta unika bilder i följd med en hastighet av 10 bilder per sekund (fps), 5 fps eller 2,5 fps. Burst-läget är användbart när du tar actionbilder.

1. Slå på kameran genom att vrida inställningsratten till fotoläge. 
2. Tryck på SET för att komma åt menyn.
3. Gå ner till Burst och sedan höger till alternativen.
4. Välj det alternativ som passar din scen bäst och tryck på SET.

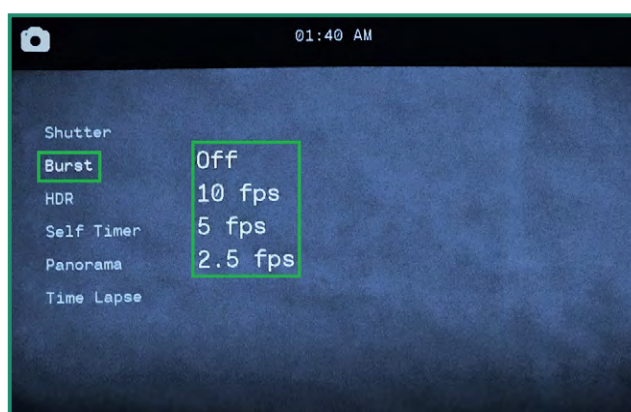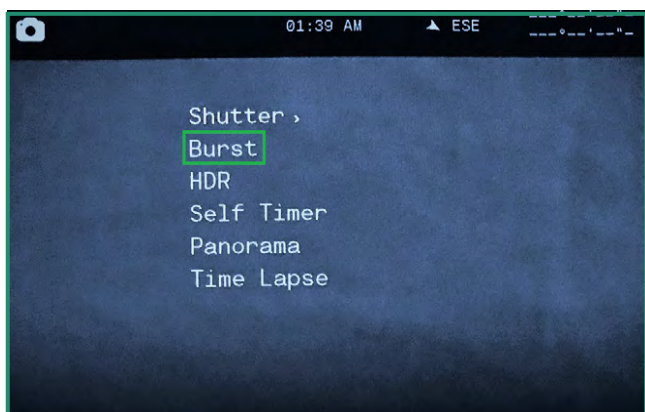

5. Tryck på SET för att lämna menyn och du kommer att se ikonen för Burst-inställning.

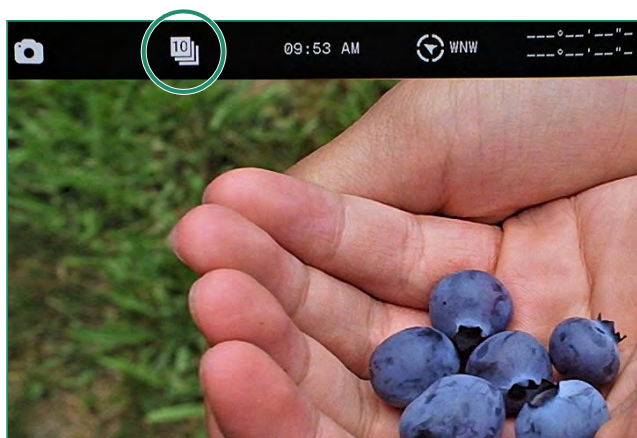

6. För att ta ett foto, tryck på slutarknappen. Med Chimes på (rekommenderas) kan du höra klick för varje foto som kameran tar. Fortsätt att trycka på slutarknappen tills klicksen slutar.



Obs: Alla funktioner förblir valda när kameran stängs av och sedan på igen.

Kapitel 2. Foton och videor

2.3.3 HDR

HDR (Högt Dynamiskt Omfång) är en teknik som låter dig fånga fler detaljer från ljusa och mörka områden.

1. Slå på kameran genom att vrida inställningsratten till fotoläge.
2. Tryck på SET för att komma åt menyn.
3. Växla ner till HDR och höger till På eller Av och tryck på SET.
4. Tryck på SET för att lämna menyn.

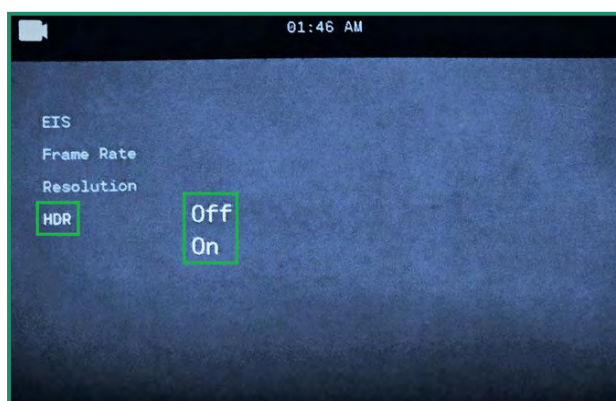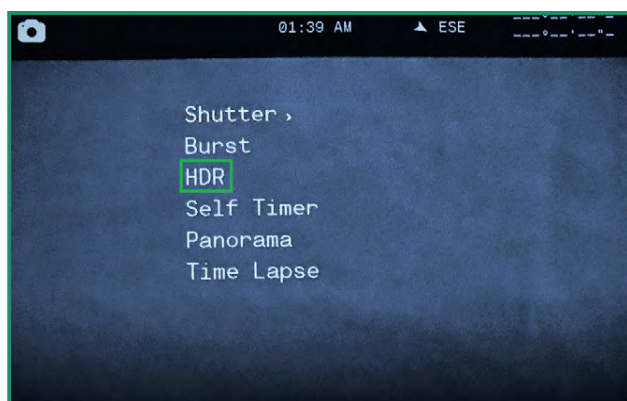

5. HDR-ikonen kommer att synas i sökaren.





Obs: Alla funktioner förblir valda när kameran stängs av och sedan på igen.

Kapitel 2. Foton och videor

2.3.4 Självutlösare

Självutlösaren låter dig fördröja tidpunkten för avtryckaren så att du kan vara med på bilden. Du kan ställa in självutlösaren på 2, 5 eller 12 sekunder.

1. Slå på kameran genom att vrida inställningsratten till fotoläge.
2. Tryck på SET för att komma åt menyn.
3. Gå ner till Självutlösare och höger till alternativen.
4. Växla ner till den fördröjning du behöver och tryck på SET.

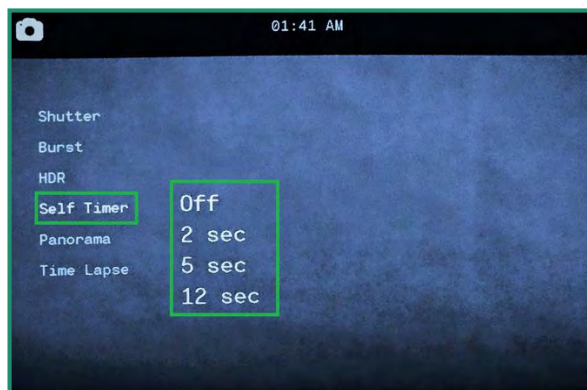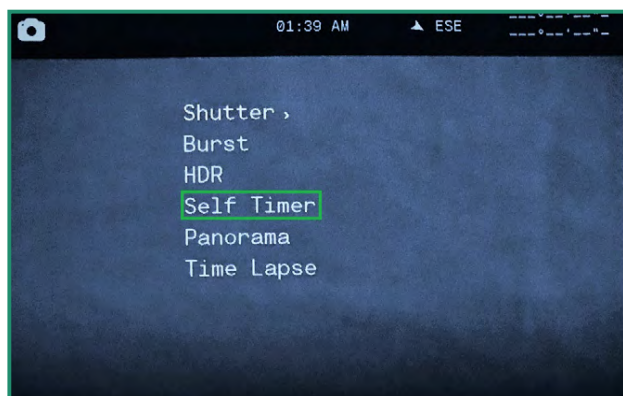

5. Tryck på SET för att lämna menyn. Du kan se inställningen för självutlösare i sökaren.



När du trycker på slutarknappen hörs en ljudsignal för att räkna ned fördröjningen, följt av ett klick när bilden tas.


Obs: Alla funktioner förblir valda när kameran stängs av och sedan på igen.

Kapitel 2. Foton och videor

2.3.5 Panorama

Du kan ta ett panoramafoto genom att panorera kameran från vänster till höger för ett landskapsfoto eller upp och ned för ett porträttfoto. Kameran kommer att producera ett 180-gradersfoto.


1. Slå på kameran genom att vrida inställningsratten till fotoläge.
2. Tryck på SET för att komma åt menyn.
3. Växla ner till Panorama och höger till Porträtt eller Landskap.
4. Tryck på SET för att lämna menyn. Panoramainställningsikonen kommer att vara synlig i sökaren.

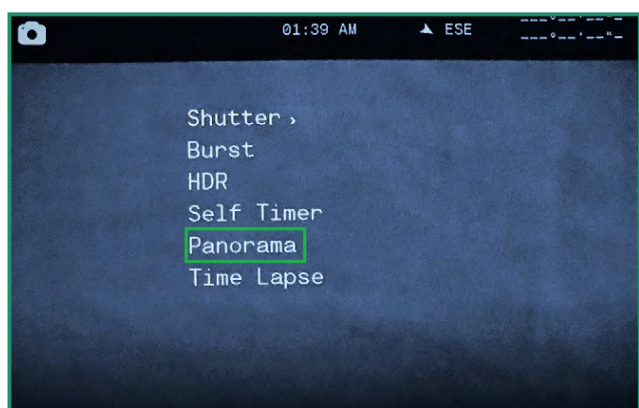

5. För att ta ett panoramafoto, tryck på slutarknappen. En grå förloppsindikator visas antingen till vänster på skärmen (Landskap) eller längst ner på skärmen (stående).

Flytta kameran antingen upp och ner (porträtt) eller vänster och höger (landskap). När du flyttar kameran ser du det grå fältet längst ned på skärmen.

Din Panorama måste vara mellan 90 grader och 180 grader. Om det är mindre, eller om du flyttar kameran för snabbt, kommer du att se ett felmeddelande: "Swing Range Error." Om du inte vill gå hela 180 grader, tryck på slutarknappen för att sluta ta bilden.

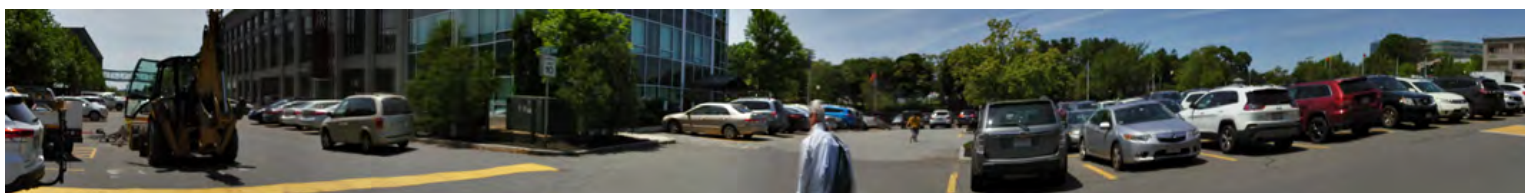

Kapitel 2. Foton och videor



2.3.6 Tidsförlopp

Time Lapse-funktionen som låter dig ställa in kameran att ta ett visst antal bilder per timme under ett valbart antal timmar. När tidsförloppet är klart kommer kameran att skapa en video.


Kameran tar bilder i en hastighet av en per timme upp till så många som 60 per timme.

Du kan också låta kameran ta bilder under en viss tidsperiod med hjälp av funktionen Time Lapse varaktighet. Det betyder att kameran kan ta bilder i en timme upp till 24 timmar.

1. Slå på kameran genom att vrida inställningsratten till fotoläge.
2. Tryck på SET för att komma åt menyn och växla ner till Time Lapse.
3. Växla höger till På och höger igen för att ställa in hastigheten.
4. Välj en hastighet genom att trycka på SET.

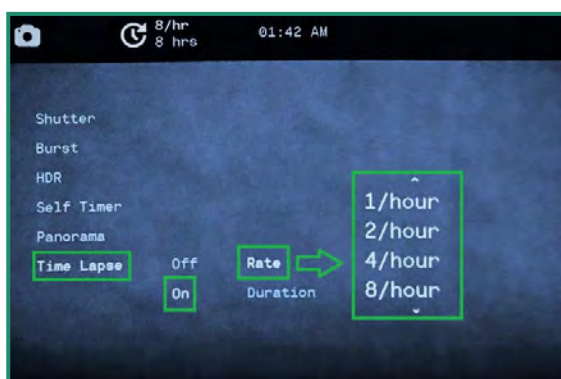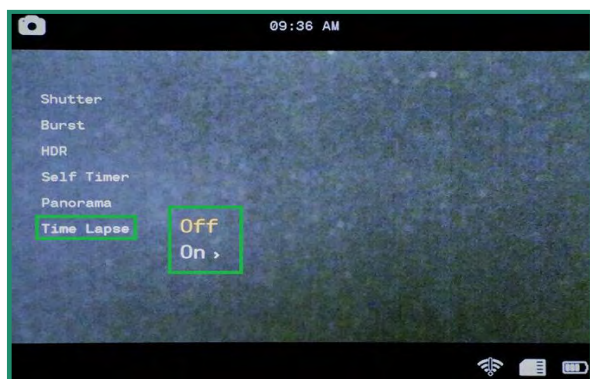

5. Gå ner till Varaktighet och höger för att välja antal timmar.
6. Växla vänster två gånger och tryck på SET för att avsluta.

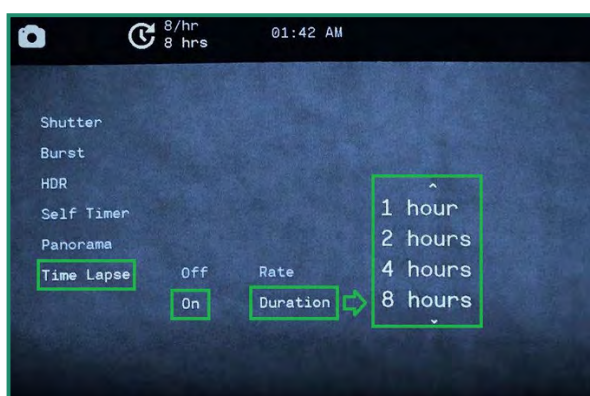

7. Time Lapse-inställningarna visas överst på skärmen.
8. För att starta en Time Lapse-session, placera kameran på platsen och tryck på slutarknappen.

2.4 Ta Foton och Videor: Avancerade inställningar

Kameran har några ytterligare inställningar som borde hjälpa dig med dina fotograferingsbehov.

Obs: Dessa inställningar är tillgängliga i foto-, video- och looplägen. Funktionen Snabbgranskning är endast tillgänglig i fotoläget. Se "Avsnitt 2.4.5 Snabbgranskning".




2.4.1 Ljusstyrka

Du kan justera ljusstyrkan i sökaren med hjälp av funktionen Ljusstyrka. Standardinställningen är Auto och du kan ändra den till hög, medium eller låg.

Ljusstyrkan i sökaren ändras för varje scenläge: Natt, Skymning eller Dag.

1. Vrid inställningsratten till foto-, video- eller loopläge.
2. Tryck länge på SET-knappen för att komma åt menyn.
3. Växla höger på Ljusstyrka och välj det alternativ som passar bäst för ditt öga och din situation och tryck på SET.
4. Tryck på SET igen för att lämna menyn.

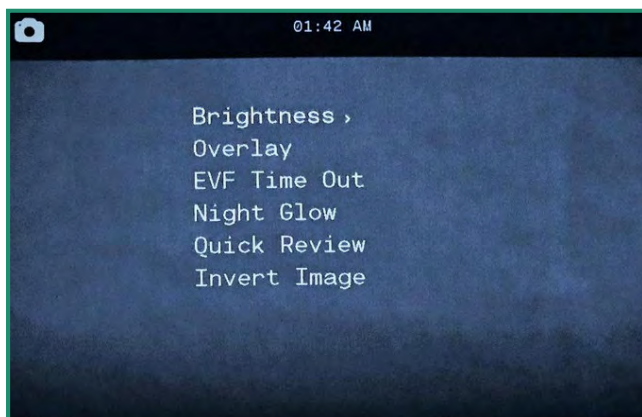

Kapitel 2. Foton och videor

2.4.2 Överlägg (INTE TILLGÄNGLIGT PÅ ALLA KAMEROR)

Överlagringsmenyn har specialfunktioner som hjälper dig att ta mer exakta och jämna foton och videor.

2.4.2.1 Fokus Peak

Focus Peak är ett fokuseringshjälpmedel som placerar en röd höjdpunkt på kanter i fokus.




1. Slå på kameran genom att vrida inställningsratten till foto-, video- eller loopläge.



2. Tryck länge på SET-knappen för att komma åt menyn.

3. Växla ner till Overlay och växla sedan åt höger och ner till Focus Peak.

4. Växla höger på Focus Peak. Välj Av eller På och tryck på SET.

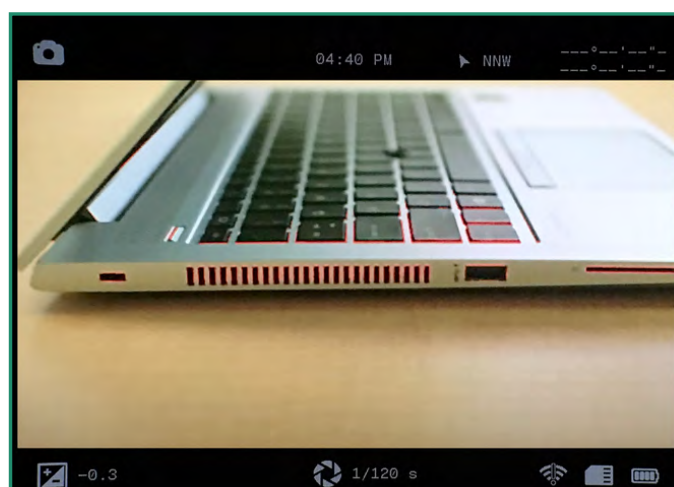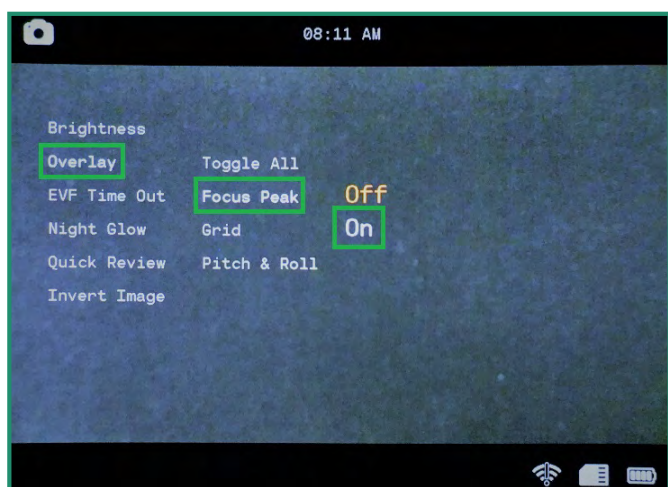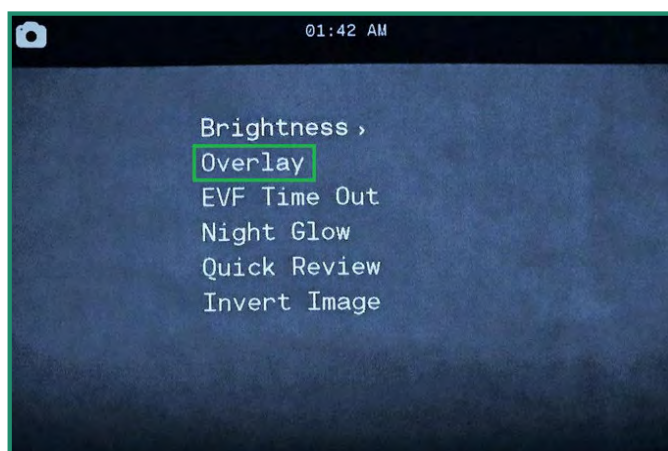

5. Växla till vänster och tryck på SET för att lämna menyn. När du nu tittar genom sökaren ser du en röd kant där ditt motiv är i fokus.


Kapitel 2. Foton och videor

2.4.2.2 Grid (NOT AVAILABLE ON ALL CAMERAS)

The Grid feature divides the Viewfinder into nine sections using a four line grid. The Grid can help you align the subjects in your photo or video and aids in image composition.



1. Turn the camera on by rotating the Settings Dial to Photo, Video, or Loop Mode.
2. Long press the SET button to access the menu.
3. Toggle down to Overlay and then toggle right and down to Grid.
4. Toggle right again and select On and press SET.
5. Toggle left and press SET to exit.

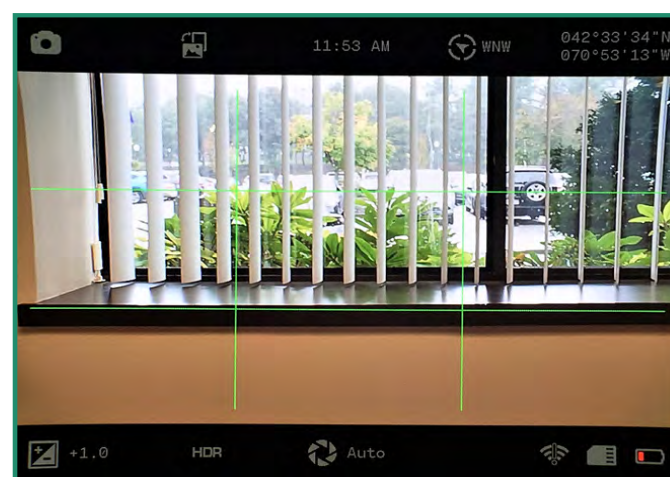




The Grid will now be visible in the Viewfinder.

Kapitel 2. Foton och videor

2.4.2.3 Pitch & Roll (NOT AVAILABLE ON ALL CAMERAS)

The Pitch & Roll feature will help keep your camera level, both front to back and side to side.

1. Turn the camera on by rotating the Settings Dial to Photo, Video, or Loop Mode.
2. Long press the SET button to access the menu.
3. Toggle down to Overlay and then right and down to Pitch & Roll.
4. Toggle right to On and press SET.
5. Toggle left and press SET to exit.

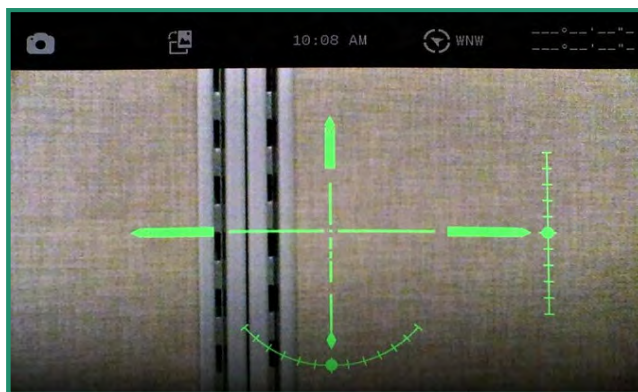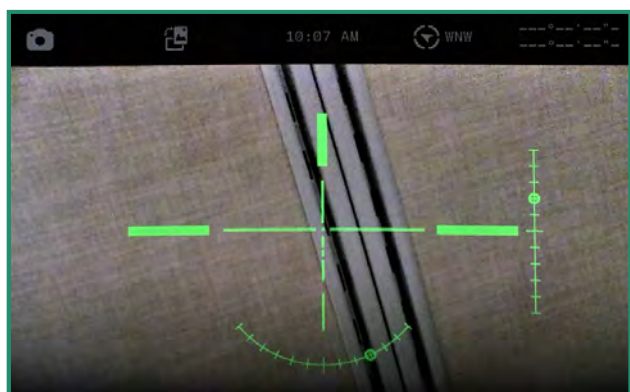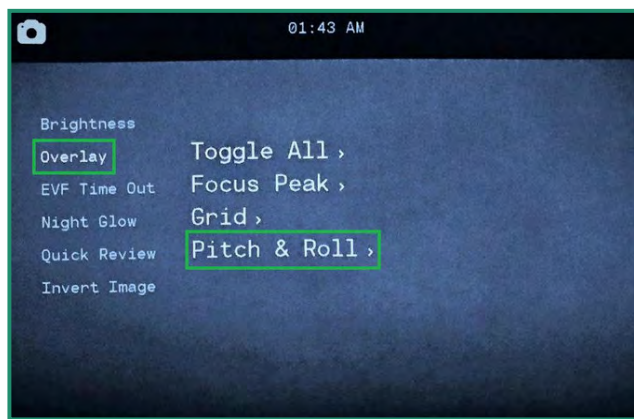

The Pitch & Roll feature will now be visible in the Viewfinder.




To level the camera, move until a pointer appears at the end of the vertical and horizontal bars.

Kapitel 2. Foton och videor

2.4.2.4 Toggle All (NOT AVAILABLE ON ALL CAMERAS)

The Toggle All option turns all three of the Overlay features on and off: Focus Peak, Grid and Pitch & Roll.

1. To turn the Toggle All option on, rotate the Settings Dial to Photo, Video, or Loop Mode.
2. Long press the SET button to access the menu.
3. Toggle down to Overlay and then right to select the Toggle All option.
4. Select All Off or All On and press SET.
5. Toggle left and press SET to exit.

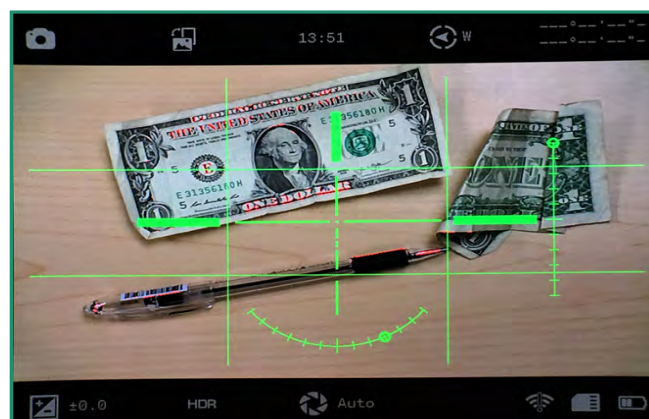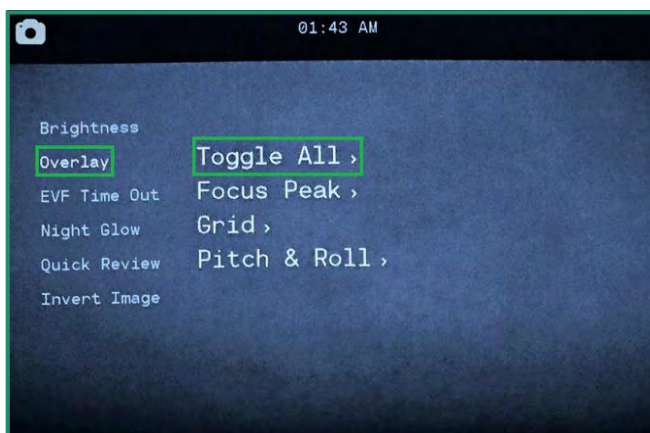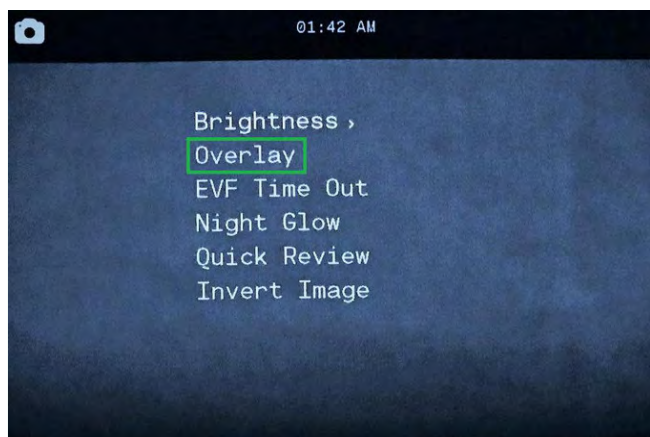

All the Overlay selections will be visible in the Viewfinder.



Obs: Alla funktioner förblir valda när kameran stängs av och sedan på igen.

2.4.3 EVF Time Out

You can set the Electronic Viewfinder (EVF) to turn off at certain time intervals. The camera will stay on, but the EVF will turn off after a time that you set. Setting the EVF Time Out option reduces your battery usage.

*The Electronic Viewfinder contains a proximity sensor (**NOT AVAILABLE ON ALL CAMERAS**) that automatically turns the Viewfinder on or off to save battery life. When the proximity sensor is blocked by your eye, it will turn the Viewfinder on.*

1. Turn the camera on by rotating the Settings Dial to Photo, Video, or Loop Mode.
2. Long press the SET button to access the menu.
3. Toggle down to EVF Time Out and toggle right to the Time Out options.
4. Toggle down to the option you want and press SET twice to select the Time Out and then exit.

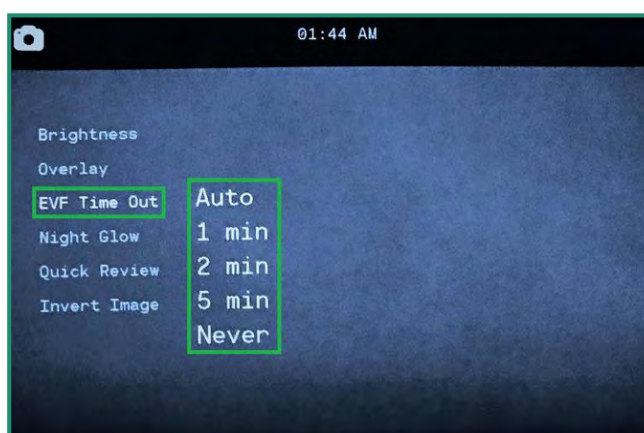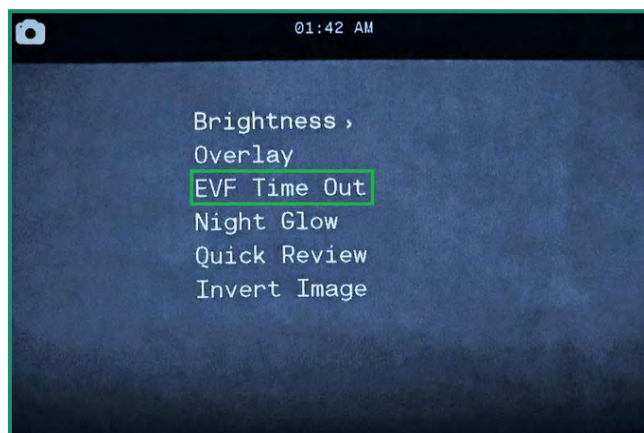

Note: The EVF setting does not appear in the Viewfinder.

Kapitel 2. Foton och videor

2.4.4 Night Glow

There are three settings in the Night Glow menu that you can use with Night Scene:

1. **Greyscale** – this setting adjusts the Viewfinder to shades of grey and it enables you to take photos or videos when there is no artificial light and barely any natural light. This can be helpful in hunting scenarios.
2. **Green** – since the human eye is more sensitive to green light, the Green setting removes the distraction that can occur with colors.
3. **Night Color** – this setting adjusts the Viewfinder to color during night scenarios. This setting is beneficial when sensing colors is important, such as when docking a boat at night.



1. To change the **Night Glow** settings, first turn the Scene Ring to **Night**.
2. Turn the camera on by rotating the Settings Dial to Photo, Video, or Loop Mode.
3. Long press the **SET** button to access the menu.
4. Select the option that best suits your scene and press **SET** and **SET** again to exit.

Note: The Night Glow setting doesn't appear in the Viewfinder.


2.4.5 Quick Review

The Quick Review feature enables you to review a photo immediately after you take it for either 1, 2, or 4 seconds. This feature only works in Photo Mode.

1. Turn the camera on by rotating the Settings Dial to Photo Mode. 
2. Long press the SET button to access the menu.



3. Toggle down to Quick Review and right to the options.
4. Toggle down to the option you want and press SET and SET again to exit.

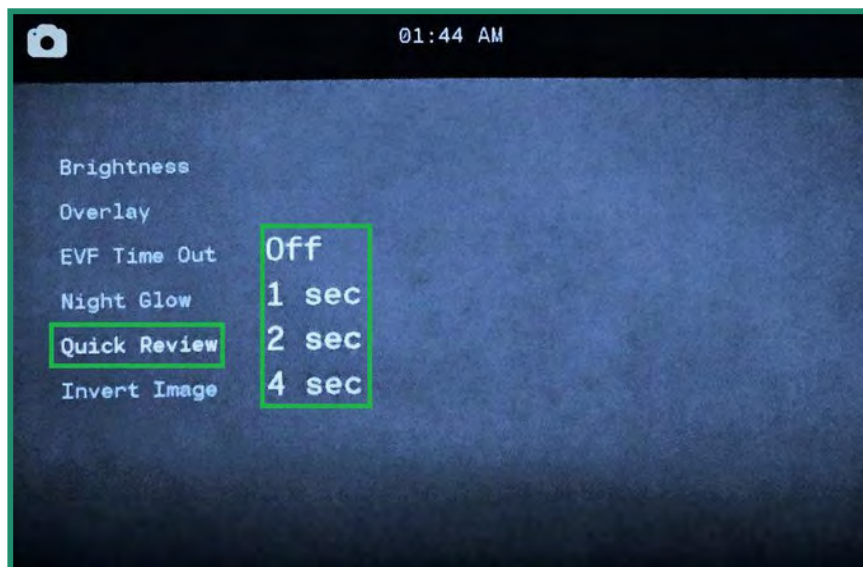


Kapitel 2. Foton och videor

2.4.6 Invert Image (menu)

The Invert Image (menu) feature allows you to read the menus when the camera is upside down.

1. Turn the camera on by rotating the Settings Dial to Photo, Video, or Loop Mode
2. Long press the SET button to access the menu.
3. Toggle down to Invert Image and toggle right to turn the option on. Press SET and SET again to exit.
4. The menu will now be inverted.

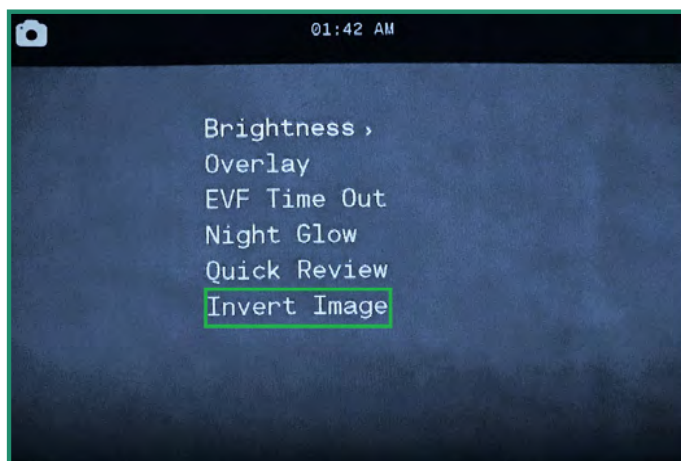


Obs: Alla funktioner förblir valda när kameran stängs av och sedan på igen.

2.5 Shooting Videos: Settings

2.5.1 EIS

Electronic Image Stabilization (EIS) uses electronic processing to stabilize video. If the EIS setting is turned on, it will minimize blurring and compensate for shaking of the camera.

1. Turn the camera on by rotating the Settings Dial to Video or Loop Mode.
2. Press SET to access the menu.
3. Toggle right on EIS to turn the option Off or On. Press SET to select and SET again to exit.
4. The EIS setting can be seen when you look through the Viewfinder.

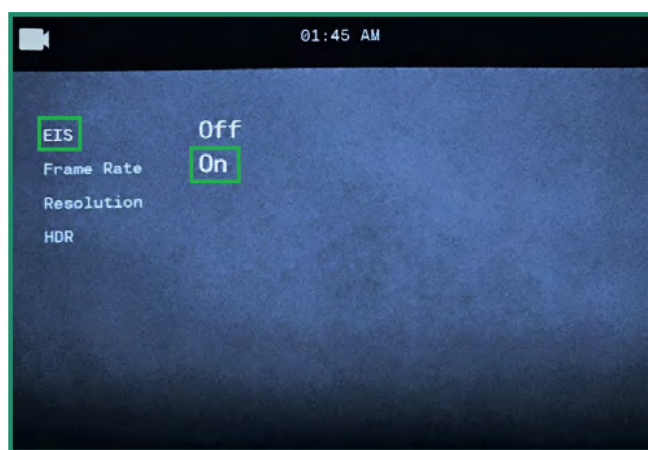


Kapitel 2. Foton och videor


2.5.2 Setting the Frame Rate

The frame rate is the speed at which the camera records video.

1. Turn the camera on by rotating the Settings Dial to Video or Loop Mode.
2. Press SET to access the menu.
3. Toggle to Frame Rate and right to the FPS options.
4. Choose a rate that best suits your scene. Press SET, and SET again to exit.

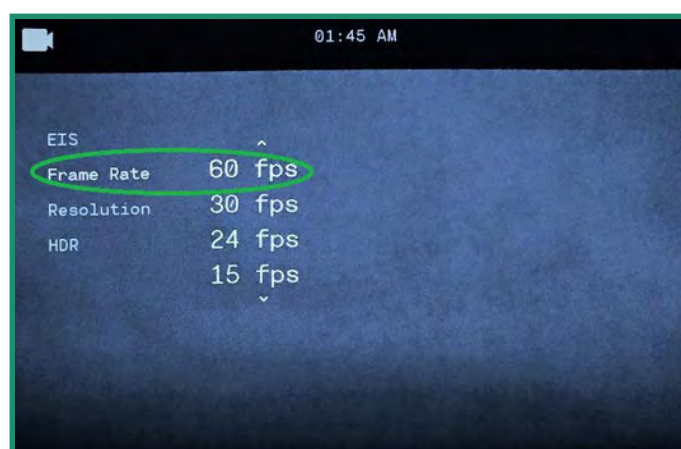

Note: 60 fps will generally produce a smooth looking video. You can set the frame rate from 60 fps to Slo Mo. The Frame Rate will be displayed at the bottom of the Viewfinder. For best results when using the Day setting on the Scene Ring, select 60 fps. With the Twilight or Night setting, select 30 fps or slower.

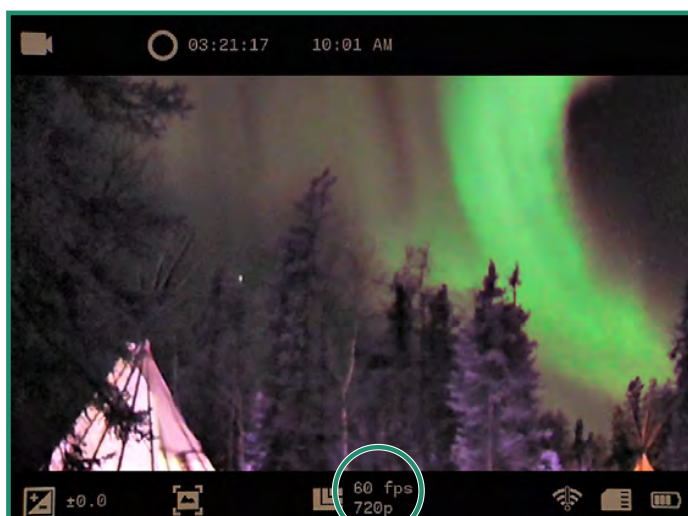


Kapitel 2. Foton och videor


2.5.3 Resolution

The camera has two video resolutions: 720p and 360p.

1. Turn the camera on by rotating the Settings Dial to Video or Loop Mode.  
2. Press SET to access the menu.
3. Toggle to Resolution and right to chose 720p or 360p. Press SET and SET again to exit.

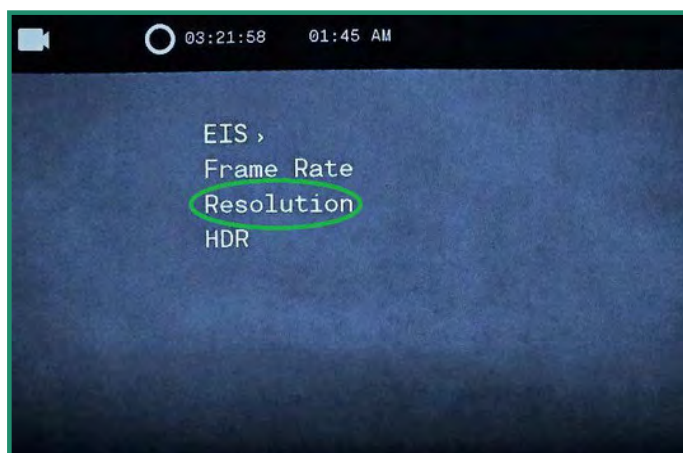

4. The Resolution will be visible at the bottom of the Viewfinder.

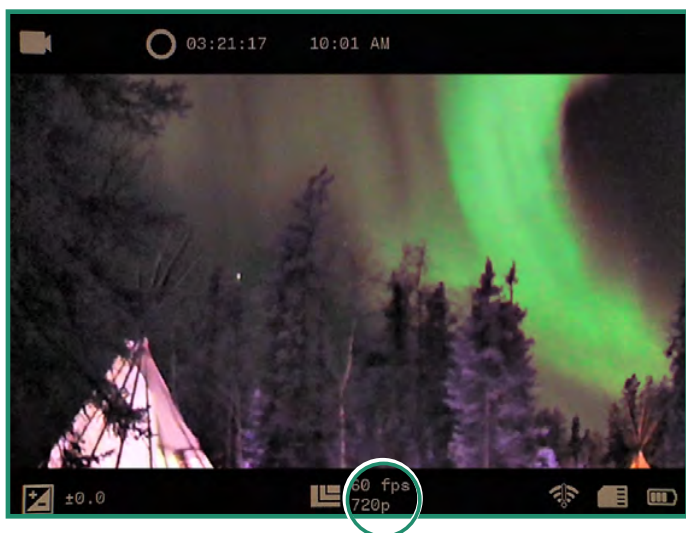


Obs: Alla funktioner förblir valda när kameran stängs av och sedan på igen.

Kapitel 2. Foton och videor


2.5.4 HDR

HDR (High Dynamic Range) is a technique that allows you to capture more detail from bright and dark areas.

1. Turn the camera on by rotating the Settings Dial to Video or Loop Mode. 
2. Press SET to access the menu.
3. Toggle to HDR and right to select On or Off. Press SET to select and SET again to exit.

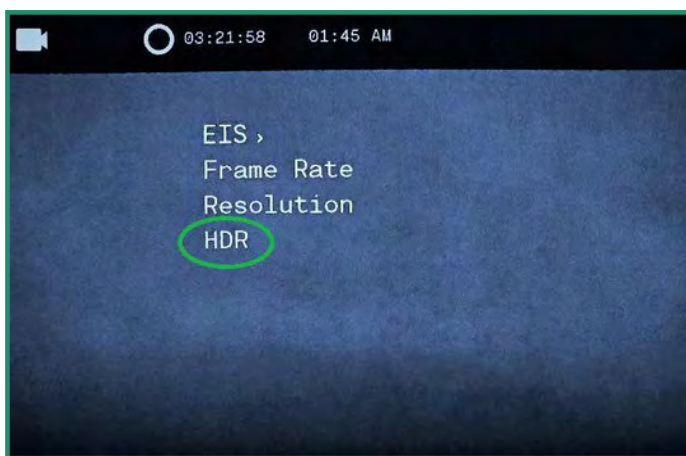

4. The HDR icon will be visible at the bottom of the Viewfinder.

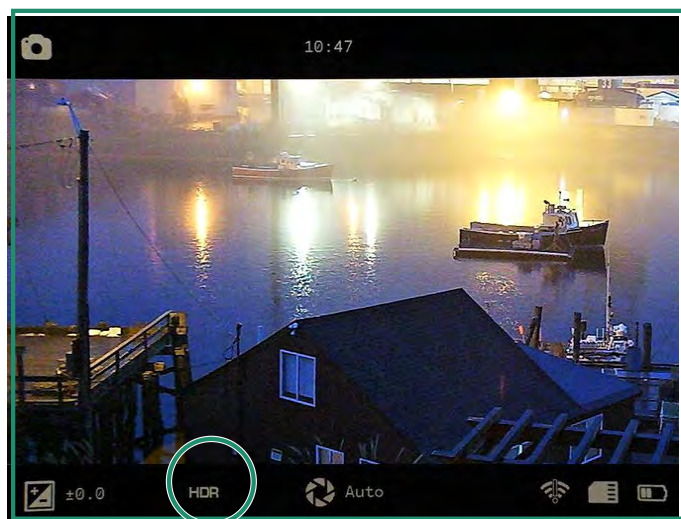


Kapitel 3. Loop Mode

Loop Mode enables you to capture video that's activated by a trigger. A trigger can either be the shutter button or a shock (**NOT AVAILABLE ON ALL CAMERAS**) to the camera.

3.1 Trigger Type

You can set the Trigger to be activated by the Shutter button or a sensor.

1. To set the Trigger Type, rotate the Settings Dial to Loop Mode.
2. Press SET to access the Loop menu.
3. Toggle right on Trigger Mode to select Shutter or Auto and Press SET to select and SET again to exit.
4. The Trigger settings will be visible in the Viewfinder.

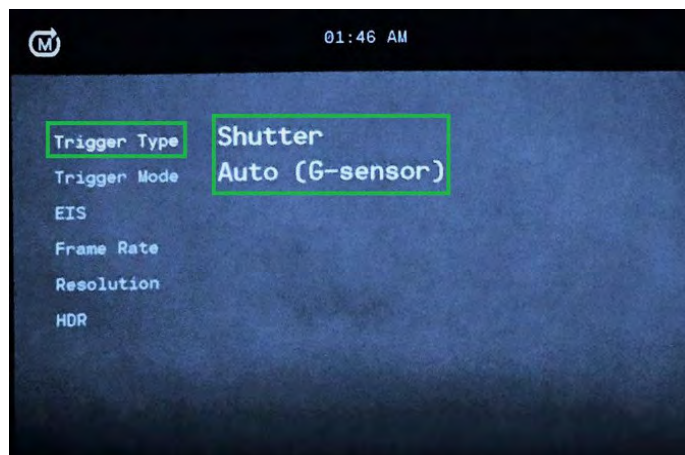

Obs: Alla funktioner förblir valda när kameran stängs av och sedan på igen.

Kapitel 3. Loop Mode


3.2 Trigger Mode

You can set the Trigger Mode to three different timing options:

- Before – records 30 seconds before the trigger
- Middle – records 15 seconds before and 15 seconds after the trigger
- After – records 30 seconds after the trigger



1. To set the Trigger Mode, rotate the Settings Dial to Loop Mode.
2. Press SET to access the menu.
3. Toggle right on Trigger Mode and press SET to select Mode and SET again to exit.
4. The Trigger Mode will be visible in upper left of the Viewfinder.


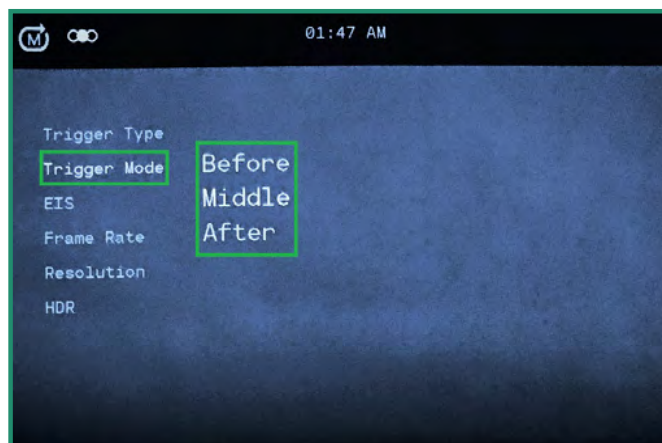


Kapitel 4. WIFI/Inställningsläge

4.1 About

The About option displays information about your camera.


1. Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu. 
2. The WiFi/Settings menu appears.
3. Toggle right on About to access the menu.

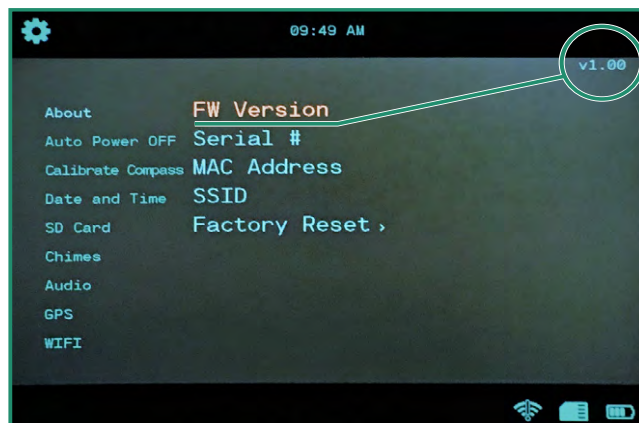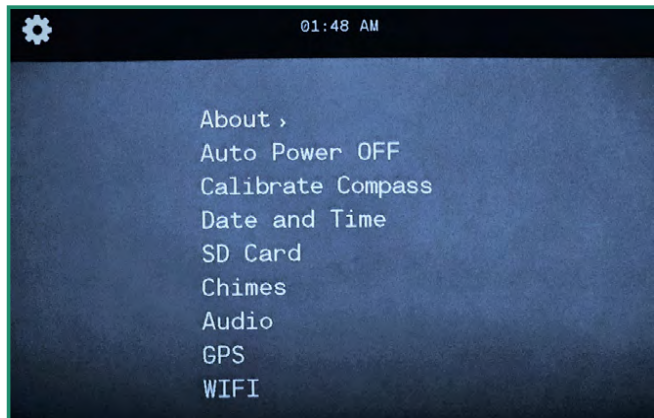

4.1.1 Factory Reset

Factory Reset returns the camera to its default settings.

1. Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu.
2. Toggle right on About and down to Factory Reset. Select 'Yes' to reset your camera.
3. When the Factory Reset is complete, you'll return to the previous menu. Press SET to exit the menu. Turn your camera off and back on again to complete the Factory Reset.

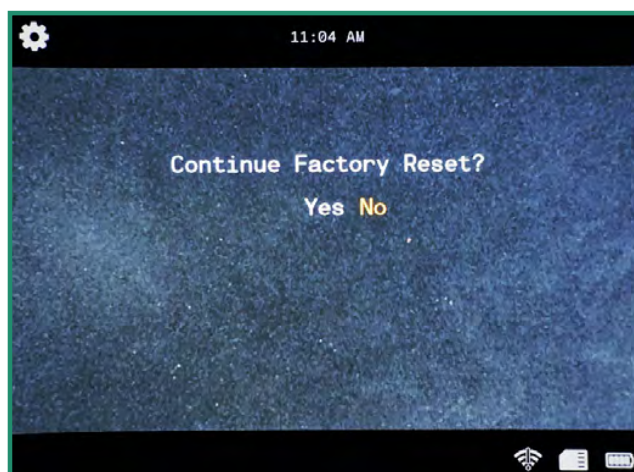


Note: To exit out of the WiFi/Settings menu, simply rotate the Settings Dial to another Mode.

Kapitel 4. WIFI/Inställningsläge

4.2 Auto Power OFF

The Auto Power OFF option turns the camera off automatically at time frames of Never, 5 minutes, 10 minutes, or 20 minutes. The default setting is Never.



1. Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu.
2. Toggle down to Auto Power OFF and right to the Power Off options.
3. Toggle down to the option that best suits your camera use and press SET.
4. Turn the Settings Dial to another Mode to exit the menu.

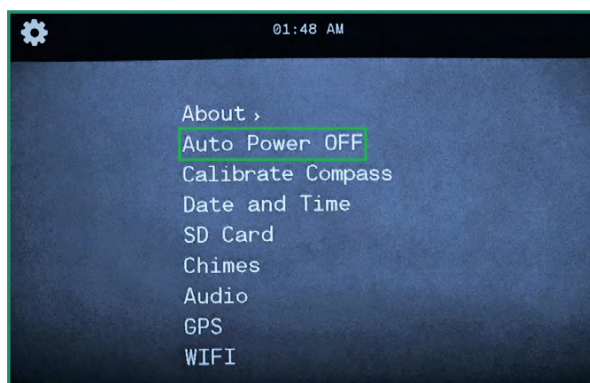

4.3 Compass (NOT AVAILABLE ON ALL CAMERAS)

The camera has an electronic compass that is calibrated at the factory. If you feel that your compass is directionally off you can recalibrate it manually.

1. Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu.
2. Toggle down to Calibrate Compass and right to access the animated instructions.
3. If you've calibrated correctly, you will see this message: "Compass Calibration Successful."

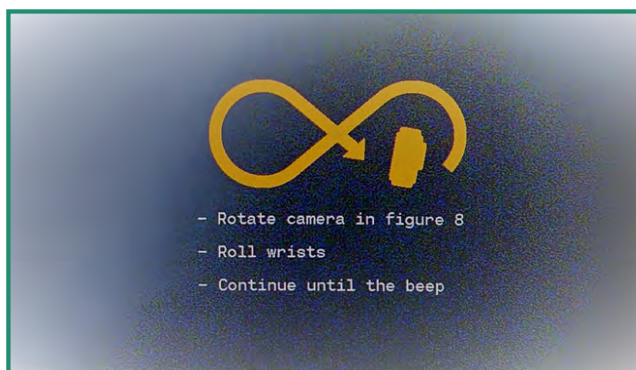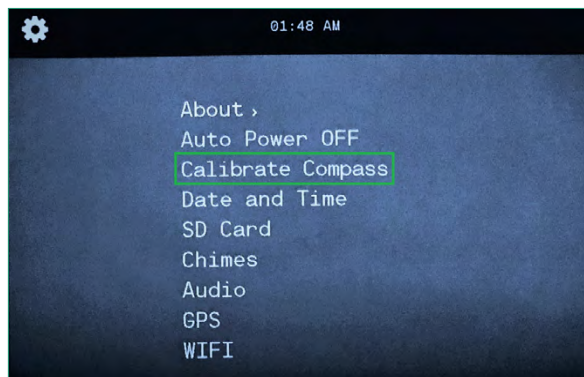

If the compass fails to calibrate, you'll hear a boing sound and see a message that says: "Retry compass calibration."

Kapitel 4. WIFI/Inställningsläge

4.4 Date and Time


To set the date and time, see “Section 1.5 Setting the Date and Time”.

You can also set the date and time and change the format under GPS Set.

4.4.1 GPS Set (NOT AVAILABLE ON ALL CAMERAS)

You can have the GPS set the time.

1. Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu.
2. Toggle down to Date and Time and right to GPS Set and right again to options.
3. Toggle right on Time Zone and press SET to select your Time Zone.
4. Toggle left twice to exit the menu.
5. If you want to set the Daylight Savings Time to on, toggle down to DST and right to On and press SET.
6. Toggle left twice to exit the sub-menus.

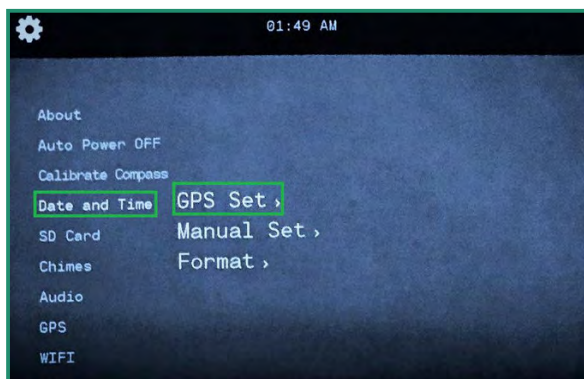





Kapitel 4. WIFI/Inställningsläge

4.4.2 Format

You can change the format of the date and time.





- Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu.
- Toggle down to Date and Time and toggle right to Format.
- Toggle right again to Date Format and press SET.
- The selectable options are at the top of the screen. The default Date Format is month-date-year. To change the format, toggle up and down and the format will change.
- Toggle down to Time Format and toggle right. The selectable options are at the top of the screen. The default Time Format is 12 hour. To change to 24 hour, toggle up and press SET.
- Select the option you want and press SET

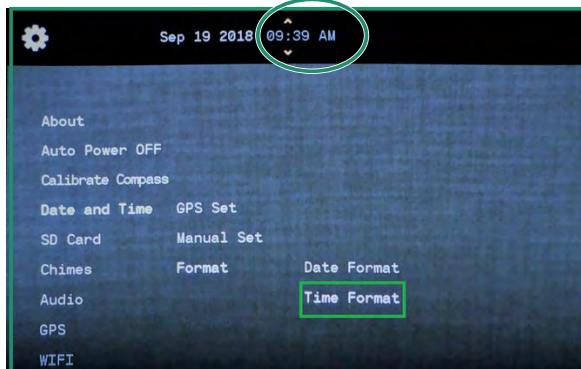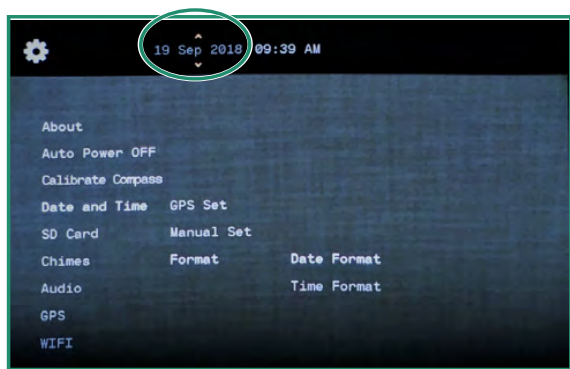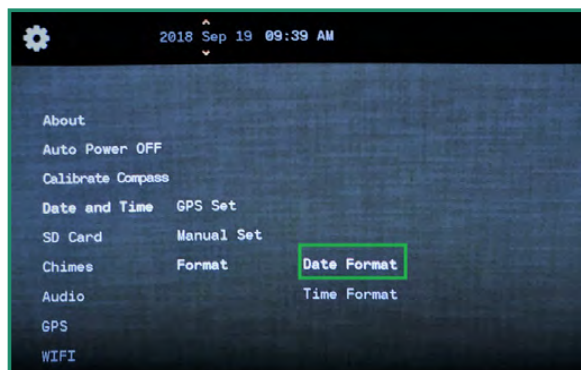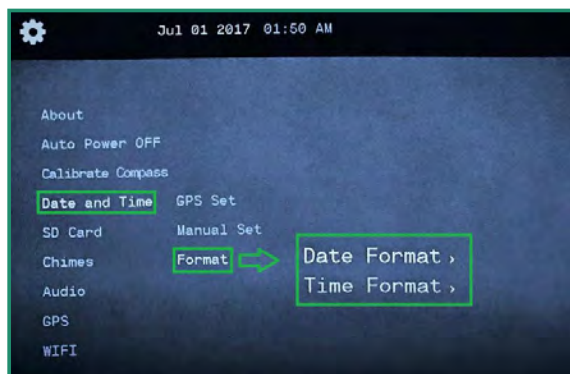

4.5 SD Card

If your SD card becomes corrupt, you can format it through the camera.

1. Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu.
2. Toggle down to SD Card and right twice to Format.
3. Toggle to Yes and press SET.

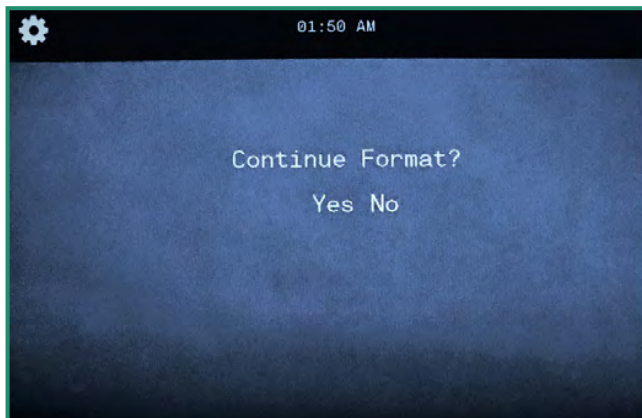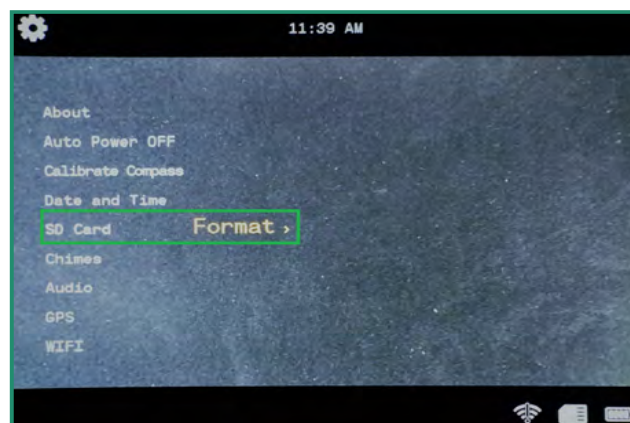

Note: If you don't want to format the SD Card, select No and press SET and toggle left to the main menu.




CAUTION

Formatting your SD card will erase all of the card data!


4.6 Chimes

The camera plays chimes for different functions and when you turn the camera on and off.

1. Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu. 

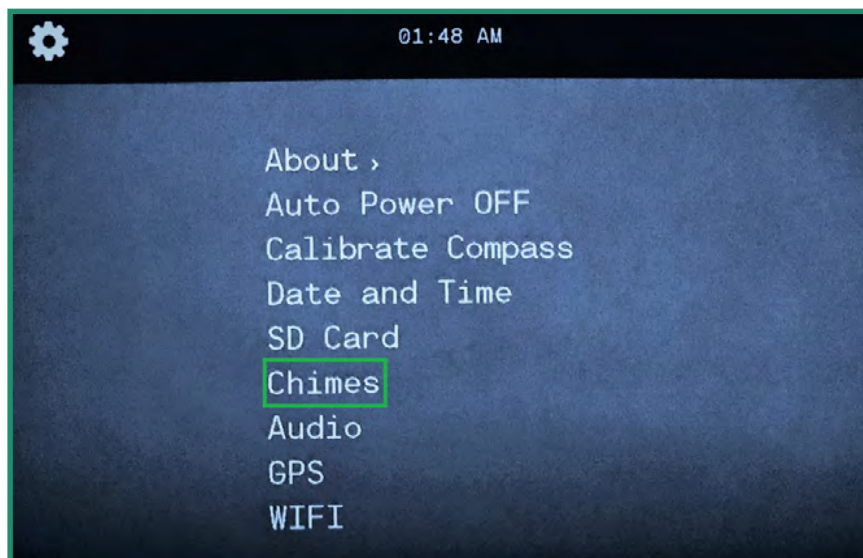

2. Toggle down to Chimes and right to turn Chimes Off or On.

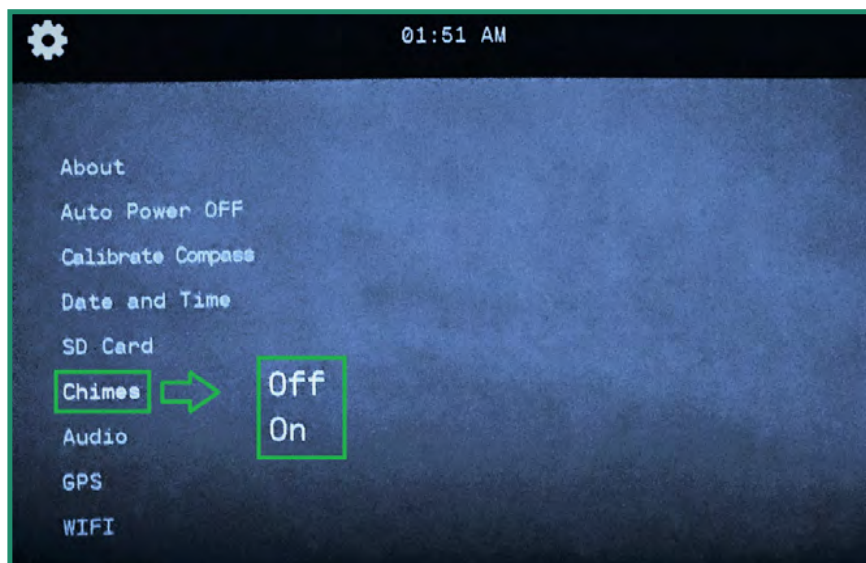


3. Choose Off or On and press SET.


4.7 Audio

The playback audio in a video can be set to Off, High, Medium or Low.

1. Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu. 

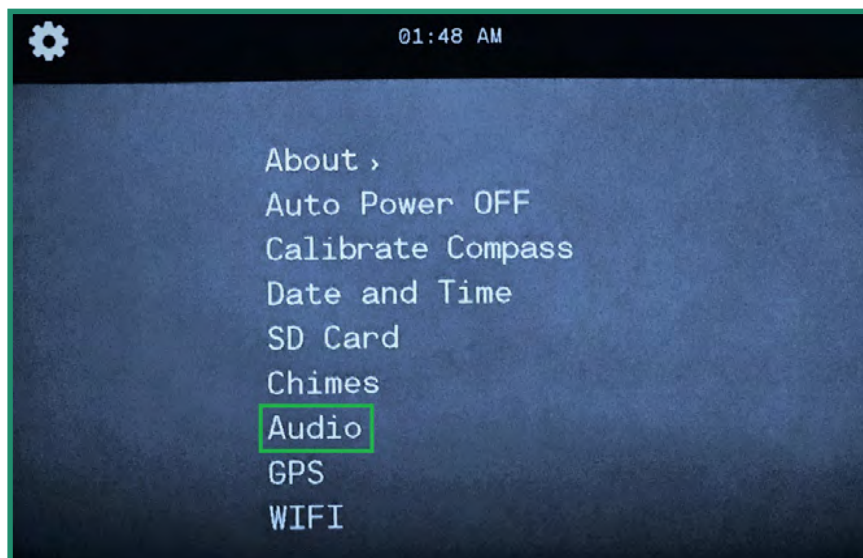

2. Toggle down to Audio and right to the volume options.

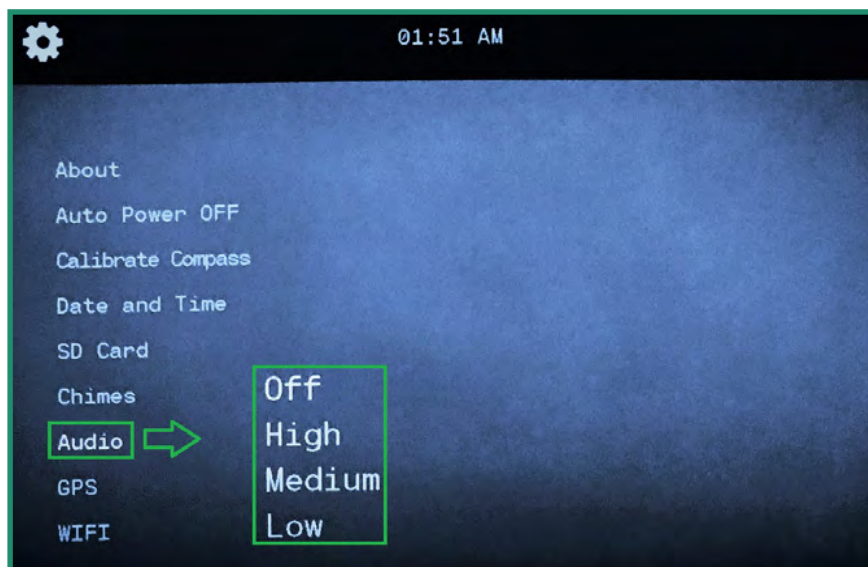

3. Select the volume option you prefer and press SET.




Kapitel 4. WIFI/Inställningsläge

4.8 GPS (NOT AVAILABLE ON ALL CAMERAS)

The camera GPS displays your exact longitude and latitude. GPS coordinates are visible in the Viewfinder when in Photo, Video, or Loop Mode.

4.8.1 Turning GPS On

1. Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu.
2. Toggle down to GPS and right to the GPS menu.
3. Toggle down to On and press SET.
4. Turn the camera to either the Photo, Video, or Loop Mode and go outside to receive a signal.
5. GPS coordinates are in the upper right corner of the menu.


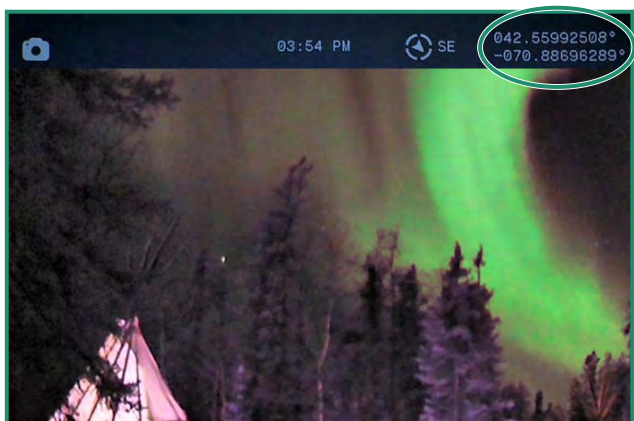
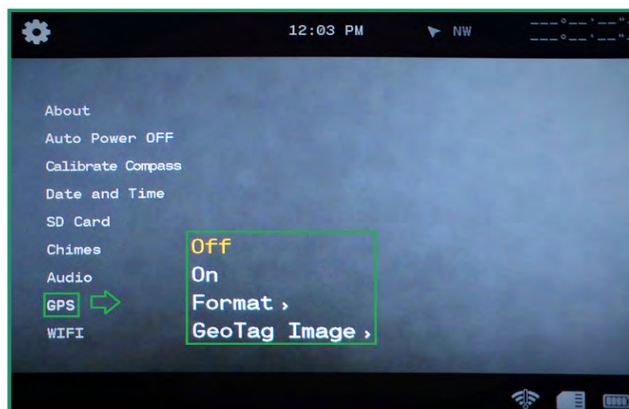
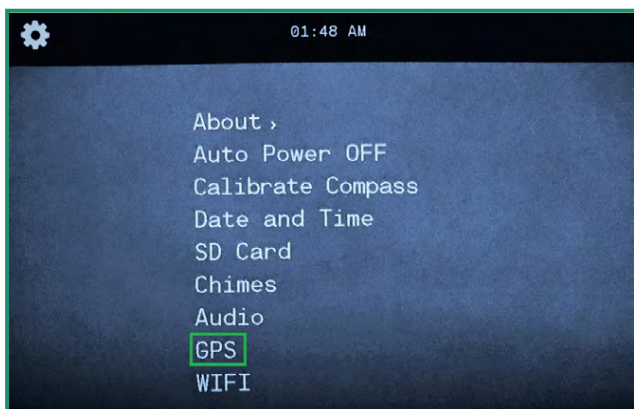


Kapitel 4. WIFI/Inställningsläge

4.8.2 Changing the GPS Format

You can change the GPS format from degrees/minutes/seconds to decimals.

1. Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu.
2. Toggle down to GPS and right to the menu.
3. Toggle down to Format and right to the Format options.
4. Select an option and press SET.
5. Toggle left to exit the GPS menu.
6. Turn the camera to either the Photo, Video, or Loop Mode and go outside to receive a signal.

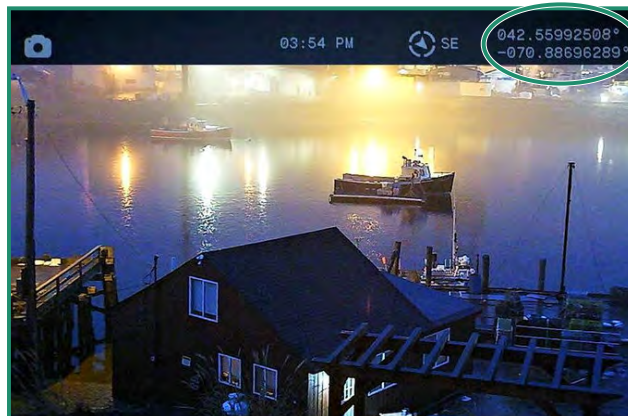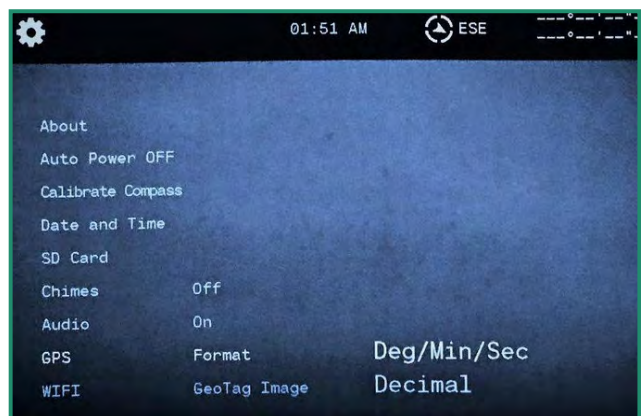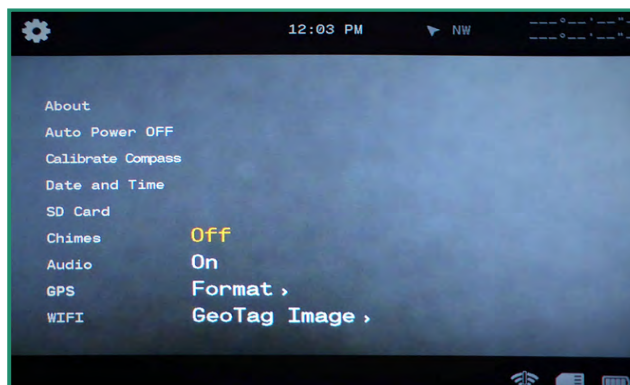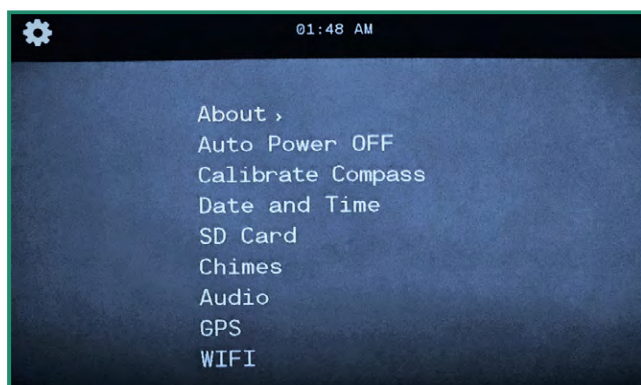




Note: GPS only works when you're outside and requires 1-2 minutes for the camera to receive an initial location. GPS consumes power and should be turned off to extend battery life when not in use.

Kapitel 4. WIFI/Inställningsläge

4.8.3 GeoTag Image (NOT AVAILABLE ON ALL CAMERAS)

The GeoTag Image writes GPS meta-data to both photos and videos. For photos, the metadata can be viewed with third party EXIF viewers and some versions of Windows® by right-clicking on the photo, selecting properties and then details.

1. Turn the camera on by rotating the Settings Dial to WiFi/Settings Mode to access the menu.
2. Toggle down to GPS and right to the GPS menu.
3. Toggle down to GeoTag Image and right to the Off or On option. Press SET to select.
4. Toggle left to exit the GPS menu.

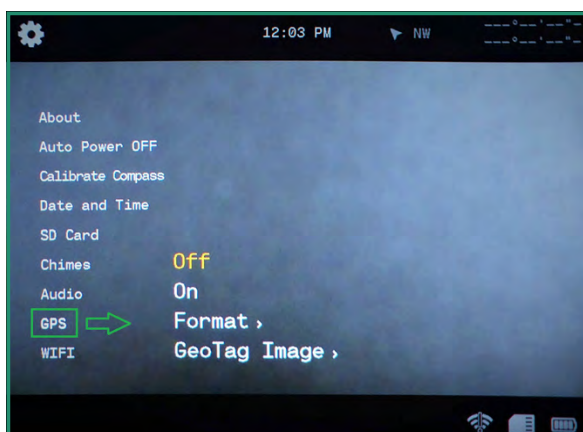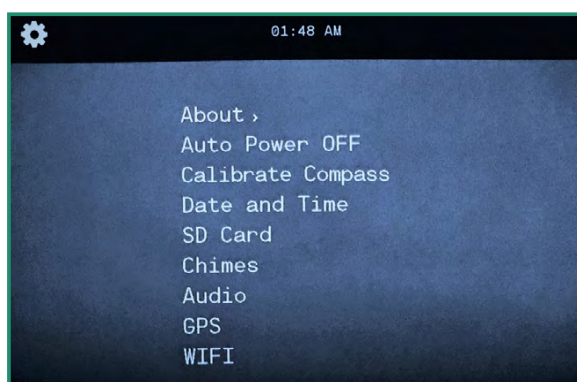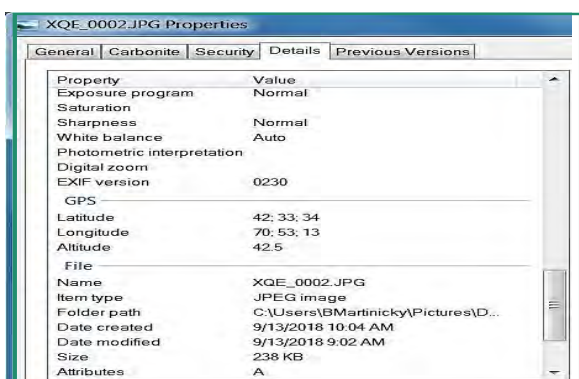

4.9 WIFI

To learn more about WiFi, see ["Section 1.6 Downloading the App."](#)

Kapitel 5. Referensinformation

5.1 Battery

5.1.1 Operating Temperature Range

- The operating temperature range of the Aurora camera is:
14 °F – 104 °F (-10 °C – 40 °C) at 90% relative humidity.

5.1.2 Tips on Reducing Battery Usage

To save your battery's power, follow these tips:

- Turn the camera off whenever you're not using it.
- Turn off WiFi, GPS, EIS, audio and chimes.
- Reduce the brightness of the Viewfinder.
- Enable the Auto Power Off feature. See "[Section 4.2 Auto Power OFF](#)".

5.1.3 Battery Storage and Handling

Here are some tips for storing and handling the battery.

-Avoid exposing your camera to very cold or very hot temperatures. Low or high temperature conditions may shorten the battery life.

-Keep the battery away from heat and fire. Do not dry the camera or battery with an external heat source such as a microwave oven or hair dryer.

-Do not store your battery with metal objects, such as coins, keys or necklaces. If the battery terminals come in contact with metal objects, this may cause a fire.

-Do not make any alterations to the camera. Do not use unauthorized chargers. Doing so may compromise safety, regulatory compliance, performance, and may void the warranty.

WARNING

Do not drop, disassemble, open, crush, bend, deform, puncture, shred, microwave, incinerate or paint the camera or battery. Do not insert foreign objects into the battery opening on the camera. If the battery doesn't fit, please check the battery's orientation and do not force it into the battery opening.

Do not use the camera or the battery if it has been damaged – for example, if cracked, punctured or harmed by water. Stop using the battery if there are noticeable abnormalities such as abnormal smell, heat, deformities or discoloration. Disassembling or puncturing the battery can cause an explosion or fire.

5.1.4 Battery Disposal

Many localities have laws in place requiring battery recycling. To safely dispose of lithium-ion batteries, protect terminals from exposure to other metal. Lithium-ion batteries contain recyclable materials and are accepted for recycling by the rechargeable battery recycling coloration's (RBRC) battery recycling program.

Visit call2recycle at call2recycle.org or call 1-800-BATTERY in North America to find a convenient recycling location. ***Never dispose of a battery in a fire because it may explode.***

- Only use manufacturer-recommended replacement batteries for your camera.
- Keep the battery away from infants and children under 5 years old.
- Make sure to supervise children and instruct them on the proper use and care of the battery.

Kapitel 5. Referensinformation

5.2 Camera Specifications

Sensor	Ultra Low-Light CMOS
Night Vision	Moonless starlight capable
Display	Color or monochrome
Lens	16mm; f/1.4 (Night), f/2.0 (Twilight), f/5.6 (Day) selectable
Video	360p/720p • .MOV
FPS	7.5, 15, 24, 30, 60
Photo	.9 MP images
Shutter Speeds	1.5 sec, 1 sec, 1/.2 sec, 1/4 sec, 1/7.5 sec, 1/15 sec, 1/30 sec, 1/60 sec, 1/120 sec, 1/240 sec, 1/480 sec, 1/1000 sec, 1/2000 sec, 1/4000 sec, 1/8000 sec
IMU	GPS, Accelerometer, Compass (NOT AVAILABLE ON ALL CAMERAS)
Connectivity	WiFi, USB 2.0
Storage	Micro SD 4-32 GB (not included)
Viewfinder	Micro OLED display
Water-Resistant	Water-Resistant IP67
Lithium-ion Battery	Rechargeable 2h continuous
Apps	iOS, Android

Water Resistant

Aurora is splash, water, and dust resistant and is tested under controlled laboratory conditions with a rating of IP67 under IEC standard 60529. Aurora is water resistant to 3 feet for 30 minutes.

If your Aurora is wet or has recently been in water, be sure to dry it off thoroughly before removing the Viewfinder to prevent any water from entering the body of the camera.

5.3 SIONYX Customer Care

To reach SIONYX Customer Care, contact us at the following:

<https://support.sionyx.com/support/home>

support@sionyx.com

Kapitel 6. Felsökning

If an error occurs when using the camera, a message will display in the Viewfinder and a red LED will flash on the side of the camera.

Error	Issue	How to Fix
<u>Camera Overheating</u>	If the temperature of the camera reaches 104 °F (40 °C) it will shut down automatically.	Camera will work when temperature reaches operating range.
<u>Low Battery</u>	The battery is not sufficiently charged to run the camera.	Charge the battery.
<u>No SD Card Inserted</u>	SD card is not inserted	Remove message by pressing the SET button. Install an SD Card.
<u>Unformatted SD Card</u>	SD Card is unformatted.	Format SD Card.
<u>SD Card Error</u>	When SD card is not recognized.	If SD Card is above 32 GB card will not work. Install 32 GB SD card. (PRO = 256GB)
<u>SD Card is full</u>	When there is no space left on SD Card.	Replace with new SD Card or delete images from current SD Card.
<u>Please set date and time</u>	Out-of-box or after firmware update.	Remove message by pressing the SET button. Set date and time.
<u>WiFi connection lost</u>	When the WiFi connection is lost.	Shows message until WiFi is reestablished or Mode on Settings Dial is changed.
<u>WiFi connection not found</u>	When the WiFi connection is not found.	Shows message until WiFi is established or Mode on Settings Dial is changed.
<u>Swing range error</u>	When Panorama mode is on and swing direction is wrong or movement is too fast.	Message will disappear automatically. Repeat Panorama process.
<u>No Satellites</u>	When the GPS cannot find a satellite signal for 5 minutes after being set to On.	Camera needs to be outdoors with a clear view of the sky.
<u>No Photo</u>	In Playback mode when there is no image to display.	In Playback mode there are no photos to display on SD Card. Turn Settings Dial to another Mode.

7.1 SiOnyx Aurora Return / Exchange Limited Warranty Policy

7.1.1 What's Covered by This Limited Warranty

SIONYX, LLC ("SIONYX" or "we") warrants to the original end-user purchaser ("you") the SIONYX-branded product and accessories contained in the original packaging ("SIONYX Product"), including battery, neck strap, protective bag, and USB cable, against defects in materials and workmanship when used normally in accordance with SIONYX's published guidelines for a period of **ONE (1) YEAR from the date of original retail purchase by the end-user purchaser** ("Warranty Period").

SIONYX's published guidelines include, but are not limited to, information contained in technical specifications, user manuals, and service communications.

This limited warranty is only valid and enforceable in the country where the SIONYX Product was purchased, provided that said country is on the list of specified countries in which we sell the Aurora camera.

If the SIONYX Product fails within the Warranty Period we will, within a commercially reasonable time, free of charge, either repair or replace it as described below.

7.1.2 What's Not Covered by This Limited Warranty

This limited warranty does not apply to any non-SIONYX branded hardware products or any software, even if packaged or sold with SIONYX hardware. Manufacturers, suppliers, or publishers, other than SIONYX, may provide their own warranties to you – please contact them for further information.

Software distributed by SIONYX with or without the SIONYX brand (including, but not limited to, system software) is not covered by this limited warranty. Please refer to the licensing agreement accompanying the software for details of your rights with respect to its use. SIONYX does not warrant that the operation of the SIONYX Product will be uninterrupted or error-free. SIONYX is not responsible for damage arising from failure to follow instructions relating to the SIONYX Product's use.

This limited warranty does not apply:

(a) to consumable parts, such as batteries or protective coatings that are designed to diminish over time, unless failure has occurred due to a defect in materials or workmanship; (b) to cosmetic damage, including but not limited to scratches (including to lenses), dents, and broken plastic on ports; (c) to damage caused by use with another product; (d) to damage caused

by accident, abuse, misuse, tampering, liquid (beyond IP67 certification), grit, impact, fire, lack of proper care or maintenance, earthquake, or other external cause; (e) to damage caused by operating the SIONYX Product outside SIONYX's published guidelines; (f) to damage caused by use of unauthorized parts or by service (including upgrades and expansions) performed by anyone who is not a representative of SIONYX or a SIONYX Authorized Service Provider ("SASP"); (g) to a SIONYX Product that has been modified to alter functionality or capability without the written permission of SIONYX; (h) to defects caused by normal wear and tear or otherwise due to the normal aging of the SIONYX Product; or (i) if any serial number has been removed or defaced from the SIONYX Product.

7.1.3 What Are Your Remedies Under this Limited Warranty?

All warranty claims will require an RMA number. To discuss a warranty claim and acquire an RMA number, please contact support@SIONYX.com. You will be required to furnish a sales receipt/proof of purchase indicating date of purchase, amount paid and place of purchase.

If a claim is received within the Warranty Period and the SIONYX Product is found to have failed based on a phone evaluation by SIONYX Aurora Customer Care we will, at our option:

- repair the camera or accessory, or
- exchange the camera or accessory with a product that is new, or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product, or
- exchange the camera or accessory with a product that is a new and upgraded model which has at least equivalent or upgraded function to the original product.

As far as applicable laws permit, the Warranty Period will not be extended or renewed or otherwise affected due to subsequent exchange, resale, repair, or replacement of the camera or accessory. However, part(s) repaired or replaced during the Warranty Period will be warranted for the remainder of the original Warranty Period or for ninety (90 days from the date of repair or replacement, whichever is longer.

7.1.4 Warranty Limitations Subject to Consumer Law

To the extent permitted by law, this limited warranty and the remedies set forth are exclusive and in lieu of all other warranties, remedies, and conditions, whether oral, written, statutory, express, or implied and represent our entire liability for any breach of this limited warranty.

Except as provided in this limited warranty and to the maximum extent permitted by law, we are not responsible for any consequential, incidental, special or punitive damages or losses, whether direct or indirect, resulting from the use of this product, or arising out of any breach of this limited warranty.

SIONYX disclaims all statutory and implied warranties, including without limitation, warranties of merchantability and fitness for a particular purpose and warranties against hidden or latent defects, to the extent permitted by law. In so far as such warranties cannot be disclaimed, SIONYX limits the duration and remedies of such warranties to the duration of this express limited warranty and, at SIONYX's option, the repair or replacement services described above.

Some states (countries or provinces) do not allow limitations on how long an implied warranty (or condition) may last, or the exclusion or limitation of incidental or consequential damages, so the limitations described above may not apply to you.

This Warranty gives you specific legal rights, and you may have other rights that vary from state to state (or by country or province). Other than as permitted by law, SIONYX does not exclude, limit, or suspend other rights you may have, including those that may arise from the nonconformity of a sales contract.

For a full understanding of your rights you should consult the laws of your country, province, or state.

7.1.5 Returning Products

You may return merchandise for a refund of the product price, or exchange, if the return is made within 14 days of receipt of the item. Refunds will exclude any return shipping charges and a 15% restocking fee. You are responsible for all shipping charges for return shipping, except for out of box failures deemed failures by SIONYX Customer Care.

All returns will require an RMA number. To discuss a return and acquire an RMA number, please contact support@SIONYX.com.

All orders must be inspected by customers within 30 days of the date of purchase. After this time, SIONYX will not be responsible for items damaged in shipping, lost, or any other issues not related to technical support.

Returned or exchanged products must be in brand-new, mint condition. Items must be in the original, undamaged manufacturer product packaging with all parts and paperwork, including instruction booklets and packing inserts.

Please do not place stickers or shipping labels on the original manufacturer's product package.

We will **not accept** C.O.D. shipments or products without an RMA number. Products shipped to our facility without an RMA number will be disposed of. There will be no question or other recourse regarding this process.

Please allow up to 10 (ten) business days (from the time we receive the return) for your exchange or return to be processed.

Return address will be provided to you by SIONYX Customer Care when you contact for an RMA number.

Questions? Please contact support@SIONYX.com.

Aurora Customer Care - <https://support.SIONYX.com/support/home>

SIMPLIFIED DECLARATION OF CONFORMITY

Hereby, SIONYX, LLC, declares that the equipment supplied is in compliance with:

Radio Equipment (RE) Directive (2014/53/EU)

RoHS Directive 2011/65/EU

The full text of the EU declaration of conformity is available at <https://support.SIONYX.com/support/solutions/articles/61000285264-where-can-i-find-your-declaration-of-conformity-for-aurora->