

SIONYX

**AURORA AMAKHAMERA
OCHUNGEGHUNG**

Imaniwali yosebenzisayo



SIONYX, LLC

100 Cummings Center, Suite 303B

Beverly, MA 01915

U.S.A.

(978) 922-0684

support@SIONYX.com

Silandele kuFacebook

@SiOnyxNightVision



SiOnyx, LLC

AURORA

4.2/3.6DC $\approx$ 0.72/0.84A



T D180006007

MADE IN INDONESIA

Pat.: sionyx.com/patents

Contains FCC ID:2AOI7-CDV18A

Contains IC:23556-CDV18A



Okuqukethwe

Isahluko 1. Ukuqalisa	6
1.1 Eqaqa lbhokisi	6
1.2 Ukushaja lbhethri	6
1.2.1 Ikipha lbhethri.....	9
1.2.2 Ukubuka Ukushajwa Kwebhethri.....	10
1.3 Ukubuka Amamodi Ekhamera kanye Nezilungiselelo.....	10
1.3.1 Ukubuka konke kwenkinobho.....	11
1.3.2 Ukudayela izilungiselelo.....	11
1.3.3 Isitholi sokubuka.....	12
1.3.4 Indandatho yesigcawu.....	12
1.3.5 Indandatho Egxilile.....	13
1.4 Ukufaka i-Micro SD Card.....	13
1.5 Ukusetha Idethi nesikhathi.....	15
1.6 Ilanda i-Mobile App.....	18
Isahluko 2. Izithombe namavidiyo.....	22
2.1 Ukuthatha isithombe nokushutha ividiyo	22
2.1.1 Ukuthatha Isithombe	22
2.1.2 Ukushutha Ividiyo.....	26
2.1.3 Ukulungisa Ukugxila.....	27
2.1.4 Ukusondeza Nangaphandle.....	28
2.1.5 Ukusetha Isinxephezelo Sokuvezwa	28
2.1.6 Ukusebenzisa indandatho yesigcawu.....	29
2.2 Ukubuka kanye nokususa Izithombe namavidiyo.....	29
2.2.1 Ukubuka kanye nokusondeza izithombe namavidiyo.....	30
2.2.2 Ukubuka Izithonjana Zezithombe Namavidiyo	30
2.2.3 Idlala amavidiyo	32
2.2.4 Isusa Izithombe namavidiyo.....	32
2.2.5 Isusa Izithombe Namavidiyo Amaningi.....	34
2.3 Ukudubula Izithombe: Izilungiselelo	35
2.3.1 Isivinini seShutter.....	35
2.3.2 Ukuqhuma.....	38
2.3.3 HDR.....	40

2.3.4	Isibali Sikhathi	42
2.3.5	Iphanorama.....	44
2.3.6	Isikhathi Seqile.....	45
2.4	Ukuthwebula Izithombe Namavidiyo: Izilungiselelo Ezithuthukile.....	48
2.4.1	Ukukhanya.....	48
2.4.2	Imbondela.....	50
2.4.3	Isikhathi Sokuphuma kwe-EVF	58
2.4.4	Ukukhanya Kwasebusuku.....	60
2.4.5	Ukubuyekeza Ngokushesha.....	62
2.4.6	Guqula isithombe(imenyu).....	63
2.5	Amavidiyo Okuthwebula: Izilungiselelo.....	64
2.5.1	EIS.....	64
2.5.2	Ukusetha Izinga lozimele	66
2.5.3	Isixazululo	68
2.5.4	HDR.....	70

Isahluko 3. Iluphu Imodi..... 72

3.1	Qalisa Uhlobo.....	72
3.2	Qalisa Imodi	74

Isahluko 4. Imodi ye-WIFI/Izilungiselelo..... 76

4.1	Mayelana.....	76
4.1.1	Ukusetha Kabusha Kwasefekthri	77
4.2	Amandla Azenzakalelayo AVALWE.....	78
4.3	Ikhampasi.....	79
4.4	Idethi Nesikhathi	80
4.4.1	Isethi ye-GPS	80
4.4.2	Ifomethi.....	83
4.5	Ikhadi le-microSD.....	85
4.6	Ama-Chimes.....	87
4.7	Okulalelwayo.....	88
4.8	GPS	89
4.8.1	Ivula i-GPS.....	89
4.8.2	Ukushintsha ifomethi ye-GPS.....	90
4.8.3	Isithombe se-GeoTag	93
4.9	WIFI	94

Isahluko 5. Ulwazi Oluyisethenjwa.....	95
5.1 Ibhethri.....	95
5.1.1 Isebenza Izinga lokushisa Ibanga	95
5.1.2 Amathiphu Okunciphisa Ukusetshenziswa Kwebhethri.....	95
5.1.3 Isitoreji Sebhethri Nokuphatha.....	95
5.1.4 Ukulahlwa kwebhethri.....	95
5.2 Imininingwane Yekhamera.....	96
5.3 SIONYX Ikhasimende Ukunakekela.....	97
Isahluko 6. Ukuxazulula Izinkinga.....	98
Isahluko 7. Iwaranti.....	99

Isahluko 1. Ukuqalisa

Siyakuhhalalisela ngokuthenga ikhamera yakho entsha ye-SIONYX Aurora Night Vision! Ake siqale!

1.2 Ukushaja ibhethri

Into yokuqala okudingeka uyenze ngemva kokukhipha ikhamera ukushaja ibhethri. Ushaja ibhethri ngembobo ye-USB.

Ukushaja ibhethri:

1. Qiniseka ukuthi ikhamera ikwimodi IVALIWE.



Isahluko 1. Ukuqalisa

2. Khipha i-Viewfinder ngokudonsela phansi inkinobho ethi Khipha i-Viewfinder.



3. Donsa i-Viewfinder uqonde ngqo.



4. Shelelezisa ibhethri endaweni yebhethri.




Isahluko 1. Ukuqalisa

5. Faka ikhebula le-Micro USB embotsheni ye-USB yekhamera.



6. Xhuma ikhamera ku-PC enamandla usebenzisa ikhebula le-Micro USB elihlinzekiwe.

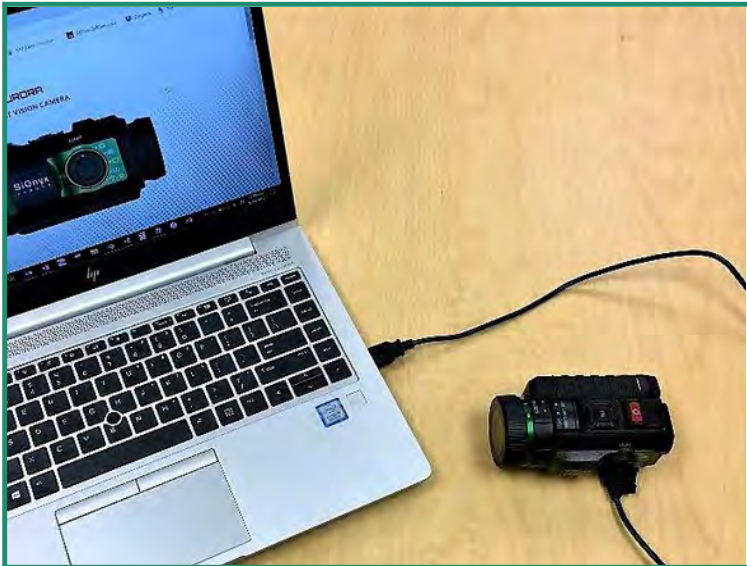

Kuvela ukukhanya okuluhlaza bese kucwayiza kancane ngesikhathi sokushaja.
Uma ibhethri seligcwaliswe ngokugcwele, ukukhanya kuzocisha.

Qaphela: Kuzothatha cishe amahora angu-2-3 ukushaja ibhethri ku-100% futhi kuzohlala ~ amahora angu-2 wokuthwebula ividiyo.

Isahluko 1. Ukuqalisa

1.2.1 Ukukhipha Ibhethri

1. Vula i-Viewfinder ngokudonsela phansi inkinobho ethi Khipha I-Viewfinder.



2. Donsa i-Viewfinder uqonde ngqo.



3. Cindezela ithebhu ohlangothini lwesobunxele lwebhethri bese ushelelisa ibhethri ngaphandle.



4. Shelelezisa i-Viewfinder emuva endaweni yayo.


Isahluko 1. Ukuqalisa

1.2.2 Ukubuka Ukushajwa Kwebhethri

Ukuze ubuke ukushajwa kwebhethri okusele, zungezisa Ukudayela Izilungiselelo uye Esithombeni, Ividiyo, Iluphu noma i-WiFi/Izilungiselelo.



Isithonjana segeji yebhethri singezansi kwesokudla kwesikrini.

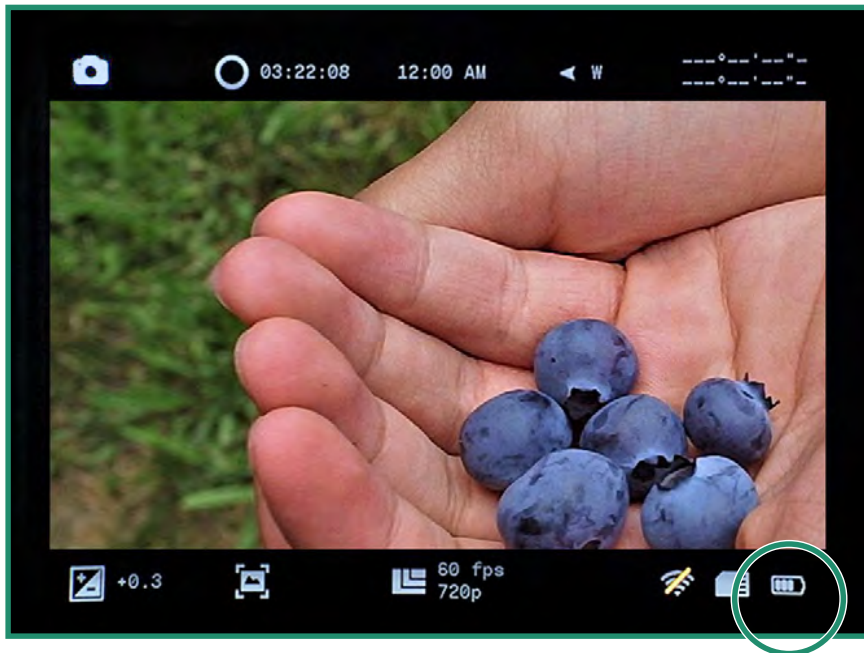

1.3 Ukuhlola Amamodi Ekhamera kanye Nezilungiselelo

Nakhu ukubuka konke kwezinkinobho zekhamera.

Isahluko 1. Ukuqalisa

1.3.1 Ukubuka konke kwenkinobho



1.3.2 Ukudayela Izilungiselelo

I-Dayela Yezilungiselelo ivula futhi ivale ikhamera kanye nokusetha imodi yekhamera.



• Vala Amandla

• Isithombe

• Ividiyo

• Iluphu

• Ukudlala

• I-WiFi/
Izilungiselelo



Isahluko 1. Ukuqalisa

1.3.3 Isitholi Sokubuka

I-Electronic Viewfinder (EVF) iqukethe imenyu nohlelo lokulawula lwekhamera. Ngakwesokudla se-EVF kukhona I-Diopter Dial. SEBENZISA LOKHU UKUZE Ugxilise ESO LAKHO NGAPHAMBI KOKUGXILA ILENS. I-EVF izodinga ukususwa ukuze ufinyelele ibhethri nekhadi le-Micro SD.



Ukudayela
kwe-Diopter



Ibhethri

slot micro sd ikhadi

1.3.4 Indandatho Yesigcawu

Sebenzisa i-Scene Ring ukuze ulungise ilensi ibe nesikhathi sosuku.



Isahluko 1. Ukuqalisa

1.3.5 Indandatho Yokugxila

Sebenzisa i-Focusing Ring ukuze ulungise ukugxila ngokubonakalayo noma ngamasethingi ebanga odayeli.



1.4 Ukufaka i-Micro SD Card

Ikhadi le-Micro SD liphethe wonke amavidiyo nezithombe zakho.

Qaphela: Ikhamera ayizi nekhadi le-Micro SD. Udinga ukuthenga i-Micro SD/Micro SDHC Class 10 noma i-UHS-1 enomthamo ongafika ku-32GB. (I-PRO inomkhawulo ongu-256GB)

1. Ukuze ufake ikhadi le-Micro SD, khipha i-Viewfinder ngokudonsela phansi inkinobho ethi Khipha I-Viewfinder.
2. Donsa i-Viewfinder uqonde ngqo.
3. Faka ikhadi le-SD endaweni yalo bese uliphusha ize ikhiyeke. Ukuze uyisuse, iphushe futhi futhi izodedela.
4. Shelelezisa i-Viewfinder emuva endaweni yayo.



Qaphela: Ungaphoqi ikhadi le-SD endaweni noma idatha yonakaliswa.

Isahluko 1. Ukuqalisa




1.5 Ukusetha Usuku Kanye Nesikhathi

1. Ukusetha idethi nesikhathi, zungezisa Ukudayela Izilungiselelo kumenyu ye-WiFi/Izilungiselelo.
2. Cindezela okuthi SET ukuze ufinyelele imenyu ye-WiFi/Izilungiselelo.
3. Lesi sexwayiso sizovela kuze kumiswe usuku nesikhathi.



Isahluko 1. Ukuqalisa


4. Shintshela phansi kokuthi Idethi nesikhathi bese uguqulela kwesokudla uye kuzinketho zedethi nesikhathi.

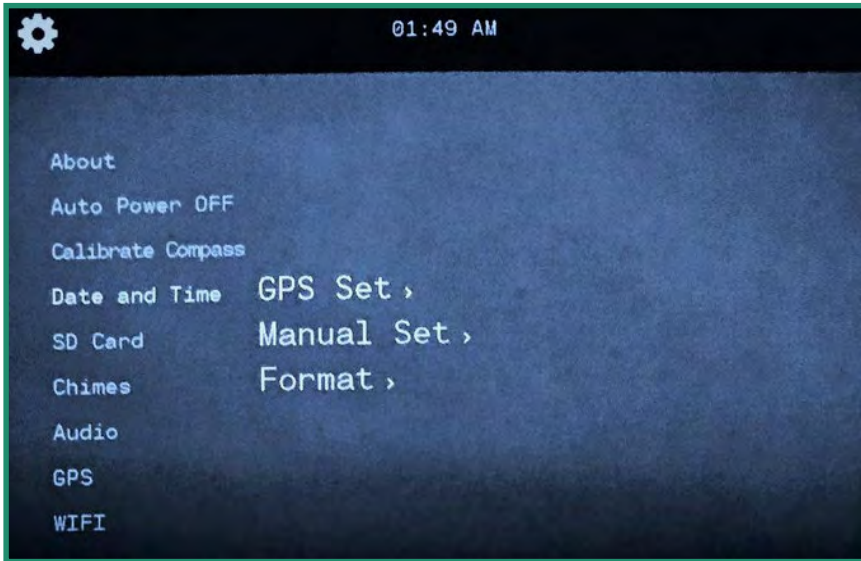

5. Ungasetha isikhathi nge-GPS (AYITHOLAKALI KUWO WONKE AMAKHAMERA) (bheka “Isigaba 4.4.1 Isethi ye-GPS” ekhasini 80 noma ngokwakho Ungashintsha nefomethi yosuku nesikhathi (bheka “Isigaba 4.4. 2 Fometha” ekhasini 83) Ukusetha usuku nesikhathi mathupha, guqulela ku-Manual Set.


Uma i-SIONYX Aurora yakho ivuliwe okokuqala ngqa, uzotshelwa ukuthi usethe idethi nesikhathi. Lokhu kwaziswa kuzoqhubeka kuze kumiswe idethi nesikhathi.

1. Zungezisa Ukudayela Izilungiselelo kundawo ye-WiFi & Izilungiselelo.
2. Shintshela phansi kokuthi Idethi nesikhathi bese usuka uye kwesokudla uye kokuthi Ukusetha Ngokuzenzela.
3. Guqula kwesokudla uye ku-Date bese ucindezela SET. Idethi engaphezulu kwemenyu manje isikumodi yoshintsho.

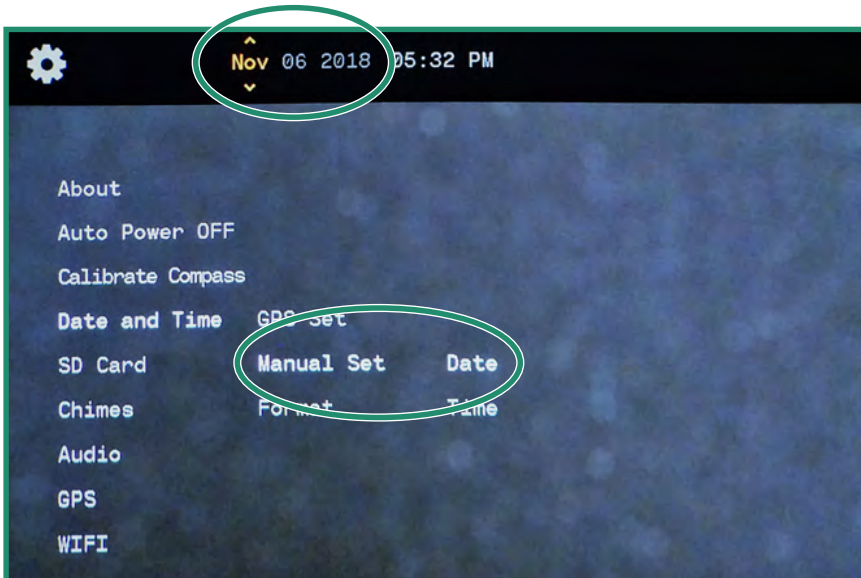


Isahluko 1. Ukuqalisa

4. Guqula phezulu naphansi ukuze ushintshe Usuku bese ucindezela SET.
Phinda lezi zinyathelo ukuze usethe Isikhathi.

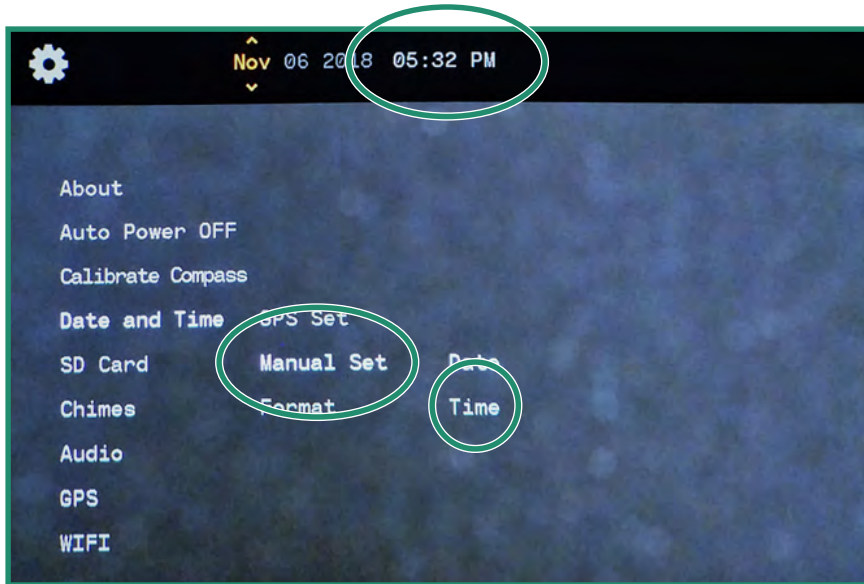


5. Ukusetha Ifomethi Yosuku, shintshela kwesokudla uye Kufomethi Yosuku bese ucindezela okuthi SET.

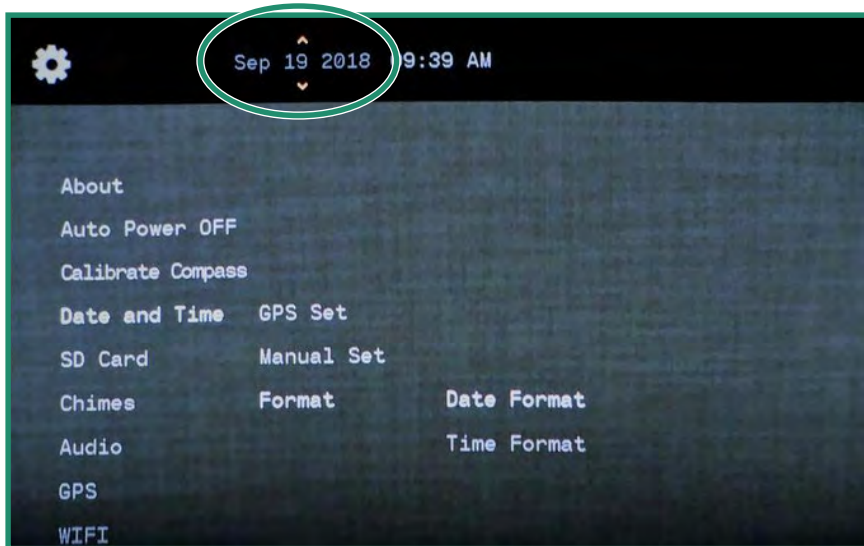

6. Khetha Ifomethi Yosuku phezulu esikrinini. Khetha inketho bese ucindezela SET.

Isahluko 1. Ukuqalisa

7. Shintshela phansi kokuthi Ifomethi Yesikhathi bese ucindezela okuthi SET bese ukhetha inketho oyifunayo phezulu kwesikrini bese ucindezela SET.

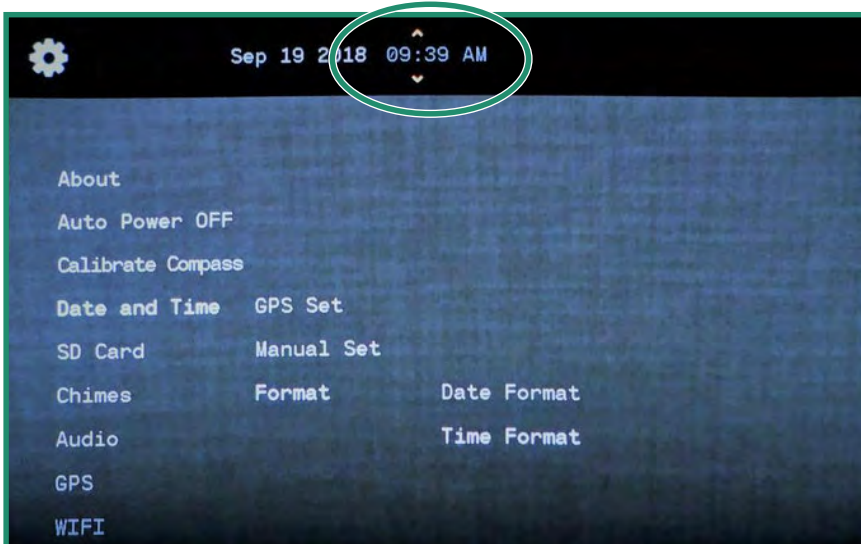


8. Guqula kwesokunxele kabili ukuze uphumele kumenyu enkulu futhi uguqule kwesokunxele kabili ukuze ubuyele kumenyu enkulu ye-WIFI/Izilungiselelo.

1.6 Ukulanda i-Mobile App ukuze Uxhume kukhamera yakho

Uhlelo lokusebenza Lweselula lusebenza likuvumela ukuthi ulawule ikhamera yakho usebenzisa idivayisi yeselula futhi ubone Ukubuka Okubukhoma.


Uhlelo lokusebenza luyatholakala ku-App Store naku-Google Play.

1. Landa i-SIONYX Aurora Mobile App kusukela ku-App Store noma ku-Google Play.

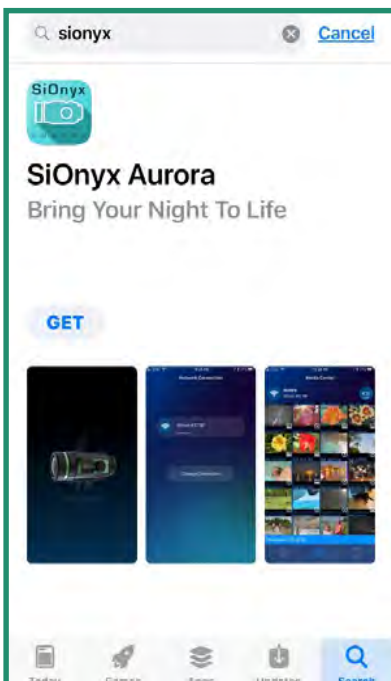

Isahluko 1. Ukuqalisa

2. Ukuze uxhume idivayisi yakho yeselula kukhamera, zungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/ Izilungiselelo ukuze ufinyelele imenyu.

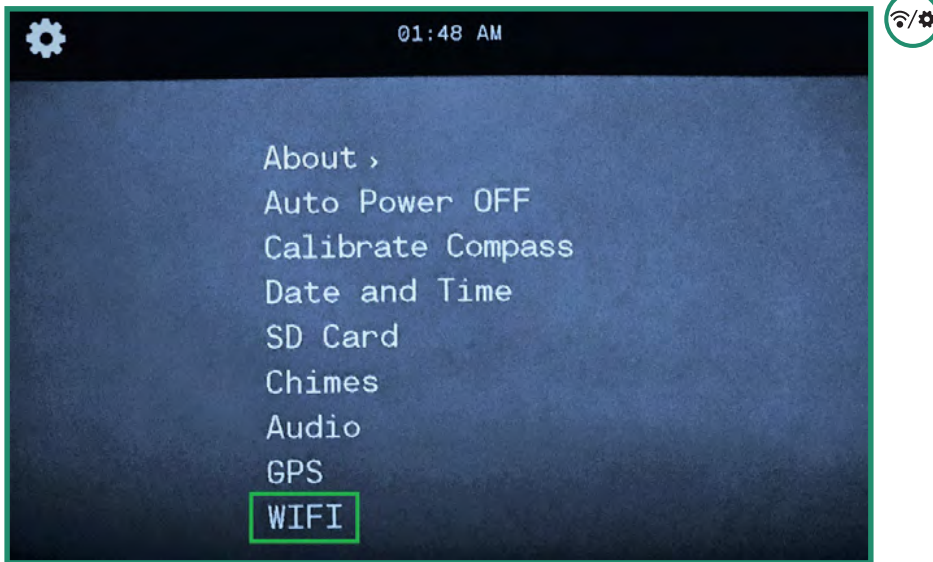


3. Shintshela phansi ku-WIFI bese uguqulela kwesokudla uye ku-WIFI Vuliwe bese ucindezela u-SET.



Isahluko 1. Ukuqalisa


4. Isikrini sizobonisa "Ilindle uxhumano lwe-WiFi..."

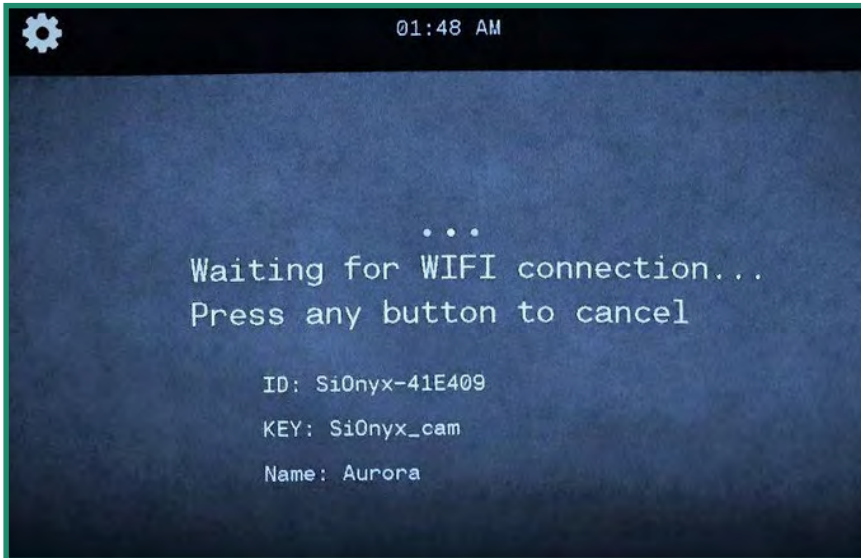

5. Iya kuzilungiselelo ze-WiFi kudivayisi yakho yeselula bese ukhetha uxhumano lwe-WiFi lwekhamera ye-SIONYX.


Qaphela: Uma usebenzisa i-iPhone noma i-iPad, vala i-Bluetooth kuzilungiselelo ze-iOS ngaphambi kokuxhuma ku-Aurora.

6. Faka iphasiwedi ye-Wi-Fi, "SiOnyx_cam".

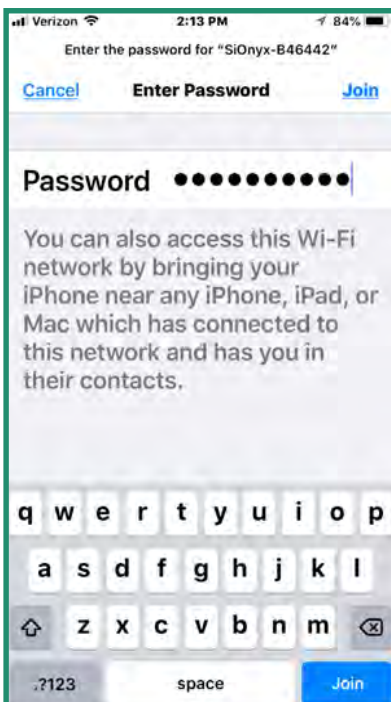

Isahluko 1. Ukuqalisa

Igama eliyimfihlo liboniswa NJENGO KHIYE kusitholi sokubuka.

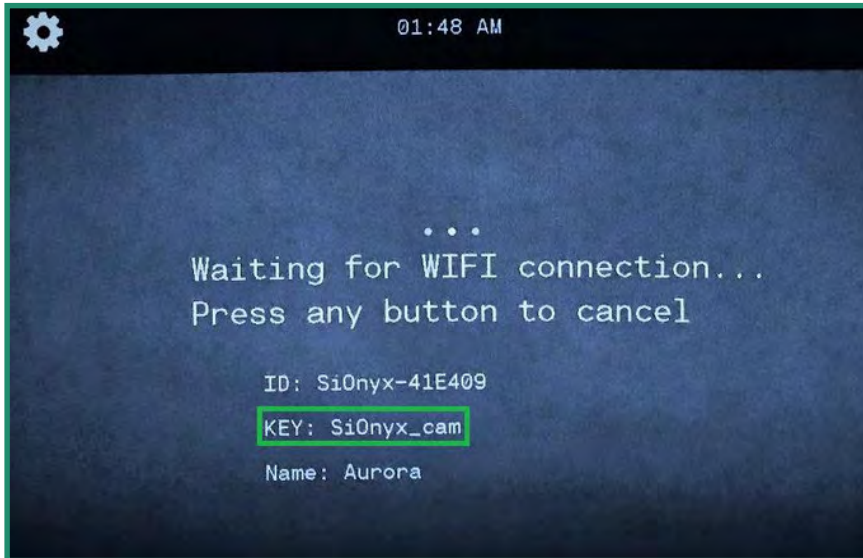


Uma uxhumano lwe-WiFi selumisiwe, i-Viewfinder ibonisa "uxhumano lwe-WiFi olusunguliwe."



Qaphela: Ikhamera izoqhubeka nokubonisa lo mlayezo uze unqamule ku-WiFi.

Isahluko 1. Ukuqalisa

7. Vula uhlelo lokusebenza Lweselula bese uthinta igama lekhamera.

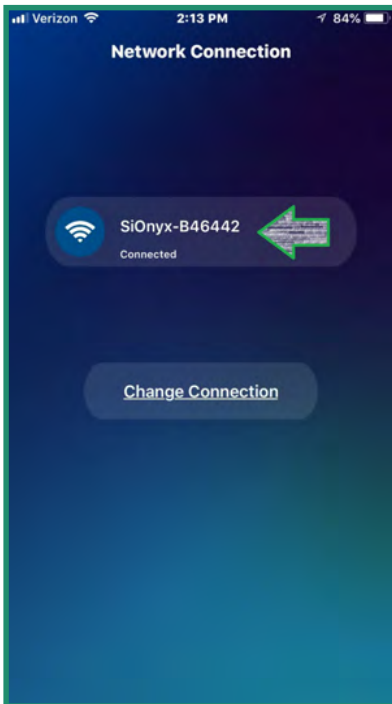


Manje usesikrinini sasekhaya sohlelo lokusebenza, olubizwa ngokuthi Isikhungo Semidiya.



Qaphela: Ukuze uthole ulwazi olwengeziwe mayelana nendlela yokusebenzisa i-SIONYX Aurora Mobile App, landa inkomba ye-Mobile App kusuka esikhungweni sethu sosekelo: <https://support.SIONYX.com/support/home>.

Isahluko 2. Izithombe Namavidiyo

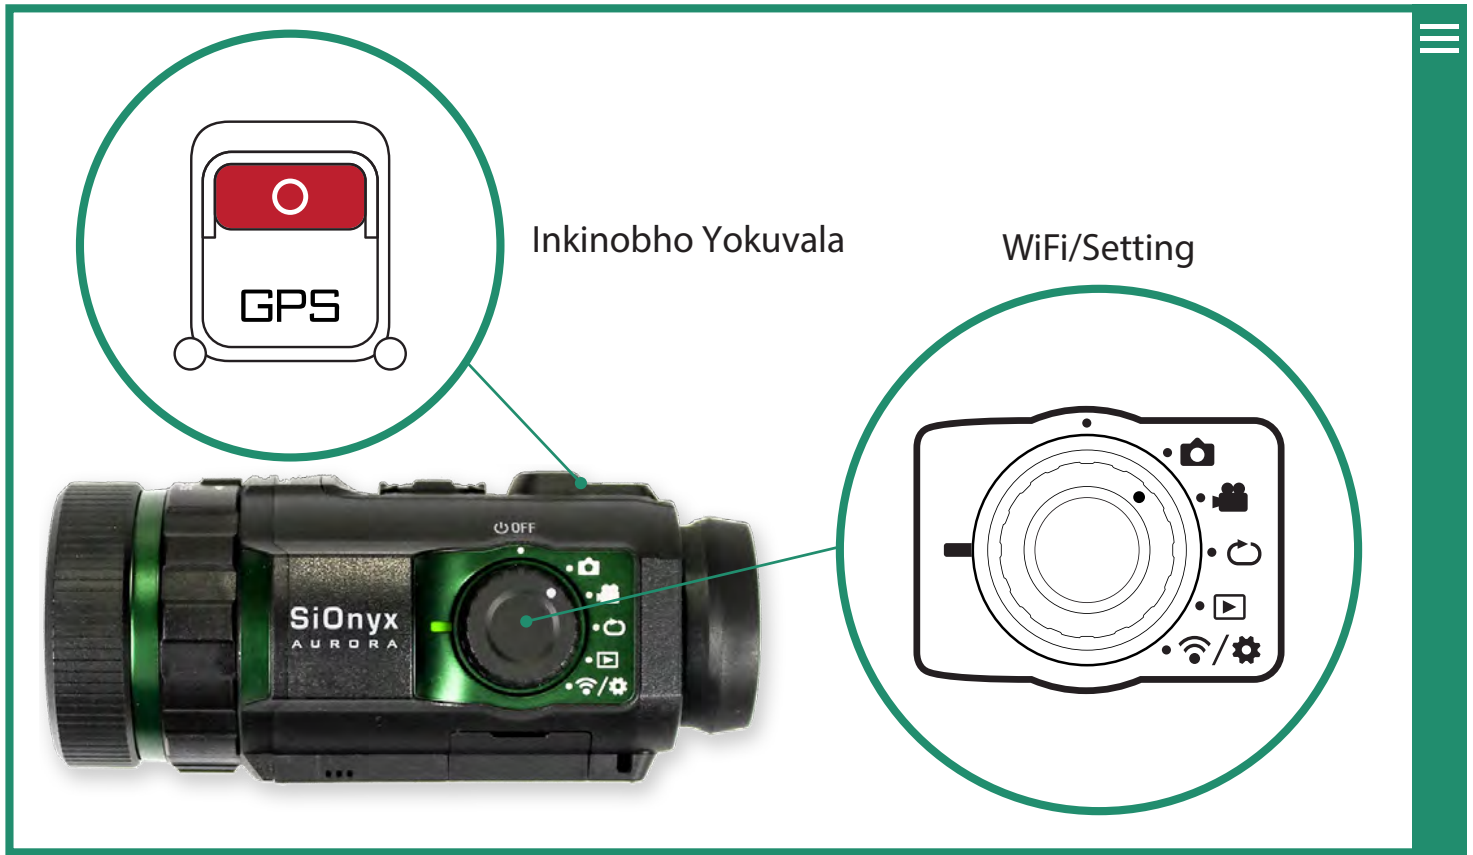


2.1 Ukuthatha Isithombe Nokushutha Ividiyo

2.1.1 Ukuthatha Isithombe


1. Ukuthatha isithombe, zungezisa Ukudayela Izilungiselelo kumodi yesithombe
2. Cindezela inkinobho yokuvala ukuze uthathe isithombe.

2.1.2 Ukushutha Ividiyo

1. Ukuze uthwebule ividiyo, zungezisa Ukudayela Izilungiselelo kuye kumodi yevidiyo
2. Cindezela inkinobho yokuvala ukuqalisa nokumisa ividiyo.

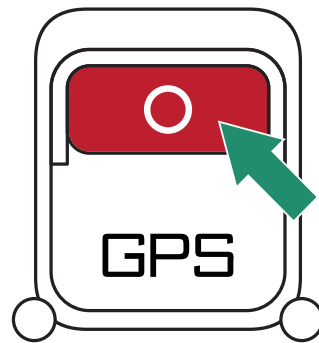


Isahluko 2. Izithombe Namavidiyo

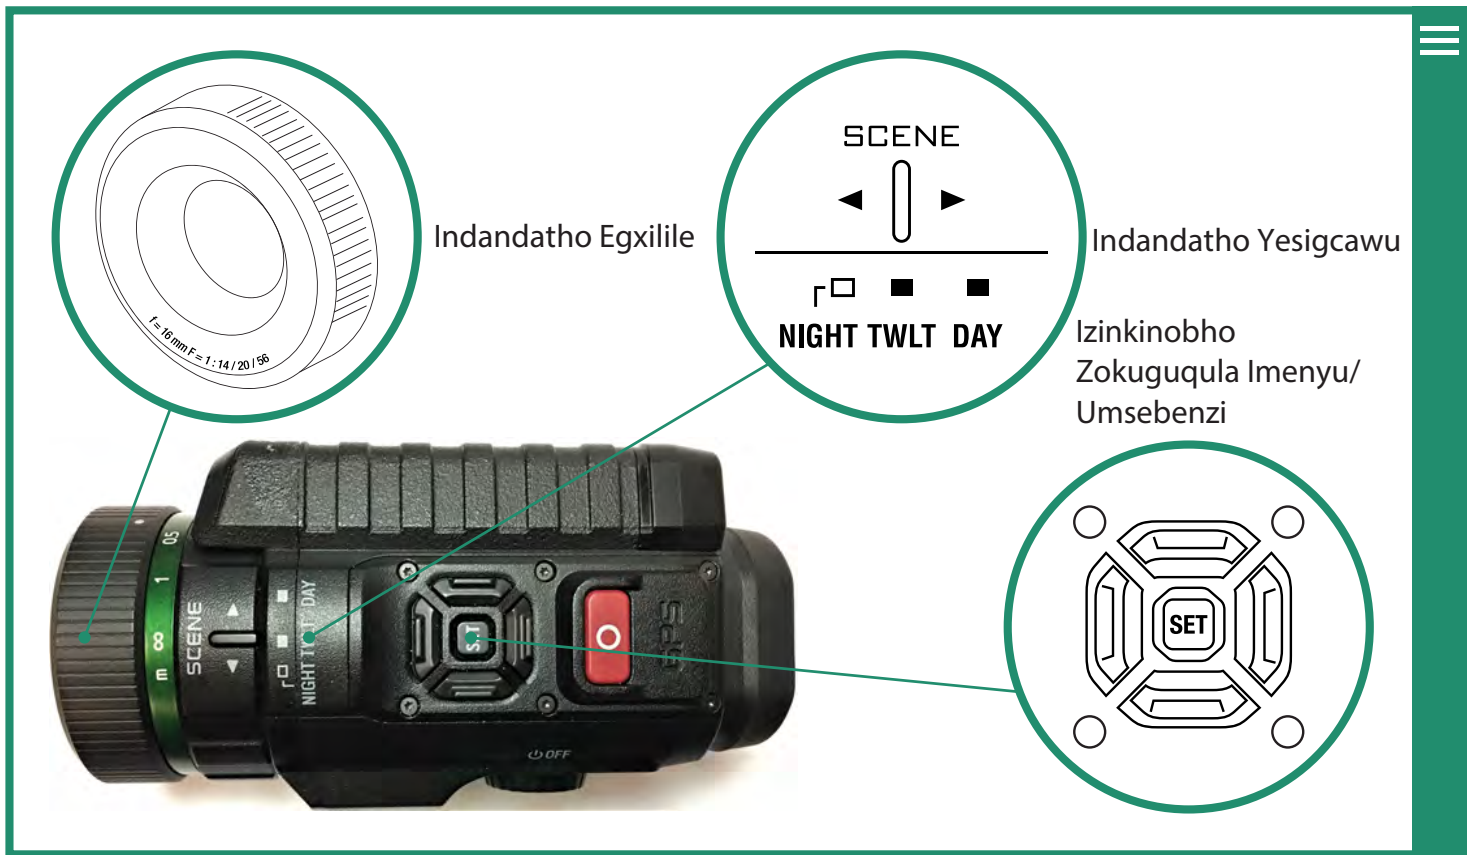

2.1.3 Ukulungisa Ukugxila

Ukuze ulethe isithombe ekugxilweni, vula iringi yokugxilisa kwesokunxele nakwesokudla.

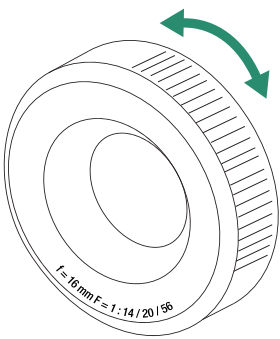


Qaphela: Ukusiza ekugxiliseni, linganisela ibanga lapho isenzo esizokwenzeka esigcawini sakho bese usetha lelo banga ngamamitha esikalini sokugxilisa ingqondo. Ungaphinda uvule i-Focus Peak ngaphansi kwemenyu Yembondela. Bheka "Isahluko 2.4.2.1 Inani Eliphakeme Lokugxila" ekhasini 50 ukuze uthole ulwazi olwengeziwe mayelana Nokuphakama Okugxilwe Kuso. Bheka "Isigaba 1.3.3 Isitholi sokubonwayo" ekhasini 12 ukuze ulungise i-Viewfinder. (AKUTHOLAKALI KUWO WONKE AMAKHAMERA)

Isahluko 2. Izithombe Namavidiyo


2.1.4 Ukusondeza Nangaphandle

Ukusondeza ngaphandle nangaphakathi, guqulela kwesokunxele nakwesokudla. Ukuchofoza okuthathu kwesokudla kokuchofoza kukunikeza isithombe esingu-1:1.

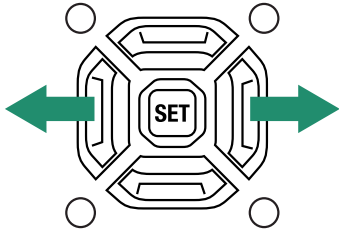

2.1.5 Ukusetha Isinxephezelo Sokuchayeka (Inzuzo)


I-Exposure Compensation (noma Inzuzo) ilungisa ukukhanya nobumnyama bendawo. Guqula phezulu naphansi ukuze ulungise Isinxephezelo Sokuhlangabezana.

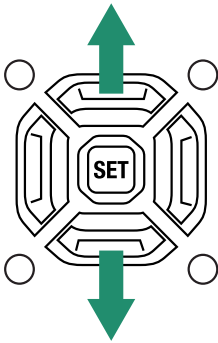

Qaphela: Isinxephezelo Sokuchayeka siyefana ne-Gain. Lokhu kuzokwandisa futhi kunciphise Inzuzo.

Isahluko 2. Izithombe Namavidiyo

Isilungiselelo Sesinxephezelo Sokuchayeka/Inzuzo sitholakala ngezansi kwesokunxele sesikrini se-Viewfinder.

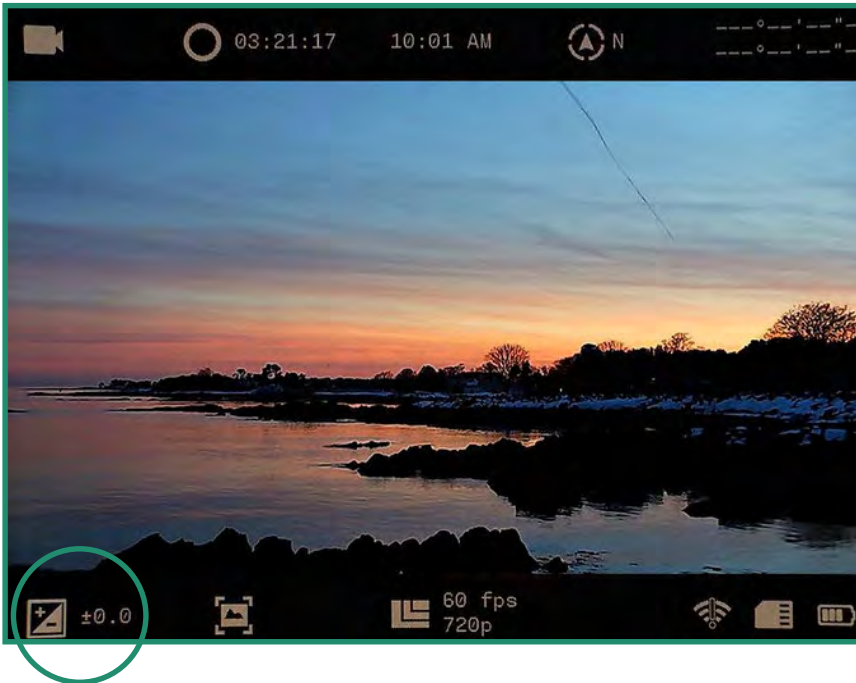

2.1.6 Ukusebenzisa Indandatho Yesigcawu

Ikhamera inezilungiselelo ze-Night, Ubusuku Nemini:



- **Ubusuku** - ukubona ubusuku obugcwele (f/1.4)
- **Ukuhwalala** – cishe ihora elilodwa ngaphambi kokuphuma kwelanga kanye nehora ngemva kokukhanya kwelanga (f/2.0)
- **Usuku** – ilanga noma amafu (f/5.6)

2.2 Ukubuka Kanye Nokususa Izithombe Namavidiyo

Ungasebenzisa izici zemodi yokudlala ukuze ubuke futhi ususe izithombe namavidiyo.

Isahluko 2. Izithombe Namavidiyo



2.2.1 Ukubuka Kanye Nokusondeza Izithombe Namavidiyo

Ungabuka futhi usondeze izithombe namavidiyo kwimodi yokudlala.

1. Zungezisa Izilungiselelo Ukudayela kumodi yokudlala.



2. Uzobona isithombe sakamuva noma ividiyo oyishuthile.



1. Zungezisa Izilungiselelo Ukudayela kumodi yokudlala.

2. Uzobona isithombe sakamuva noma ividiyo oyishuthile.

Qaphela: Chofoza kabili okuthi SET ukuze uthole ukusondeza unomphela. Ungacindezela isikhathi eside inkinobho yokuguqula engakwesokudla ukuze uqhubeke usondeze isithombe, noma inkinobho yesokunxele yokuguqula ukuze uhlehlise isithombe. Uma isondeziwe, cindezela ngokushesha izinkinobho zokuguqula ezihlukahlukene ezizungeze isithombe. Ukuze ubuyele ekubukeni okuvamile, cindezela isikhathi eside ukuguqula kwesokunxele kuze kube yilapho usubuyiselwe kusayizi ojwayelekile, bese uchofoza kabili okuthi SET.

2.2.2 Viewing Thumbnails of Photos and Videos

You can view four or nine thumbnails of photos and videos in the Playback Mode.



1. Rotate the Settings Dial to Playback Mode.

Isahluko 2. Izithombe Namavidiyo

2. Uzobona isithombe noma ividiyo yokugcina oyishuthile.




3. Guqula kabili ngokushesha ukuze ubuke izithonjana ezine.



Isahluko 2. Izithombe Namavidiyo

4. Guqula kabili ngokushesha futhi ukuze ubuke izithonjana eziyisishiyagalolunye.

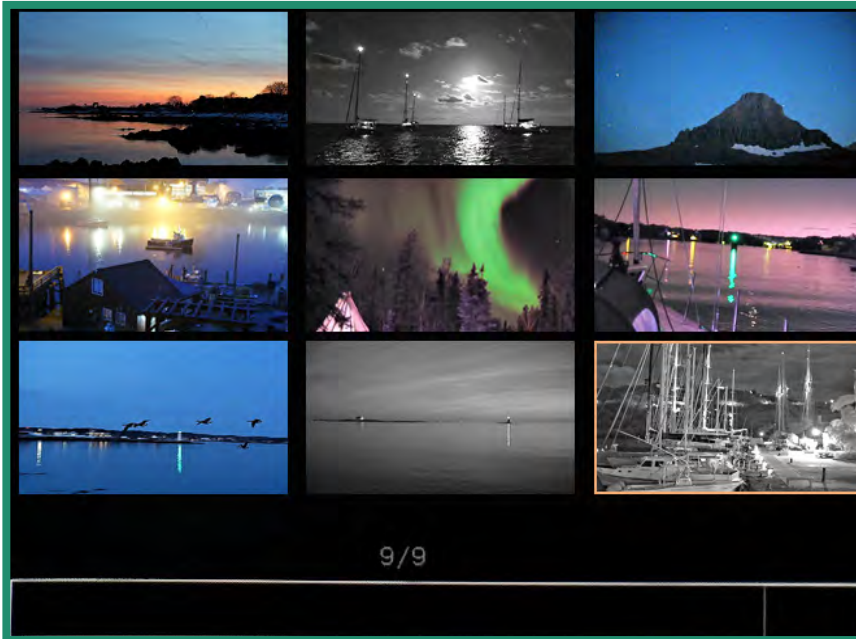

5. Guqula kwesokunxele nakwesokudla ukuze ugqamise isithombe noma ividiyo.

6. Ukuze uphume kumodi yesithonjana, guqula kabili ngokushesha.

2.2.3 Ukudlala Amavidiyo

Buka amavidiyo kumodi yokudlala 

1. Zungezisa Izilungiselelo Ukudayela kumodi yokudlala.

2. Guqulela kuvidiyo ofuna ukuyidlala bese ucindezela isikhathi eside okuthi SET ize iqale ukudlala ividiyo.


2.2.4 Ukususa Izithombe Namavidiyo

Susa izithombe namavidiyo kwimodi yokudlala 1. 


Zungezisa Izilungiselelo Ukudayela kumodi yokudlala.

Isahluko 2. Izithombe Namavidiyo

2. Guqulela esithombeni noma kuvidiyo ofuna ukuyisusa bese ucindezela SET.
Uphawu lokuhlola oluluhlaza luzovela ekhoneni elingezansi kwesokudla.

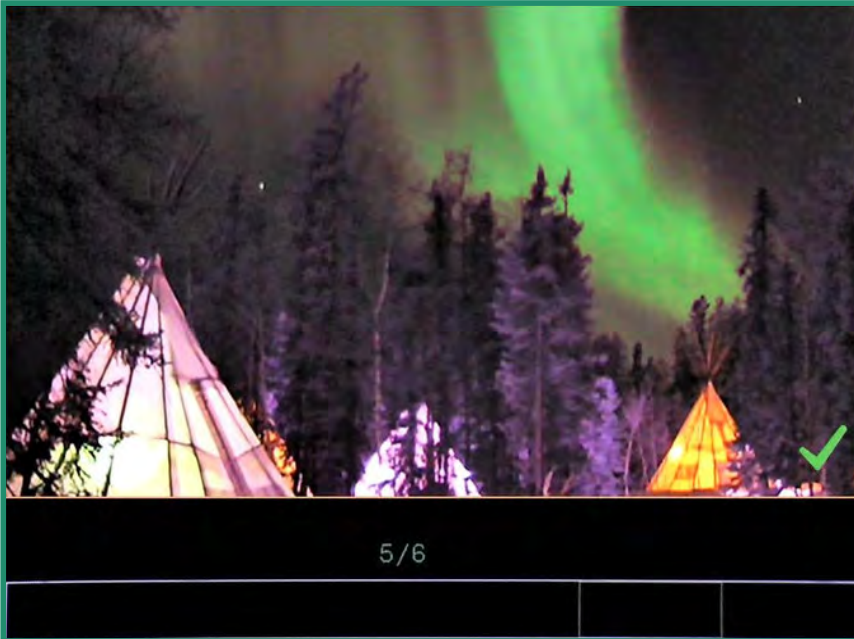

3. Cindezela isikhathi eside SET kuze kuvele isithombe sikadoti.

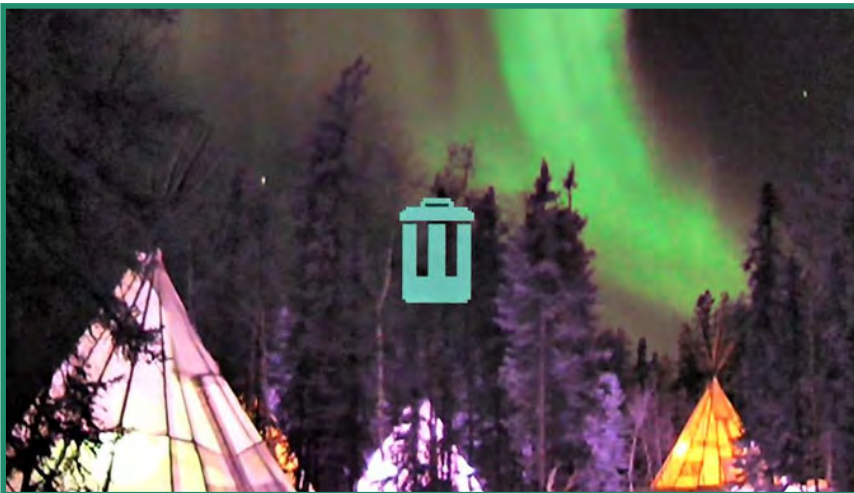

Uma unquma ukungasisusi isithombe noma ividiyo, shintshela kwesokunxele futhi isithombe sizobuyela kuleso esinophawu lokuhlola oluluhlaza. Cindezela okuthi SET ukuze ususe uphawu lokuhlola.

4. Ukuze ususe isithombe noma ividiyo, cindezela isikhathi eside okuthi SET kuze kube yilapho udoti uqala ukukhanya, bese ukhulula inkinobho ethi SET. Isithombe noma ividiyo manje isisusiwe.

Isahluko 2. Izithombe Namavidiyo

2.2.5 Ukususa Izithombe Namavidiyo Amaningi

Ungasusa izithombe namavidiyo amaningi ngesikhathi esisodwa.



1. Zungezisa Izilungiselelo Ukudayela kumodi yokudlala.
2. Buka izithonjana zezithombe noma amavidiyo akho, ulandela imiyalelo esesigabeni esithi “Isigaba 2.2 Sokubuka Nokususa Izithombe Namavidiyo” ekhasini 29.
3. Guqula uye ezithombeni noma amavidiyo ofuna ukuwasusa.
4. Khetha isithombe bese ucindezela SET. Uzobona umaki wokuhlola oluhlaza ekhoneni elingezansi kwesokudla. Yenza lokhu esithombeni ngasinye ofuna ukusisusa.



5. Cindezela isikhathi eside SET kuze kuvele ithini likadoti.



Isahluko 2. Izithombe Namavidiyo

If you decide you don't want to delete the photo(s) or video(s), toggle left and the green checkmark appears. Press SET to remove the checkmark(s).

6. Ukuze uqhubeke nokususa, cindezela isikhathi eside u-SET kuze kube yilapho udoti uqala ukukhanya. Izithombe noma amavidiyo manje asesusiwe.

2.3 Ukudubula Izithombe: Izilungiselelo




2.3.1 Isivinini seShutter

Isivinini se-shutter ubude besikhathi i-shutter ivuliwe uma uthatha isithombe. Isivinini se-shutter esisheshayo sivumela ukukhanya okuncane futhi sinciphise ukunyakaza kwesihloko.


Kunezilungiselelo ezimbili ze-shutter: Okuzenzakalelayo ne-Manual. Ikhamera yakho isethwe ku-Auto ngokuzenzakalela. Ungakwazi ukulungisa isivinini se-shutter.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi yesithombe.
2. Cindezela okuthi SET ukuze ufinyelele imenyu yekhamera.

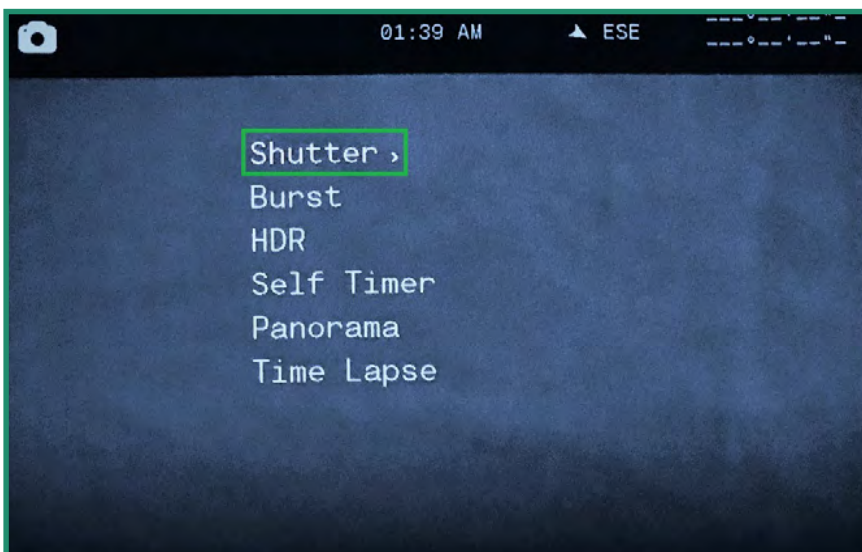


Isahluko 2. Izithombe Namavidiyo

3. Guqula kwesokudla ku-Shutter uye ku-Auto noma Manual.

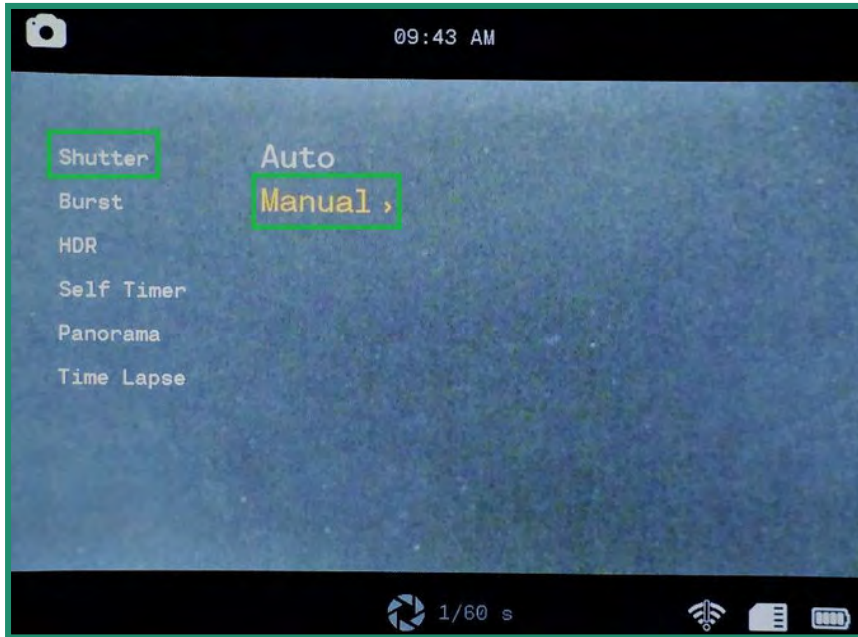

4. Ukusetha amasethingi e-shutter mathupha, guqulela phansi uye ku-Manual futhi kwesokudla uye esivinini sokuvala.

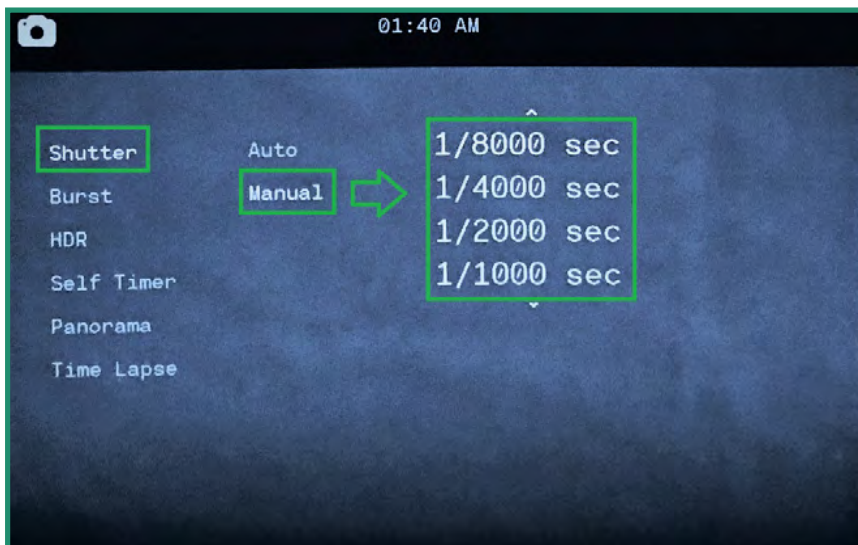

5. Guqula phezulu naphansi ukuze uskrole kuzilungiselelo zesivinini se-shutter.
6. Cindezela okuthi SET ukuze ukhethe isivinini se-shutter esifanela kangcono indawo yakho. Ungasetha isivinini se-shutter sisuka ku-1/8000 wesekhondi siye kumasekhondi angu-1.5.

Isahluko 2. Izithombe Namavidiyo

7. Guqula kwesokunxele bese ucindezela u-SET ukuze uphume isivinini sokuvala. Isivinini sokuvala manje sesiyabonakala ngezansi kwesikrini.




Qaphela: Zonke izici zihlala zikhethiwe uma ikhamera icishiwe bese ivulwa futhi.

Isahluko 2. Izithombe Namavidiyo


2.3.2 Ukuqhuma

Imodi ye-Burst ikuvumela ukuthi uthathe izithombe eziyingqayizivele ezilandelanayo ngenani lamafreymu ayi-10 ngomzuzwana (fps), 5 fps noma 2.5 fps. Imodi ye-Burst iyasiza uma uthwebula amashothi wesenzo.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi yesithombe.
2. Cindezela okuthi SET ukuze ufinyelele imenyu.

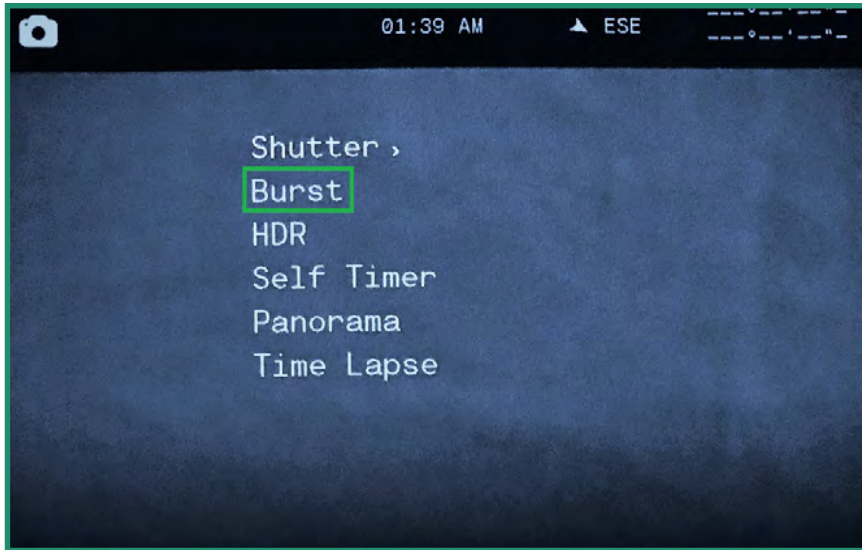


3. Yehla uye ku-Burst bese uye ngqo kuzinketho.

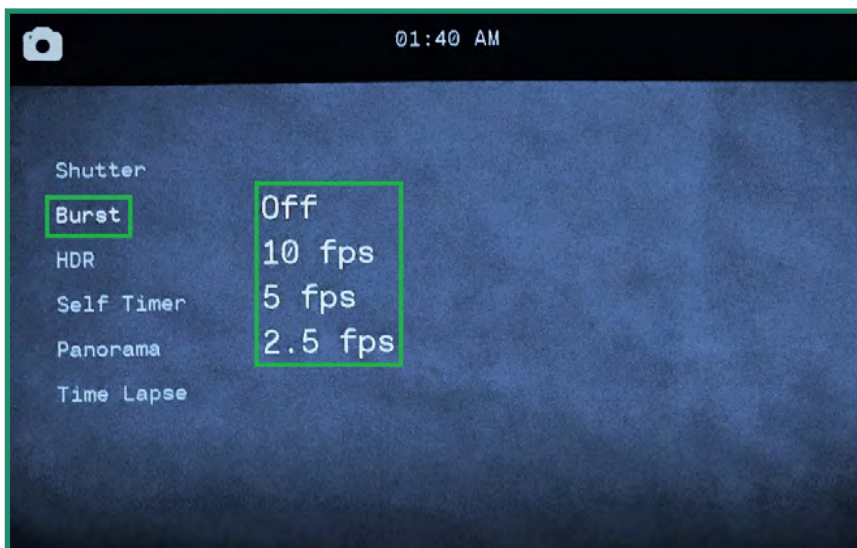

4. Khetha inketho efaneleka kangcono indawo yakho bese ucindezela SET.

Isahluko 2. Izithombe Namavidiyo

5. Cindezela okuthi SET ukuze uphume kumenyu futhi uzobona isithonjana sokusetha i-Burst.

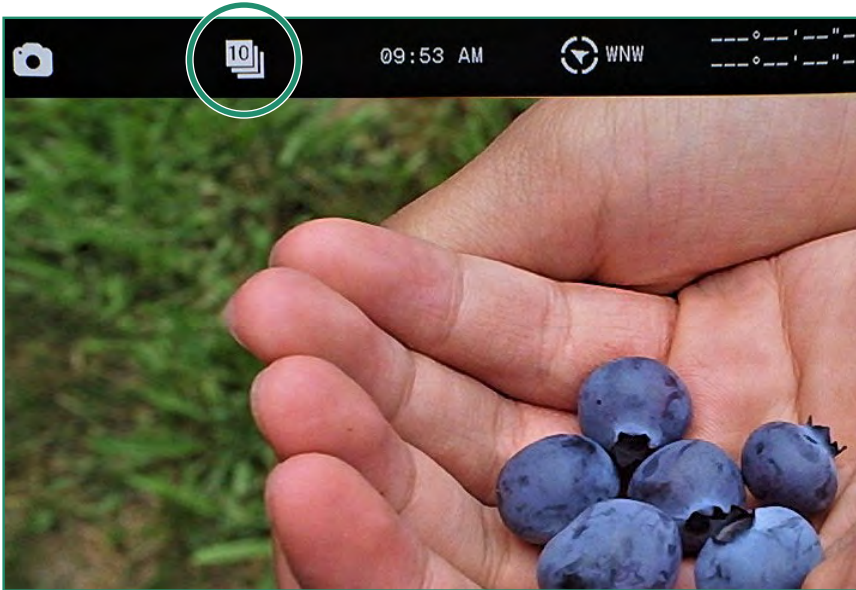

6. Ukuze uthathe isithombe, cindezela inkinobho yokuvala. Njengoba ama-Chimes evuliwe (kunconyiwe), ungezwa ukuchofaza kuso sonke isithombe esithathwa yikhamera. Qhubeka ucindezela inkinobho yokuvala kuze kube yilapho ukuchofaza kuma.


Qaphela: Zonke izici zihlala zikhethiwe uma ikhamera icishiwe bese ivulwa futhi.

Isahluko 2. Izithombe Namavidiyo


2.3.3 HDR

I-HDR imele i-High Dynamic Range. Lena indlela esetshenziswa ekuthwebuleni izithombe nasekufanekiseni ukukhiqiza kabusha ukuguquguquka okukhulu kokukhanya kunalokho okungakhonakala ngamasu ajwayelekile ezithombe zedijithali noma wokuthwebula izithombe. Ikuvumela ukuthi uthwebule imininingwane eyengeziwe ezindaweni ezikhanyayo nezimnyama.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi yesithombe. 
2. Cindezela okuthi SET ukuze ufinyelele imenyu.

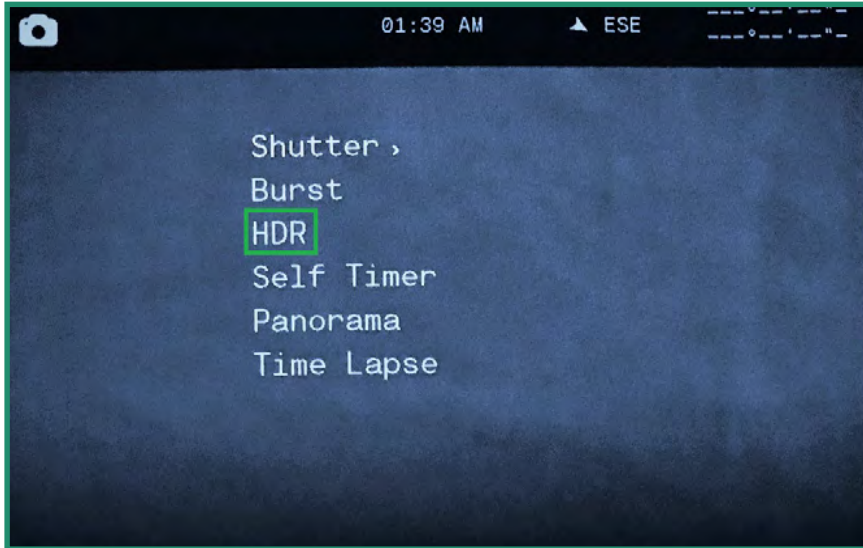

3. Shintshela phansi ku-HDR futhi kwesokudla uye Vuliwe noma Vala bese ucindezela SET.

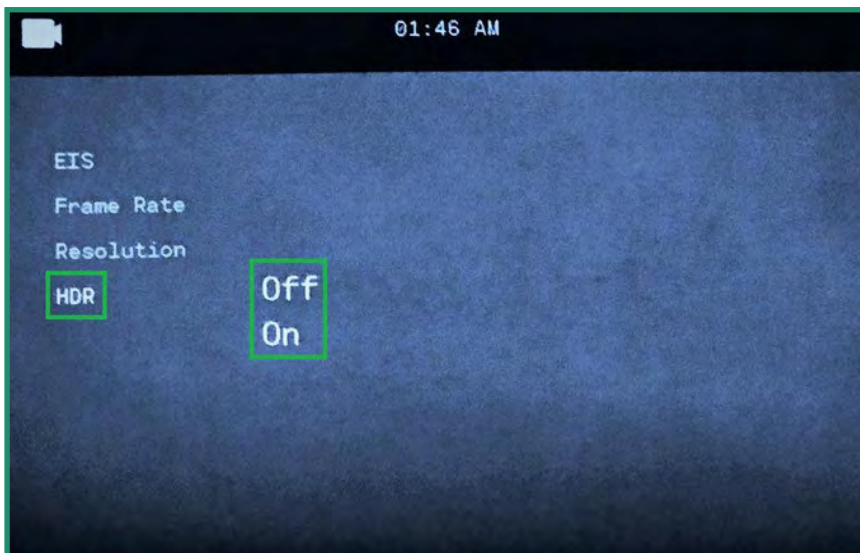

4. Cindezela okuthi SET ukuze uphume kumenyu.

Isahluko 2. Izithombe Namavidiyo

5. Isithonjana se-HDR sizobonakala ku-Viewfinder.



Qaphela: Zonke izici zihlala zikhethiwe uma ikhamera icishiwe bese ivulwa futhi.

Isahluko 2. Izithombe Namavidiyo


2.3.4 Isibali Sikhathi

The Self Timer allows you to delay the timing of the shutter release so that you can be included in the photo. You can set the Self Timer for 2, 5, or 12 seconds.


1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi yesithombe.



2. Cindezela okuthi SET ukuze ufinyelele imenyu.

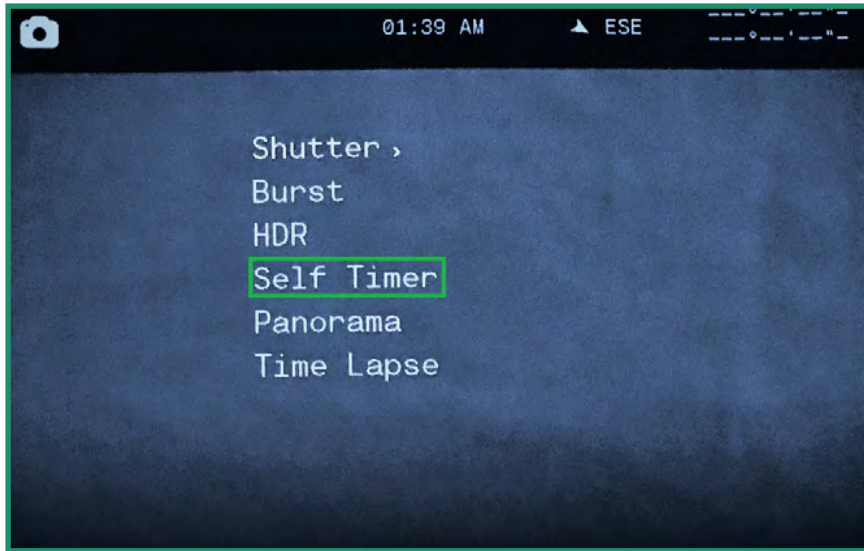

3. Shintshela phansi kokuthi Self Timer futhi uye ngqo izinketho.

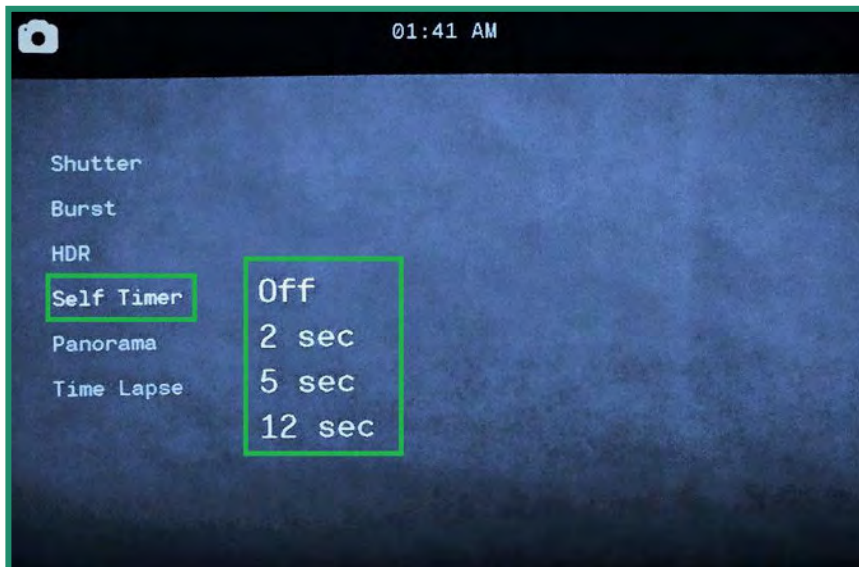

4. Shintshela enanini lokulibaziseka olidingayo bese ucindezela u-SET.

Isahluko 2. Izithombe Namavidiyo

5. Cindezela okuthi SET ukuze uphume kumenyu. Ungabona izilungiselelo Zesibali sikhathi ku-Viewfinder.



Uma ucindezela inkinobho ye-Shutter ama-chimes azozwakala ukubala phansi ukubambezeleka, okulandelwa ukuchofoza lapho isithombe sithathwa.

Qaphela: Zonke izici zihlala zikhethiwe uma ikhamera icishiwe bese ivulwa futhi.

Isahluko 2. Izithombe Namavidiyo


2.3.5 I-Panorama

Ungathatha isithombe se-Panorama ngokunweba ikhamera ukusuka kwesokunxele kuye kwesokudla ukuze uthole isithombe sokwakheka kwezwe noma phezulu naphansi ukuze uthole isithombe sokuma ngobude. Ikhamera izokhiqiza isithombe esingu-180-degree.


1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi yesithombe.



2. Cindezela okuthi SET ukuze ufinyelele imenyu.

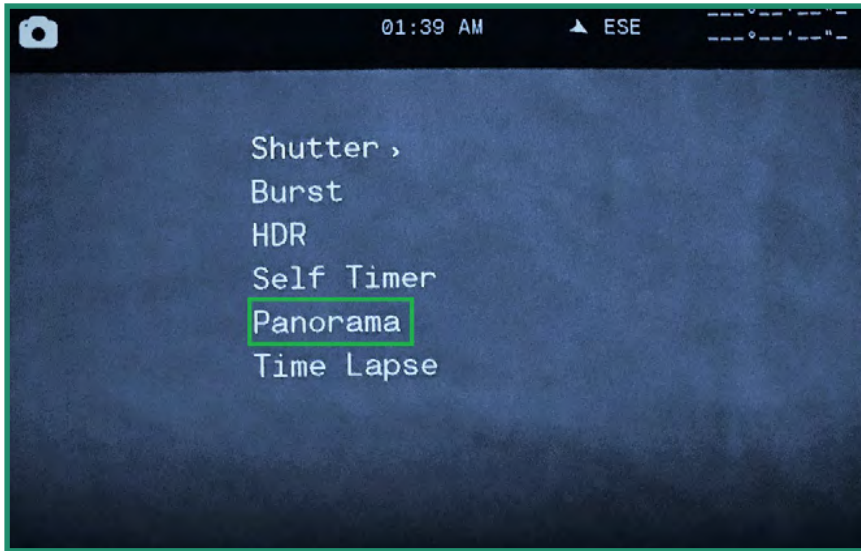

3. Shintshela phansi ku-Panorama futhi kwesokudla uye Ku-Portrait noma I-Landscape.

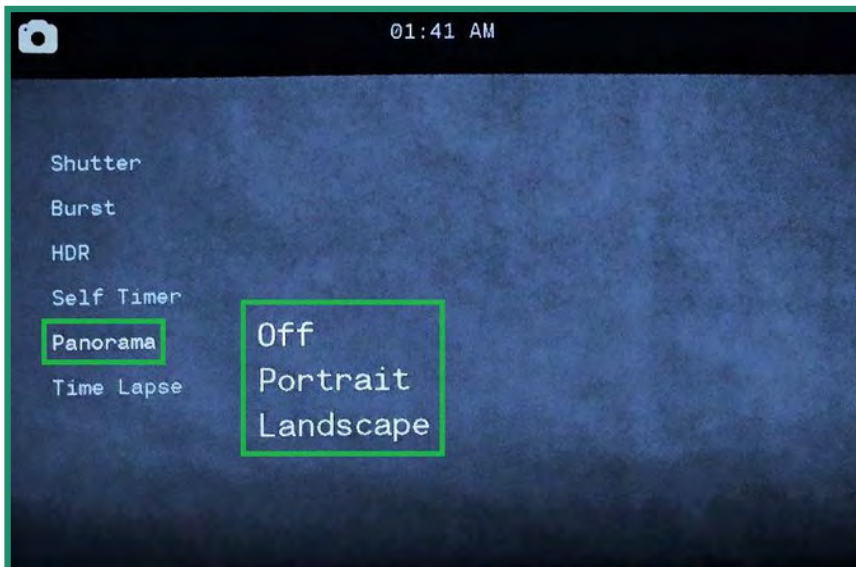


Isahluko 2. Izithombe Namavidiyo

4. Cindezela okuthi SET ukuze uphume kumenyu. Ukulungiselelwa kwe-Panorama kuzobonakala ku-Viewfinder.



5. Ukuthatha isithombe sepanorama, cindezela inkinobho ethi Shutter. Uzobona ibha empunga ohlangothini lwesobunxele lwesikrini (Ukwakheka kwezwe) noma ngaphansi kwesikrini (Ukuma ngobude). Hambisa ikhamera phezulu naphansi (Isithombe) noma kwesokunxele nakwesokudla (Landscape). Njengoba uhambisa ikhamera, uzobona ukuqhubeka kwebha empunga ngaphansi kwesikrini. I-Panorama yakho kufanele ibe phakathi kuka-90 degrees no-180 degrees. Uma incane, noma uma uhambisa ikhamera ngokushesha okukhulu, uzobona umlayezo wephutha: “Iphutha Lebanga Lokushintsha.” Uma ungafuni ukuya kumadigri angu-180 agcwele, cindezela inkinobho yokuvala ukuze uyeke ukuthatha isithombe.

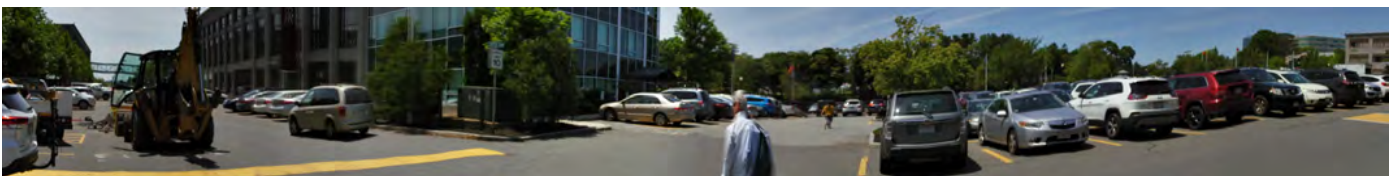

2.3.6 Ukudlula Kwesikhathi

Isici se-Time Lapse esikuvumela ukuthi usethe ikhamera ukuthi ithathe inombolo ethile yezithombe ngehora ngenani elikhethiwe lamahora. Uma ukuphela kwesikhathi sekuphelile, ikhamera izodala ividiyo. Ikhamera izothatha izithombe ngenani elilodwa ngehora kufika kwezingu-60 ngehora.


Ungakwazi futhi ukuthi ikhamera ithathe izithombe esikhathini esimisiwe usebenzisa isici sobude besikhathi esidlula isikhathi. Lokhu kusho ukuthi ikhamera ingathatha izithombe ihora elilodwa kufika emahoreni angama-24.




1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi yesithombe.

Isahluko 2. Izithombe Namavidiyo

2. Cindezela okuthi SET ukuze ufinyelele imenyu futhi uguqulele phansi kokuthi Ukudlula Kwesikhathi.

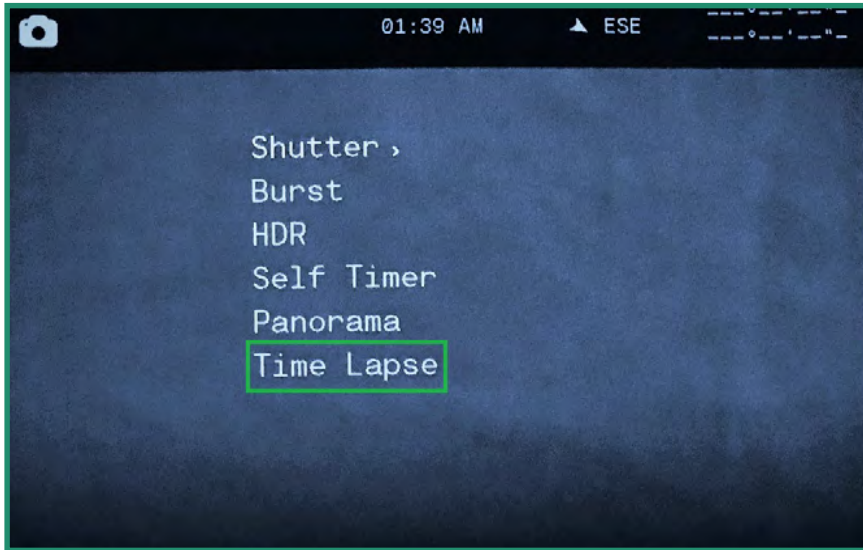


3. Guqula kwesokudla uye ku-Vula futhi kwesokudla futhi ukuze usethe Izinga.

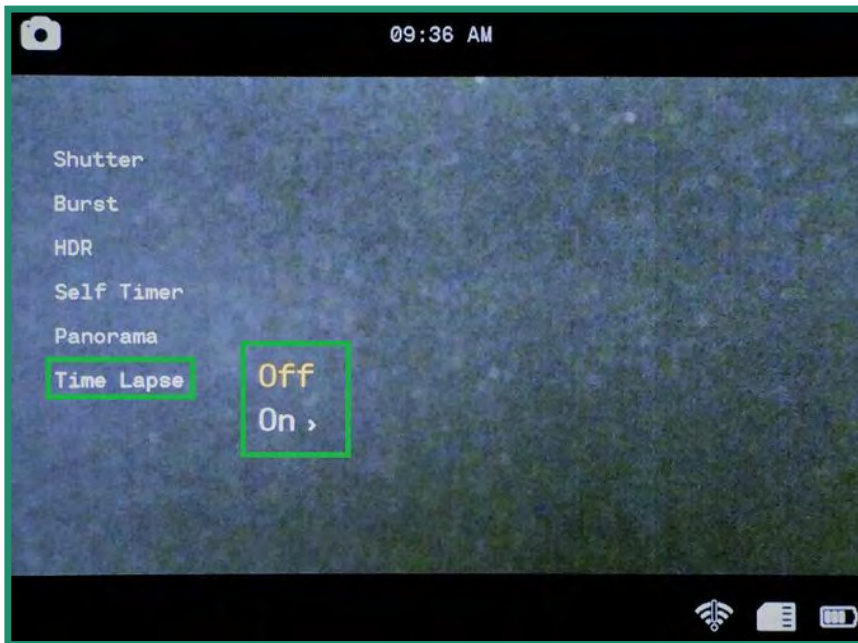


Isahluko 2. Izithombe Namavidiyo

4. Khetha Izinga ngokucindezela SET.

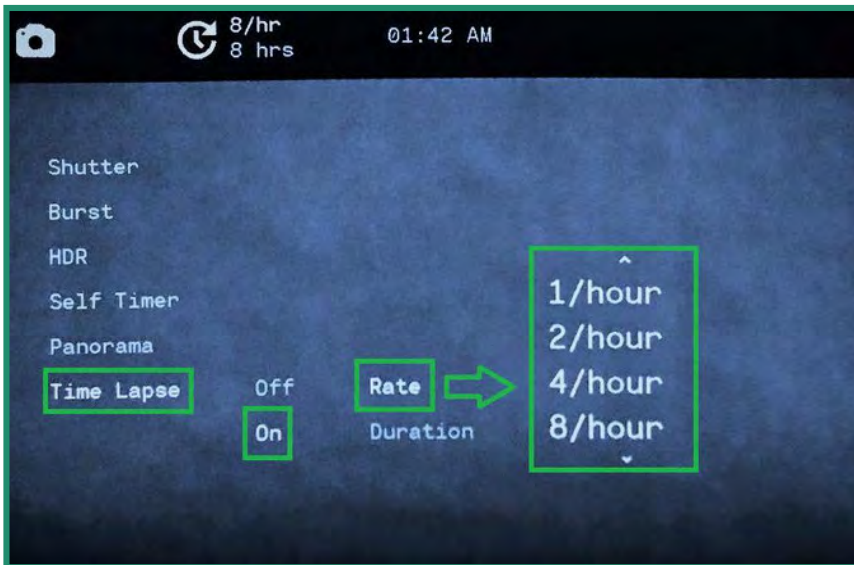


5. Shintshela phansi kokuthi Ubude besikhathi futhi kwesokudla ukuze ukhethe inani lamahora.

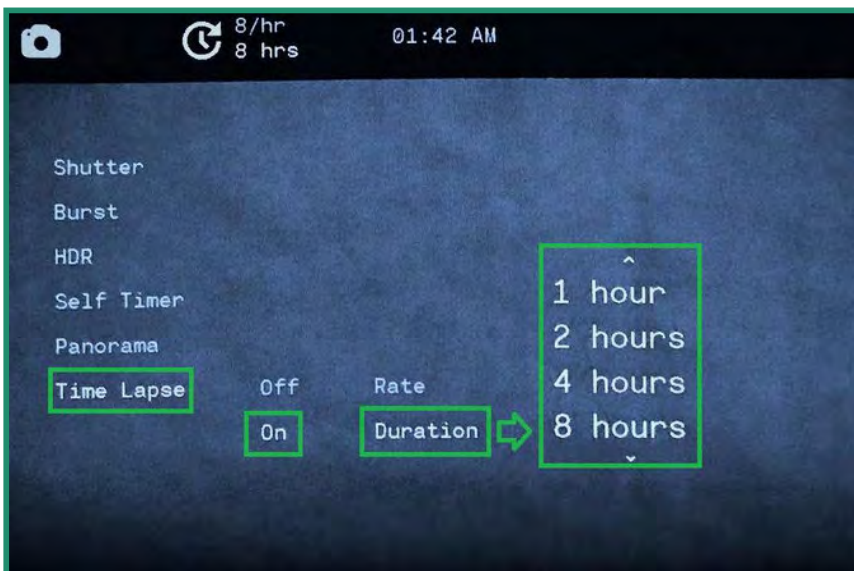

6. Guqula kwesokunxele kabili bese ucindezela u-SET ukuze uphume.

Isahluko 2. Izithombe Namavidiyo

7. Izilungiselelo zokudlula isikhathi zizobonakala phezulu esikrinini.

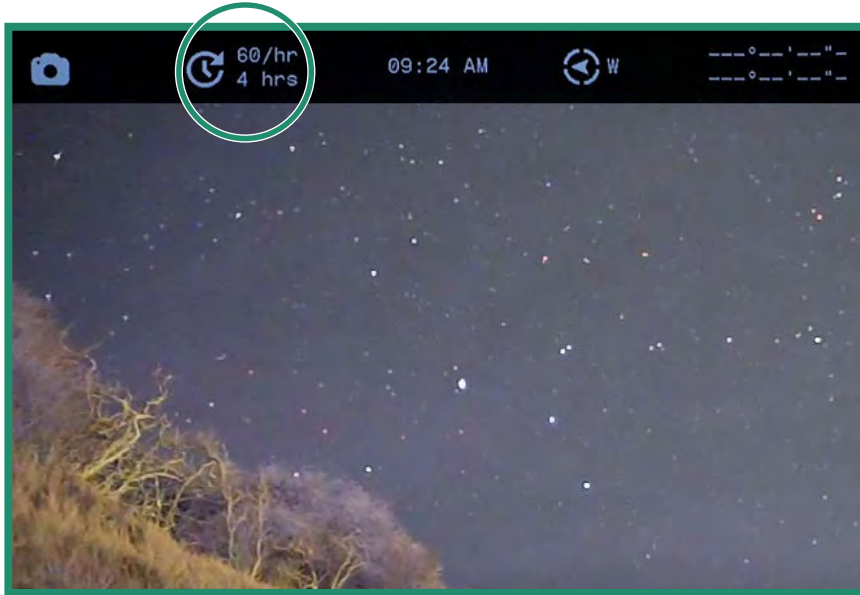

8. Ukuze uqale iseshini yokuphelelwa yisikhathi, beka ikhamera endaweni efanele indawo yakho bese ucindezela inkinobho ethi Shutter. Ikhamera izoqala ukuthwebula izithombe ngokusekelwe kuzilungiselelo zakho.

Qaphela: Zonke izici zihlala zikhethiwe uma ikhamera icishiwe bese ivulwa futhi.

2.4 Ukudubula Izithombe Namavidiyo: Izilungiselelo Ezithuthukile

Ikamera inezinye izilungiselelo ezengeziwe okufanele zikusize ngezidingo zakho zokudubula.

Qaphela: Lezi zilungiselelo ziyatholakala kokuthi Amamodi Wesithombe, Ividiyo, kanye ne-Loop. Isici Sokubuyekeza Ngokushesha sitholakala kuphela Kumodi Yesithombe.




2.4.1 Ukukhanya


Ungakwazi ukulungisa ukukhanya kwe-Viewfinder usebenzisa isici Sokugqama. Okuzenzakalelayo kuyi-Auto futhi ungayishintsha ibe phezulu, emaphakathi, noma ephansi. Izinga lokukhanya ku-Viewfinder lizoshintsha ngemodi yesigcawu ngayinye: Ubusuku, Ukuhlwa, noma Usuku.

Isahluko 2. Izithombe Namavidiyo

1. Zungezisa Izilungiselelo Ukudayela Kusithombe, Ividiyo, noma Imodi ye-Loop
2. Cindezela isikhathi eside inkinobho ethi SET ukuze ufinyelele imenyu

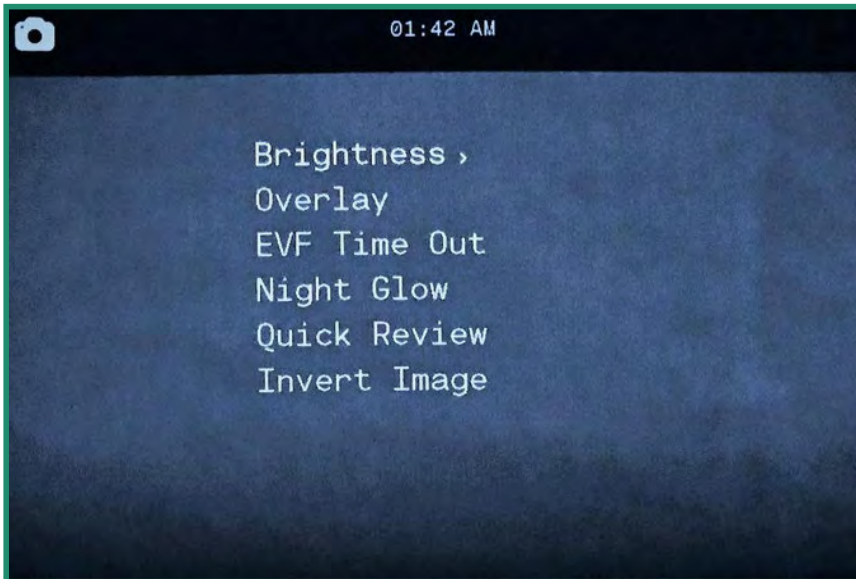

3. Guqula kwesokudla kokuthi Ukukhanya bese ukhetha inketho efanela iso lakho nesimo sakho bese ucindezela okuthi SET.

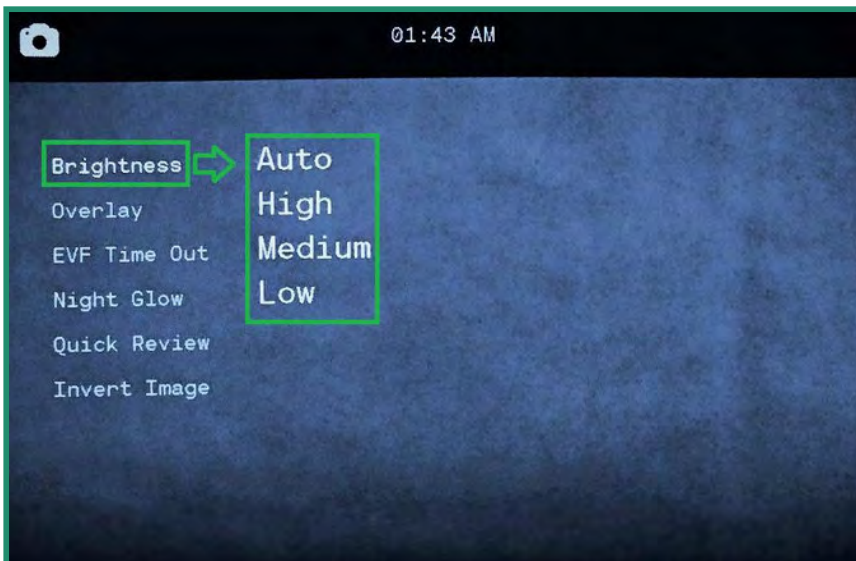

4. Cindezela okuthi SET futhi ukuze uphume kumenyu.

Isahluko 2. Izithombe Namavidiyo


2.4.2 Imbondela (AYITHOLAKALI KUWO WONKE AMAKHAMERA)

Imenyu Yembondela inezici ezikhethekile zokukusiza ukuthi uthathe izithombe namavidiyo anembe kakhulu futhi aleveli.


2.4.2.1 Ukugxila Phezulu

I-Focus Peak iwusizo lokugxila olubeka ukugqama okubomvu emaphethelweni ekugxilwe kuwo.

1. Vula ikhamera ngokuzungezisa Ukudayela Kwezilungiselelo ku-Isithombe, lvidiyo, noma Imodi ye-Loop.
2. Cindezela isikhathi eside inkinobho ethi SET ukuze ufinyelele imenyu.

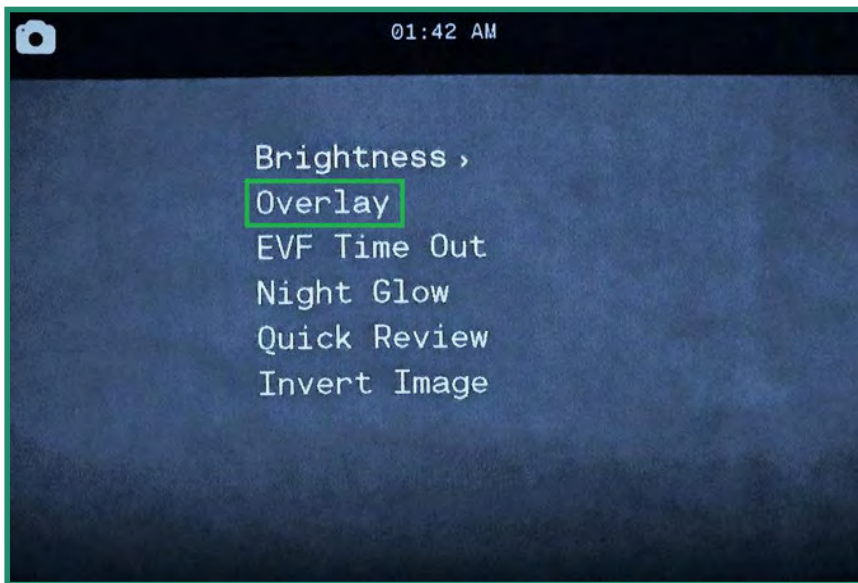


3. Shintshela phansi kokuthi Imbondela bese uguqulela kwesokudla naphansi uye ku-Focus Peak.

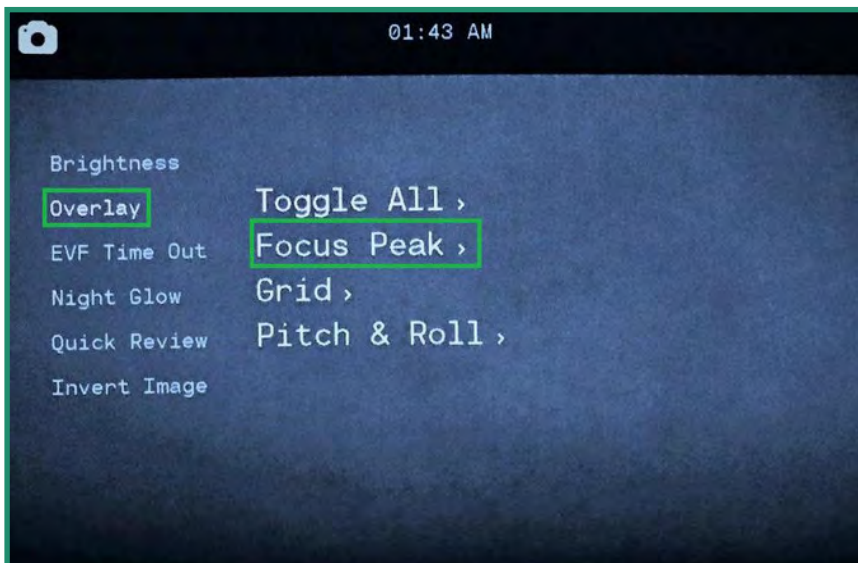


Isahluko 2. Izithombe Namavidiyo

4. Guqula kwesokudla ku-Focus Peak. Khetha Valiwe noma Vuliwe bese ucindezela SET.

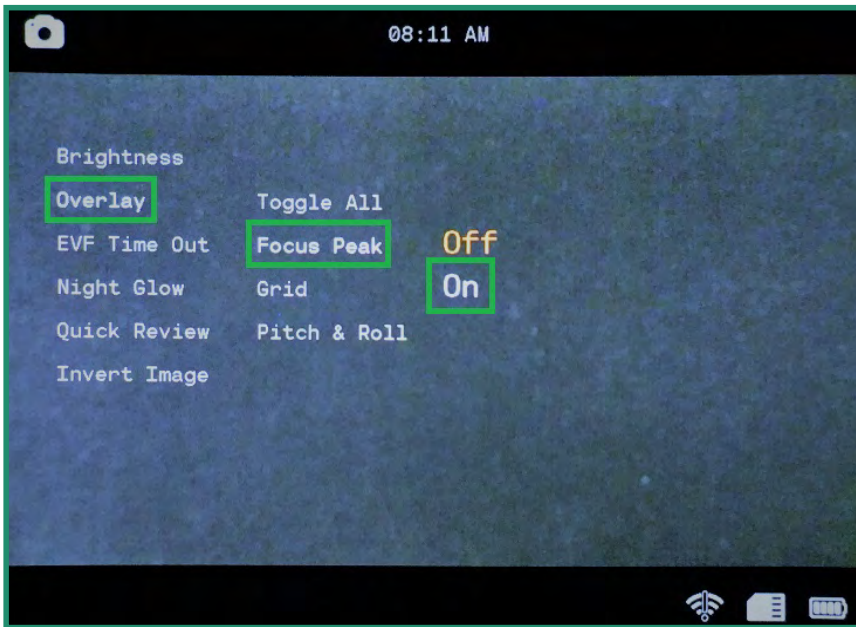

5. Guqula kwesokunxele bese ucindezela u-SET ukuze uphume kumenyu.
Manje uma ubheka ku-Viewfinder, uzobona umphetho obomvu lapho isihloko sakho sigxile khona.

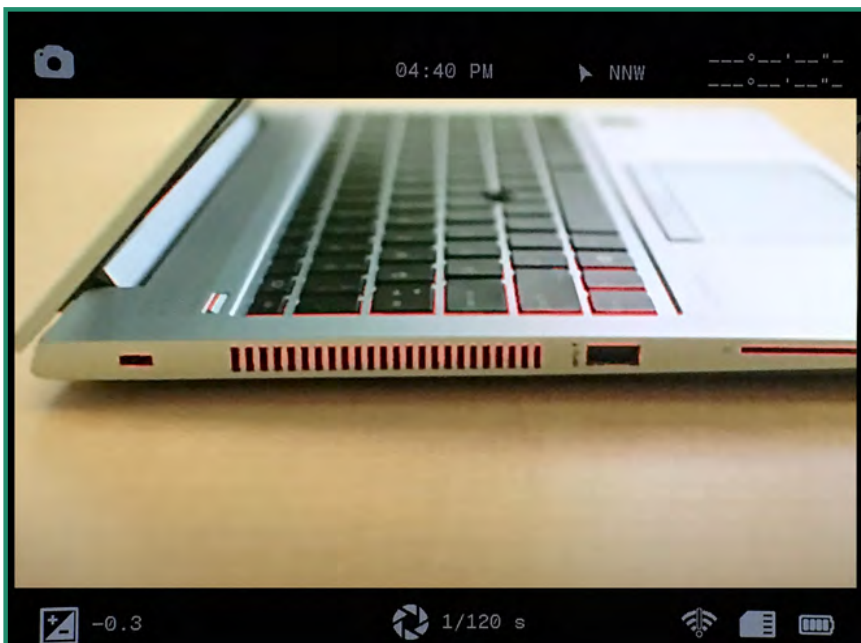


Isahluko 2. Izithombe Namavidiyo

2.4.2.2 Igridi (AYITHOLAKALI KUWO WONKE AMAKHAMERA)

Isici seGridi sihlukanisa i-Viewfinder ibe yizigaba eziyisishiyagalolunye kusetshenziswa igridi yemigqa emine. Igridi ingakusiza ukuthi uqondanise izihloko esithombeni noma kuvidiyo yakho kanye nezinsiza ekwakhiweni kwesithombe.

1. Vula ikhamera ngokuzungezisa Ukudayela Kwezilungiselelo ku-Isithombe, Ividiyo, noma Imodi ye-Loop.
2. Cindezela isikhathi eside inkinobho ethi SET ukuze ufinyelele imenyu.

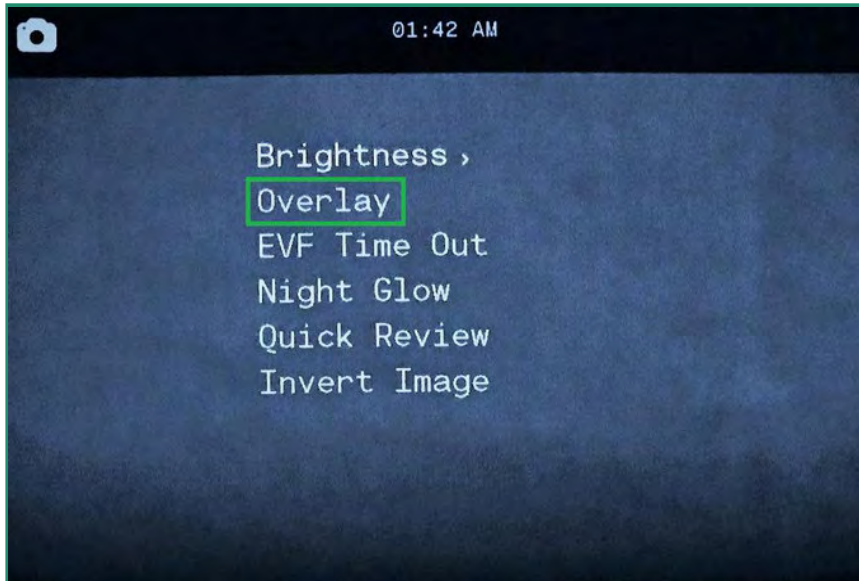

3. Guqulela phansi kokuthi Imbondela bese uguqulela kwesokudla naphansi uye kuGridi.



Isahluko 2. Izithombe Namavidiyo

4. Guqula kwesokudla futhi bese ukhetha Vuliwe bese ucindezela SET.



5. Guqula kwesokunxele bese ucindezela u-SET ukuze uphume. Igridi manje isizobonakala ku-Viewfinder.




Isahluko 2. Izithombe Namavidiyo


2.4.2.3 I-Pitch & Roll (AYITHOLAKALI KUWO WONKE AMAKHAMERA)

Isici se-Pitch & Roll sizosiza ukugcina ileveli yekhamera yakho, kokubili ngaphambili kuya emuva nahlangothini kuya kolunye.

1. Vula ikhamera ngokuzungezisa Ukudayela Kwezilungiselelo ku-Isithombe, lvidiyo, noma Imodi ye-Loop.
2. Cindezela isikhathi eside inkinobho ethi SET ukuze ufinyelele imenyu.

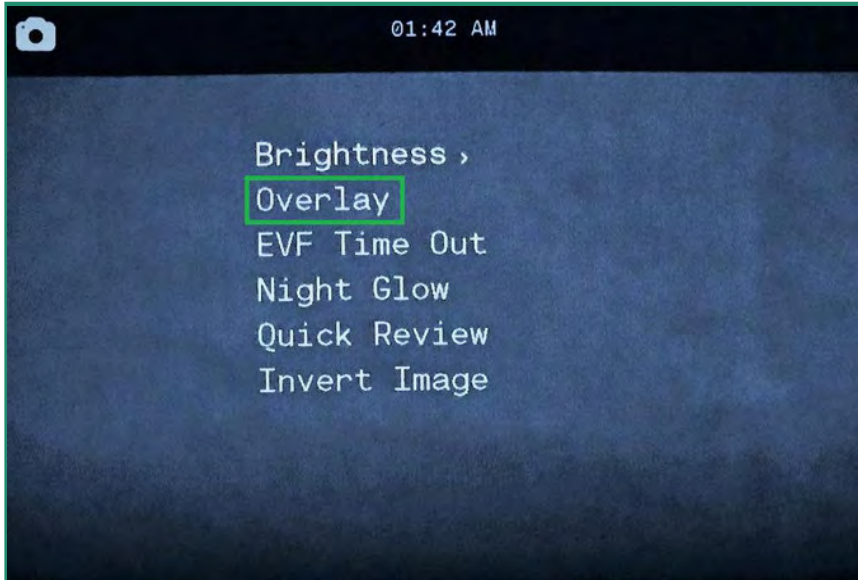

3. Shintshela phansi kokuthi Imbondela bese kwesokudla naphansi ku-Pitch & Roll.

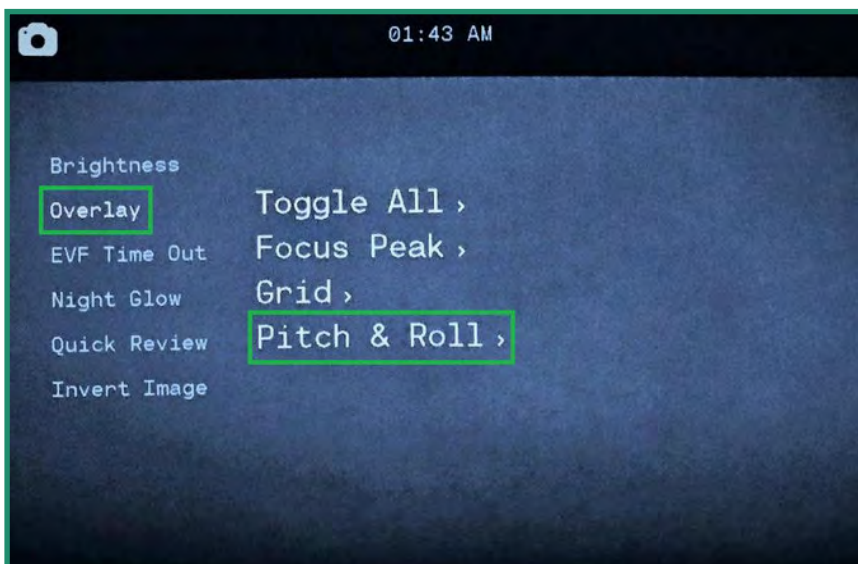


Isahluko 2. Izithombe Namavidiyo

4. Guqula kwesokudla uye ku-Vula bese ucindezela u-SET.




5. Guqula kwesokunxele bese ucindezela u-SET ukuze uphume. Isici se-Pitch & Roll manje sesizobonakala ku-Viewfinder.

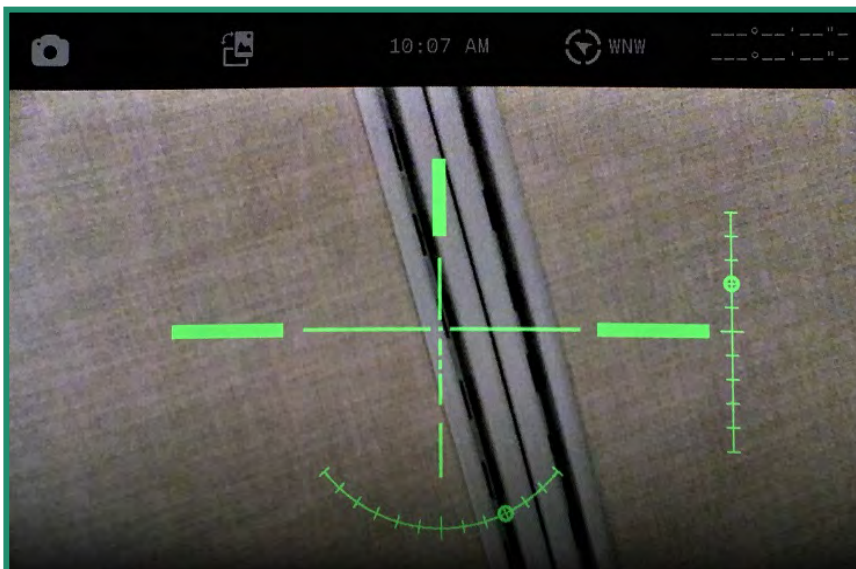

Isahluko 2. Izithombe Namavidiyo

6. Ukulinganisa ikhamera, hambisa kuze kuvele inkomba ekugcineni kwamabha aqondile navundlile.

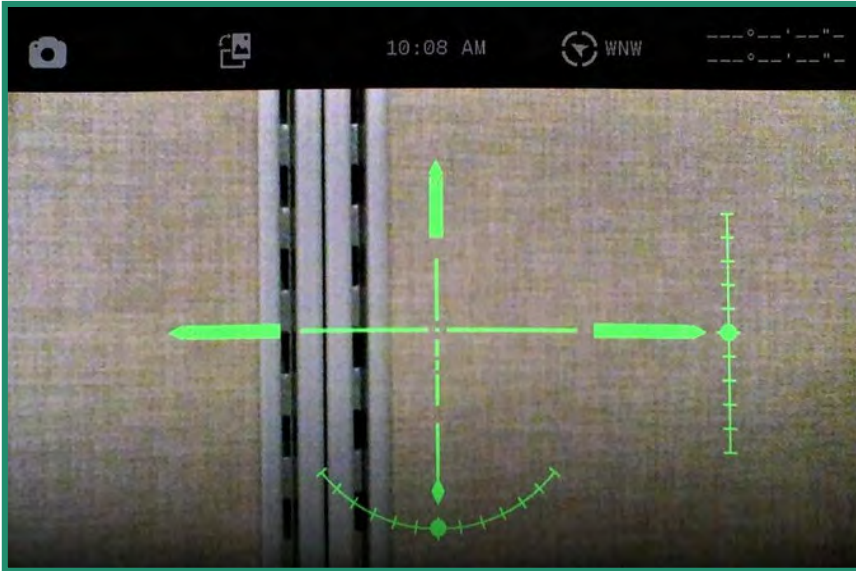


Qaphela: Zonke izici zihlala zikhethiwe uma ikhamera icishiwe bese ivulwa futhi.

2.4.2.4 Guqula Konke (AKUTHOLAKALI KUWO WONKE AMAKHAMERA)


Inketho ye-Toggle All ivula futhi ivale zontathu izici Imbondela: I-Focus Peak, Igridi ne-Pitch & Roll.

1. Ukuvula inketho ethi Guqula Konke, zungezisa Ukudayela Izilungiselelo ku-Isithombe, Ividiyo, noma Imodi ye-Loop.
2. Cindezela isikhathi eside inkinobho ethi SET ukuze ufinyelele imenyu.

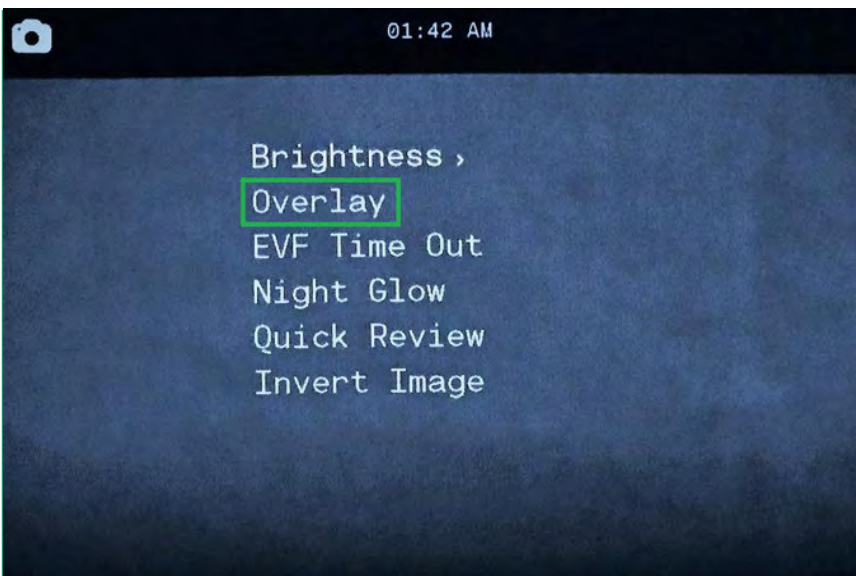

Isahluko 2. Izithombe Namavidiyo

3. Shintshela phansi kokuthi Imbondela bese kwesokudla ukuze ukhethe inketho ethi Guqula Konke.

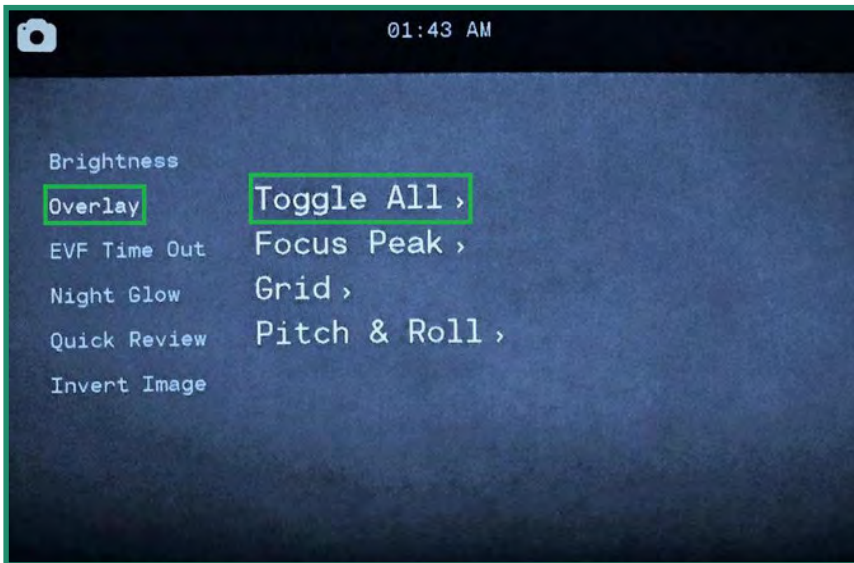


4. Khetha Konke Kuvaliwe noma Konke Kuvuliwe bese ucindezela SET.



Isahluko 2. Izithombe Namavidiyo

5. Guqula kwesokunxele bese ucindezela u-SET ukuze uphume. Konke okukhethiwe Kwembondela kuzobonakala ku-Viewfinder.

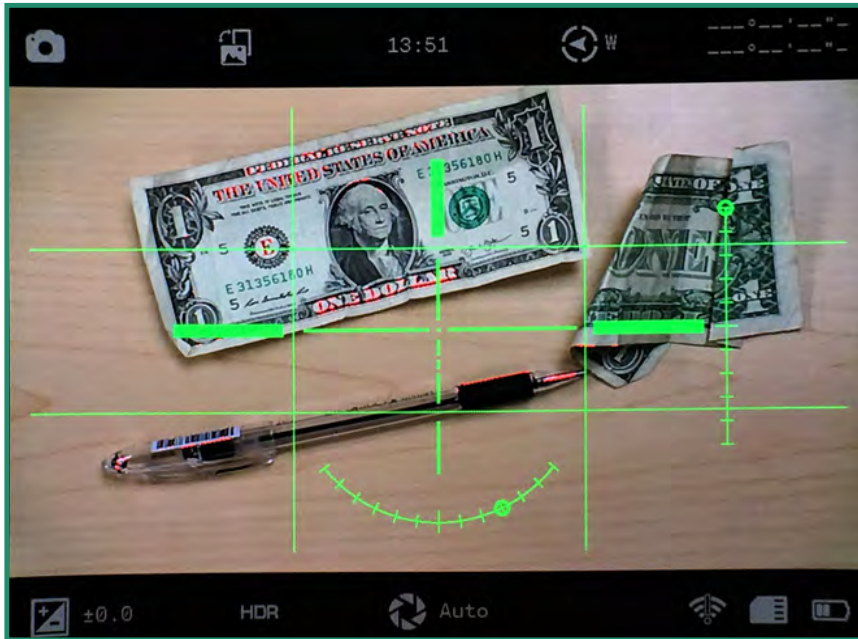

Qaphela: Zonke izici zihlala zikhethiwe uma ikhamera icishiwe bese ivulwa futhi.

2.4.3 I-EVF Isikhathi Siphelile

Ungasetha i-Electronic Viewfinder (EVF) ukuthi ivale ngezikhathi ezithile. Ikhamera izohlala ivuliwe, kodwa i-EVF izocisha ngemva kwesikhathi osisethile. Ukusetha inketho ye-EVF Time Out kunciphisa ukusetshenziswa kwebhethri lakho.


I-Electronic Viewfinder iqukethe inzwa yokusondelana (AYITHOLAKALI KUWO WONKE AMAKHAMERA) evula noma ivale ngokuzenzakalelayo i-Viewfinder ukuze ilondoloze impilo yebhethri. Uma inzwa ye-proximity ivinjwe iso lakho, izovula i-Viewfinder.



1. Vula ikhamera ngokuzungezisa Ukudayela Kwezilungiselelo ku-Isithombe, Ividiyo, noma Imodi ye-Loop.

Isahluko 2. Izithombe Namavidiyo

2. Cindezela isikhathi eside inkinobho ethi SET ukuze ufinyelele imenyu.

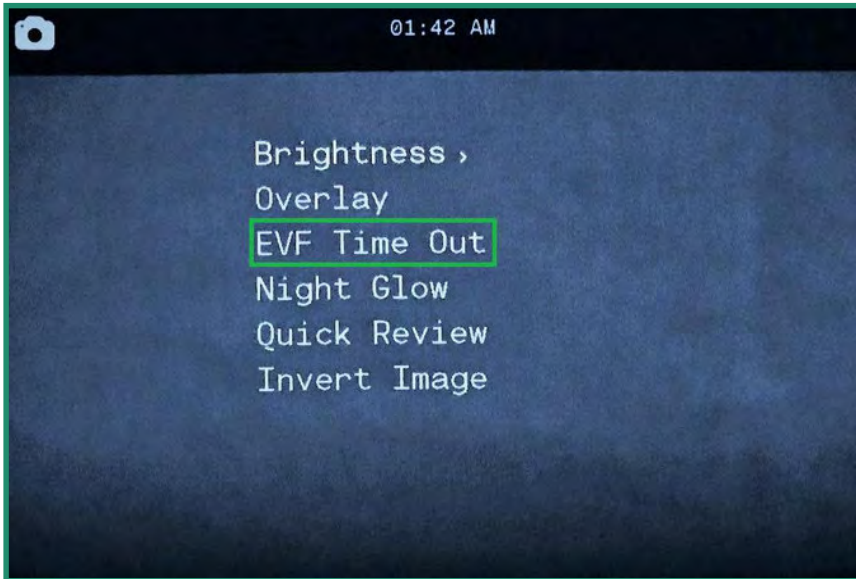

3. Shintshela phansi ku-EVF Time Out bese uguqulela kwesokudla uye kuzinketho ze-Time Out.



4. Shintshela phansi kwinketho oyifunayo bese ucindezela u-SETHA kabili ukuze ukhethe Ukuvala Isikhathi bese uyaphuma.

Qaphela: Ukulungiselelwa kwe-EVF akuveli ku-Viewfinder.


Isahluko 2. Izithombe Namavidiyo

2.4.4 Ukukhanya Kwasebusuku


Kunezilungiselelo ezintathu kumenyu Yokukhanya Kwasebusuku ongazisebenzisa Nesigcawu Sasebusuku:

1. **Greyscale** - lesi silungiselelo silungisa i-Viewfinder ukuze ibe mnyama futhi ikuvumela ukuba uthathe izithombe noma amavidiyo uma kungekho ukukhanya okwenziwa futhi kungenakukhanya kwemvelo. Lokhu kungaba usizo ezimweni zokuzingela.
2. **Okuluhlaza** - njengoba iso lomuntu lizwela kakhulu ekukhanyeni okuluhlaza, ukulungiselelwa Okuluhlaza kususa ukuphazamiseka okungenzeka ngemibala.
3. **Umbala Wasebusuku** - lesi silungiselelo silungisa i-Viewfinder ukuze ibe umbala phakathi nezimo zasebusuku. Lesi silungiselelo sinenzuzo lapho ukuzwa imibala kubalulekile, njengalapho umisa isikebhe ebusuku.

Linga ngesethingi ngayinye yalezi kuSigcawu Sasebusuku ukuze ubone ukuthi iyiphi esebenza kangcono kusimo sakho.

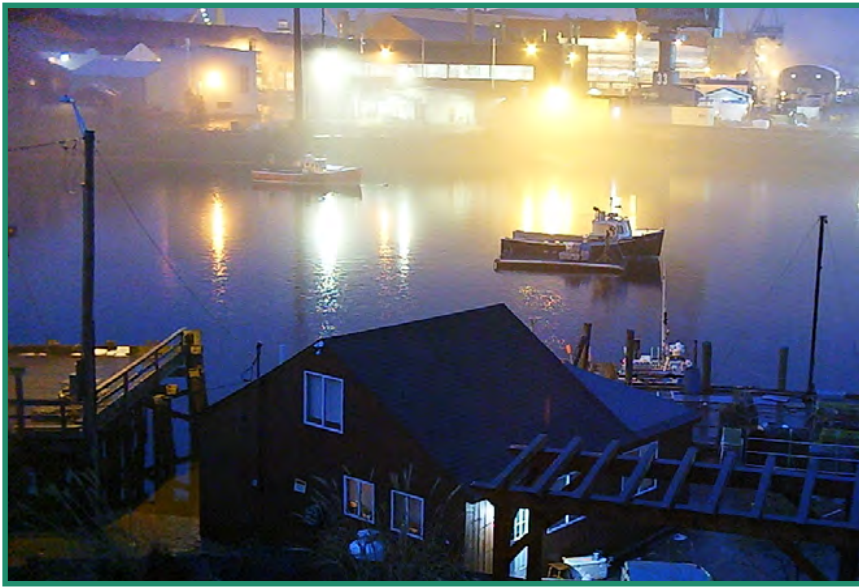


1. Ukuze uguqule izilungiselelo Zokukhanya Kwasebusuku, qala ngokujikisa Indandatho Yenkundla ibe Ebusuku.

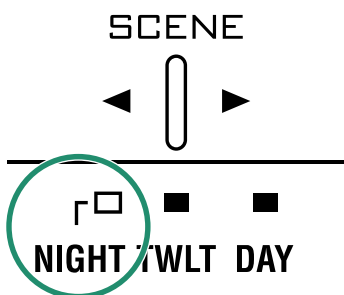

2. Vula ikhamera ngokuzungezisa Izilungiselelo Ukudayela ku-Isithombe, Ividiyo, noma Imodi ye-Loop.

Isahluko 2. Izithombe Namavidiyo

3. Cindezela isikhathi eside inkinobho ethi SET ukuze ufinyelele imenyu.

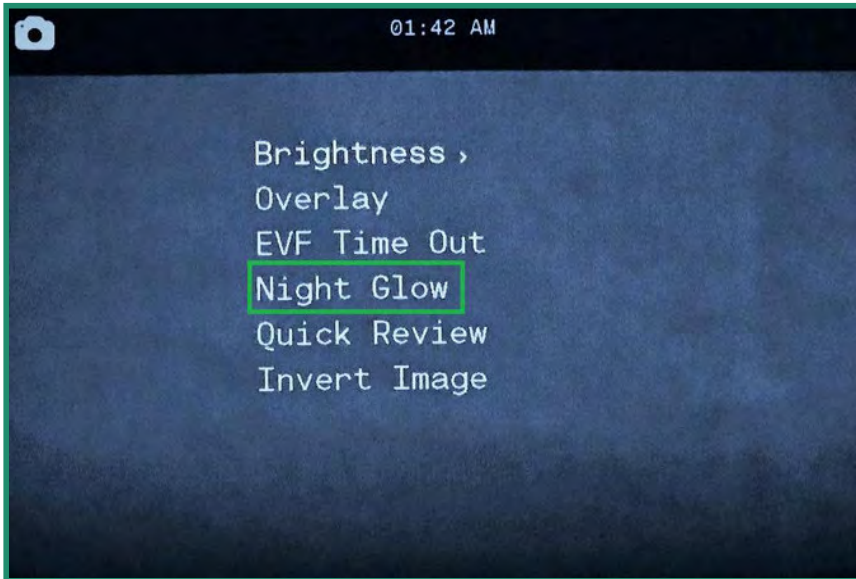

4. Shintshela phansi kokuthi Ukukhanya Kwasebusuku futhi kwesokudla uye ezinkethweni.



5. Khetha inketho efaneleka kangcono indawo yakho bese ucindezela okuthi SET futhi SET futhi ukuze uphume.

Qaphela: Isilungiselelo Sokukhanya Kwasebusuku asiveli Kusitholi Sokubuka.

Isahluko 2. Izithombe Namavidiyo

2.4.5 Ukubuyekeza Ngokushesha

Isici Sokubuyekeza Ngokushesha sikuvumela ukuthi ubuyekeze isithombe ngokushesha ngemva kokusithatha isekhondi elingu-1, 2, noma 4.

Qaphela: Lesi sici sisebenza kuphela Kwimodi Yesithombe.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi yesithombe.




2. Cindezela isikhathi eside inkinobho ethi SET ukuze ufinyelele imenyu.



3. Shintshela phansi kokuthi Ukubuyekeza Okusheshayo futhi uye ngqo izinketho.

4. Shintshela phansi kwinketho oyifunayo bese ucindezela okuthi SET futhi SET futhi ukuze uphume.

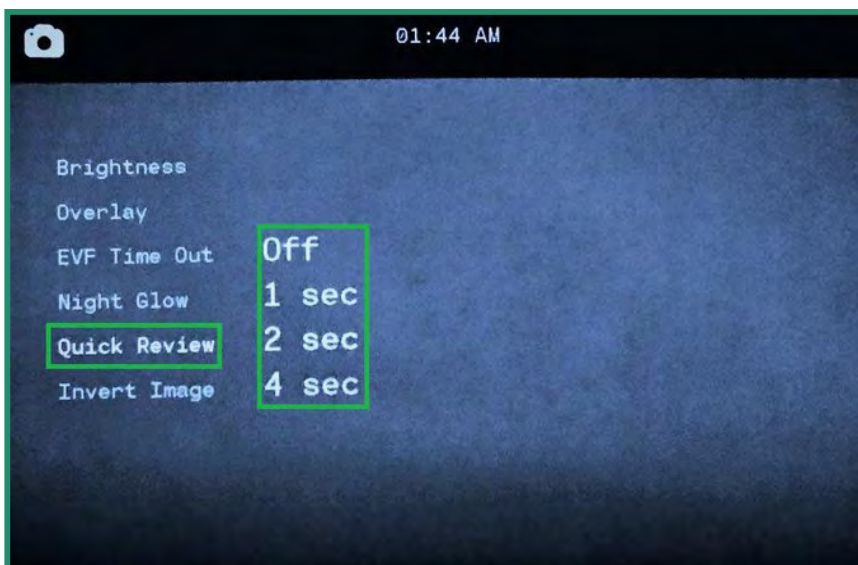


Isahluko 2. Izithombe Namavidiyo

2.4.6 Guqula isithombe (imenyu)

Isici se-Invert Image (imenyu) sikuvumela ukuthi ufunde amamenyu lapho ikhamera ibheke phansi.

1. Vula ikhamera ngokuzungezisa Ukudayela Kwezilungiselelo ku-Isithombe, Ividiyo, noma Imodi ye-Loop
2. Cindezela isikhathi eside inkinobho ethi SET ukuze ufinyelele imenyu.
3. Guqula ukuze Uguqule isithombe bese uguqulela kwesokudla ukuze uvule inketho. Cindezela okuthi SET futhi SET futhi ukuze uphume.
4. Imenyu manje izophendulwa.

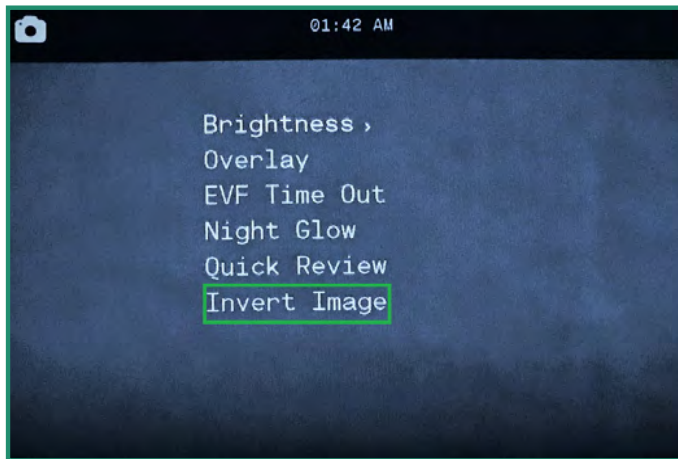

Qaphela: Zonke izici zihlala zikhethiwe uma ikhamera icishiwe bese ivulwa futhi.



Isahluko 2. Izithombe Namavidiyo

2.5 Amavidiyo Wokudubula: Izilungiselelo

2.5.1 EIS

I-Electronic Image Stabilization (EIS) isebenzisa ukucutshungulwa kwe-elektronikhi ukuzinzisa ividiyo. Uma ukulungiselelwa kwe-EIS kuvuliwe, kuzonciphisa ukufiphala futhi kunxephezele ngokunyakaziswa kwekhamera.

1. Vula ikhamera ngokuzungezisa Ukudayela Kwezilungiselelo kuye kumodi yevidiyo noma ye-Loop.
2. Cindezela okuthi SET ukuze ufinyelele imenyu.
3. Guqula kwesokudla uvule i-EIS ukuze uvule inketho ethi Vala noma Vula. Cindezela okuthi SET ukuze ukhethe bese u-SET futhi ukuze uphume.
4. Ukulungiselelwa kwe-EIS kungabonakala uma ubheka ku-Viewfinder.

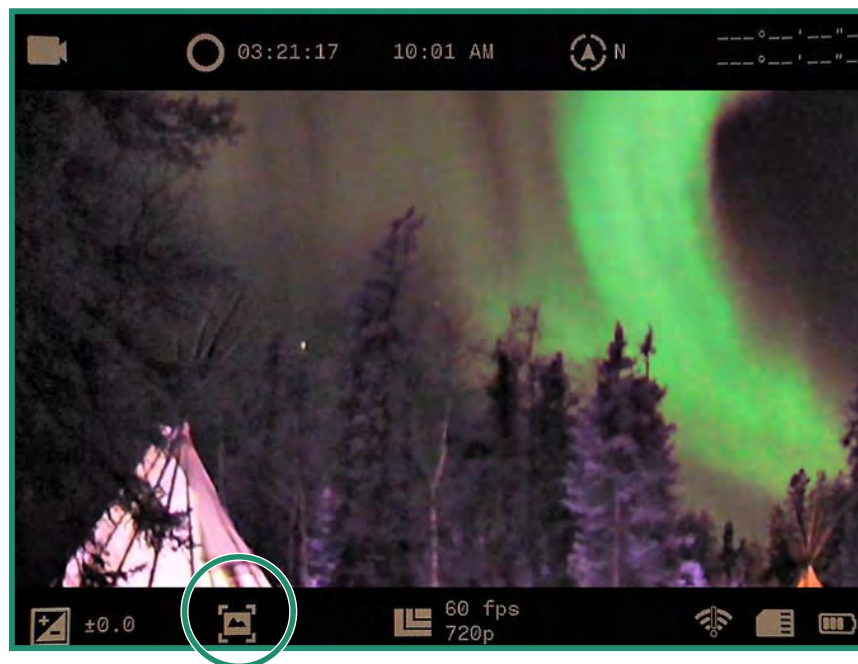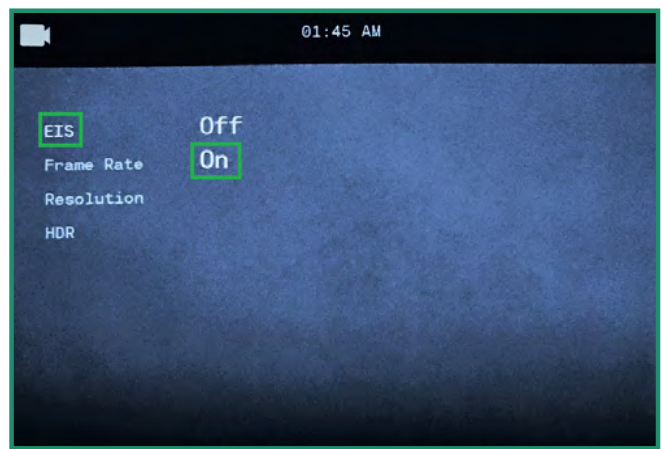



Isahluko 2. Izithombe Namavidiyo

2.5.2 Ukusetha Izinga Lohlaka


Izinga lozimele isivinini ikhamera erekhoda ngaso ividiyo.



1. Vula ikhamera ngokuzungezisa Ukudayela Kwezilungiselelo kuye kumodi yevidiyo noma ye-Loop.
2. Cindezela okuthi SET ukuze ufinyelele imenyu.
3. Guqulela ku-Frame Rate futhi uye ngqo kuzinketho ze-FPS.
4. Khetha isilinganiso esifanela kangcono indawo yakho.
Cindezela okuthi SET, bese u-SET futhi ukuze uphume.

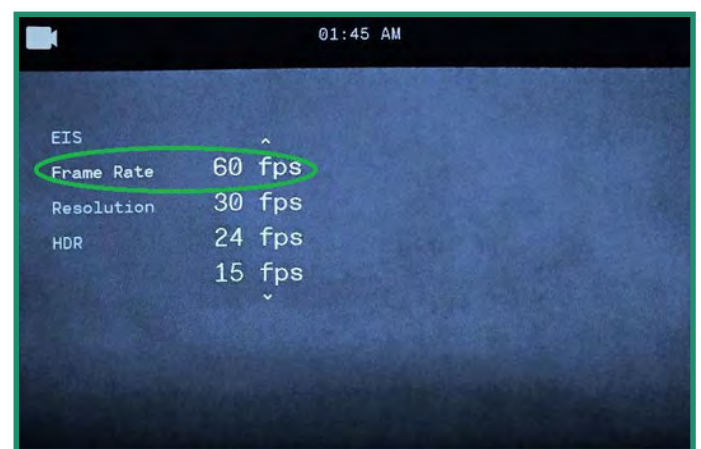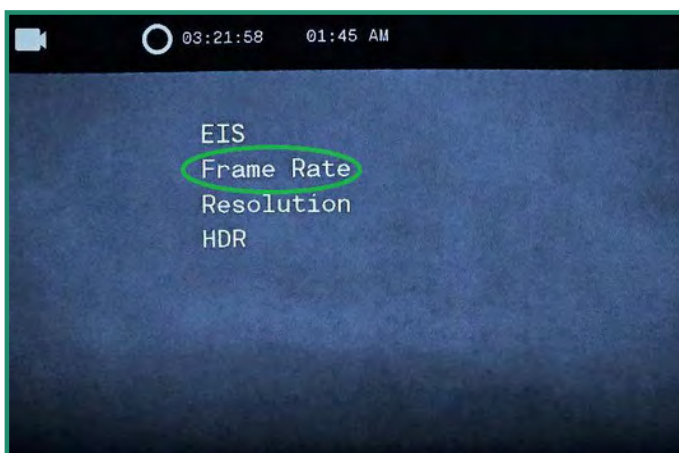

Qaphela: I-60 fps ngokuvamile izokhiqiza ividiyo ebukeka kahle. Ungasetha izinga lozimele ukusuka ku-60 fps ukuya ku-Slo Mo. Izinga lozimele lizoboniswa ezansi kusitholi sokubuka. Ukuze uthole imiphumela ehamba phambili uma usebenzisa isilungiselelo Sosuku Ekukhalazeni Kwesigcawu, khetha i-60 fps. Ngesilungiselelo se-Twilight noma Ebusuku, khetha i-30 fps noma kancane.

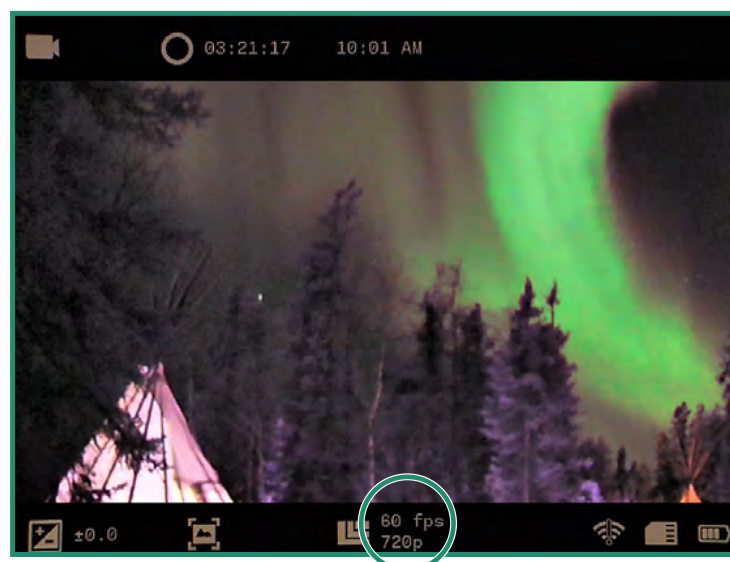


Isahluko 2. Izithombe Namavidiyo

2.5.3 Isinqumo


Ikhamera inezinqumo ezimbili zevidiyo: 720p kanye ne-360p.



1. Vula ikhamera ngokuzungezisa Ukudayela Kwezilungiselelo kuye kumodi yevidiyo noma ye-Loop.
2. Cindezela okuthi SET ukuze ufinyelele imenyu.
3. Guqulela ekuxazululeni nelungelo lokukhetha i-720p noma i-360p. Cindezela okuthi SET futhi SET futhi ukuze uphume.

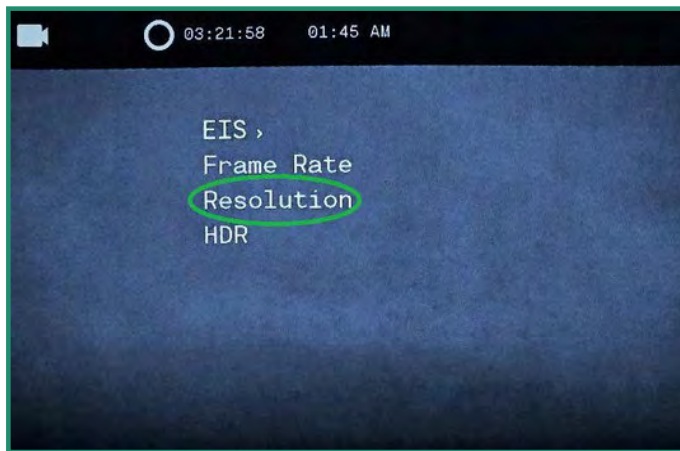

4. Ukulungiswa kuzobonakala ngezansi kwe-Viewfinder.

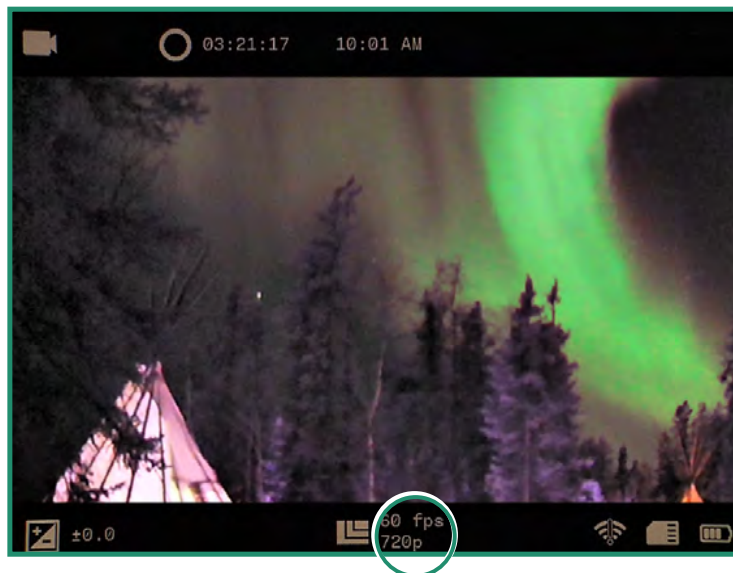

Qaphela: Zonke izici zihlala zikhethiwe uma ikhamera icishiwe bese ivulwa futhi.


Isahluko 2. Izithombe Namavidiyo

2.5.4 HDR

I-HDR imele i-High Dynamic Range. Lena indlela esetshenziswa ekuthwebuleni izithombe nasekufanekiseni ukukhiqiza kabusha ukuguquguquka okukhulu kokukhanya kunalokho okungakhonakala ngamasu ajwayelekile ezithombe zedijithali noma wokuthwebula izithombe. I kuvumela ukuthi uthwebule imininingwane eyengeziwe ezindaweni ezikhanyayo nezimnyama.



1. Vula ikhamera ngokuzungezisa Ukudayela Kwezilungiselelo kuye kumodi yevidiyo noma ye-Loop.
2. Cindezela okuthi SET ukuze ufinyelele imenyu.
3. Guqulela ku-HDR bese kwesokudla ukuze ukhethe Vuliwe noma Vala. Cindezela okuthi SET ukuze ukhethe bese u-SET futhi ukuze uphume.

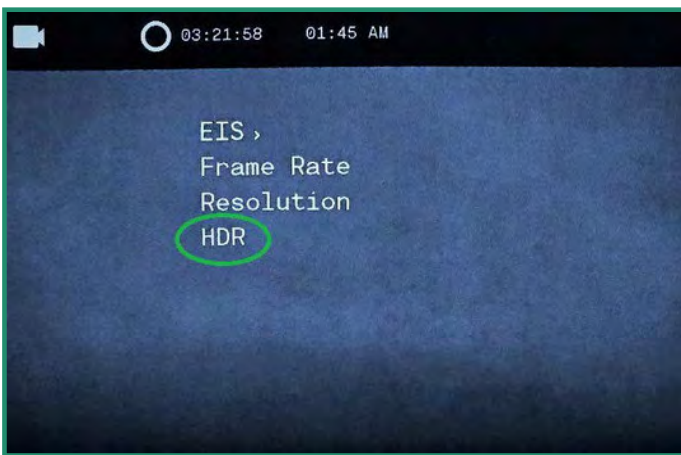

4. Isithonjana se-HDR sizobonakala ngezansi kwe-Viewfinder.



Isahluko 3. Iluphu Imodi


I-Loop Mode ikuvumela ukuthi uthwebule ividiyo eyenziwe yasebenza ngesicupha. I-trigger ingaba inkinobho yokuvala noma ukushaqeka (AKUTHOLAKALI KUWO WONKE AMAKHAMERA) kukhamera efana ne-recoil evela kusibhamu.

I-Loop Mode inezinketho ezifanayo njengemodi Yevidiyo: "EIS", "Ukusethe Izinga Lozimele", "Ukuxazulula" kanye "ne-HDR".

3.1 Qalisa Uhlobo

Ungasetha i-Trigger ukuthi icushwe inkinobho yokuvala noma inzwa.

1. Ukuze usethe Uhlobo Lwe-trigger, zungezisa Ukudayela Kwezilungiselelo kumodi ye-Loop.

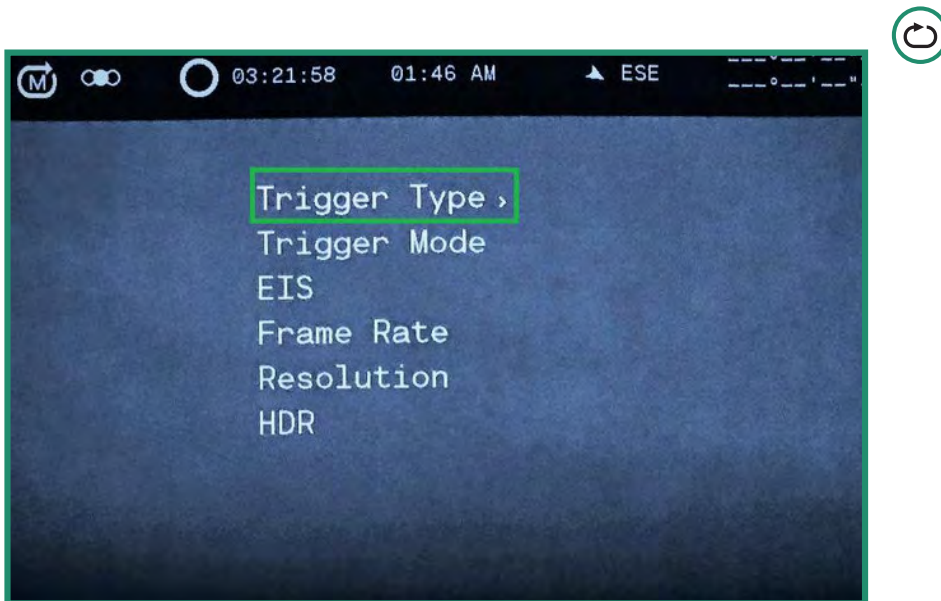


2. Cindezela okuthi SET ukuze ufinyelele imenyu ye-Loop.

Isahluko 3. Iluphu Imodi

3. Guqula kwesokudla ku-Trigger Mode ukuze ukhethe Ukuvala noma Okuzenzakalelayo (AKUTHOLAKALI KUWO WONKE AMAKHAMERA).

Cindezela okuthi SET ukuze ukhethe bese u-SET futhi ukuze uphume.

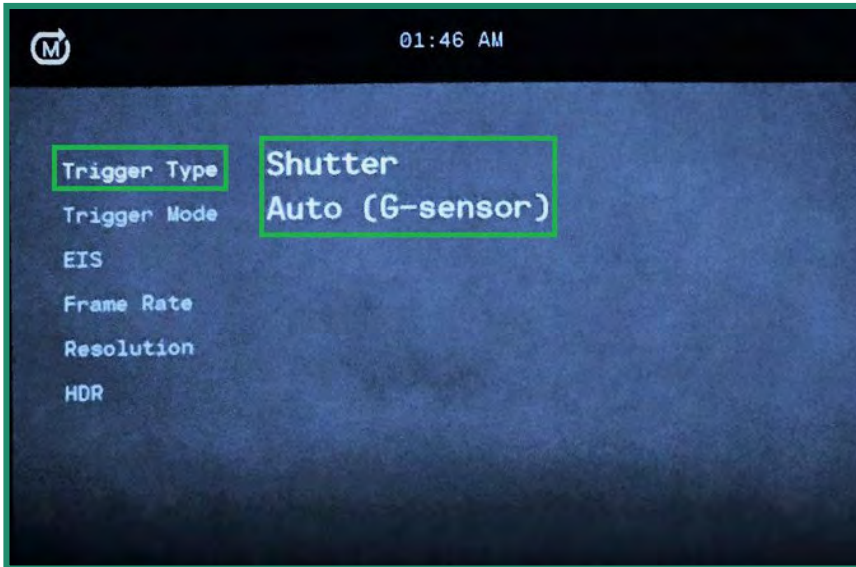

4. Izilungiselelo ze-Trigger zizobonakala ku-Viewfinder.



Qaphela: Zonke izici zihlala zikhethiwe uma ikhamera icishiwe bese ivulwa futhi.

Isahluko 3. Iluphu Imodi


3.2 Qalisa Imodi

Ungasetha i-Trigger Mode ibe izinketho ezintathu ezihlukene zesikhathi:

- Ngaphambi - irekhoda imizuzwana engu-30 ngaphambi kwe-trigger
- Maphakathi - irekhoda imizuzwana eyi-15 ngaphambi nangemizuzwana eyi-15 ngemuva kwe-trigger
- Ngemuva - irekhoda imizuzwana engama-30 ngemuva kwe-trigger



1. Ukusetha i-Trigger Mode, zungezisa Ukudayela Kwezilungiselelo ku-Loop Mode.
2. Cindezela okuthi SET ukuze ufinyelele imenyu.
3. Guqula kwesokudla ungene ku-Trigger Mode bese ucindezela u-SET ukuze ukhethe Imodi kanye ne-SET futhi ukuze uphume.
4. I-Trigger Mode izobonakala phezulu kwesokunxele se-Viewfinder.

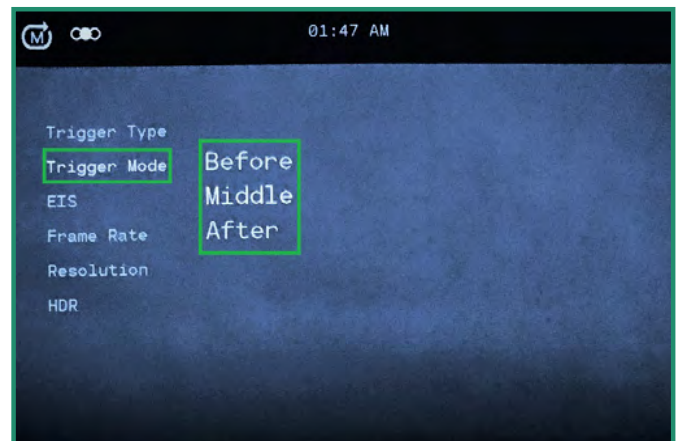


Isahluko 4. Imodi ye-WiFi/Izilungiselelo

4.1 Mayelana


Inketho ethi Mayelana ibonisa ulwazi mayelana nekhamera yakho.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.
2. Imenyu ye-WiFi/Izilungiselelo iyavela.

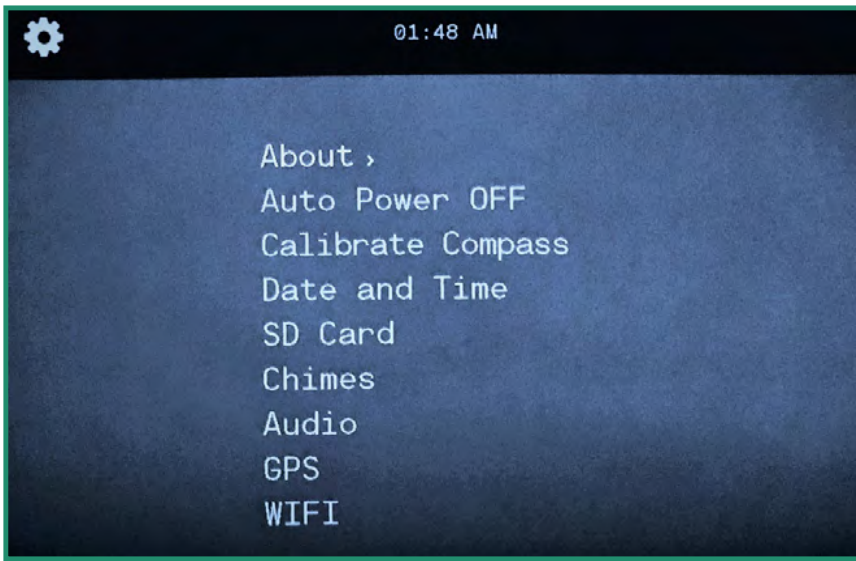

Qaphela: Ukuze uphume kumenyu ye-WiFi/Izilungiselelo, vele uphendukise Ukudayela Izilungiselelo uye kwenye Imodi.

3. Guqula kwesokudla uvule okuthi Mayelana ukuze ufinyelele imenyu.

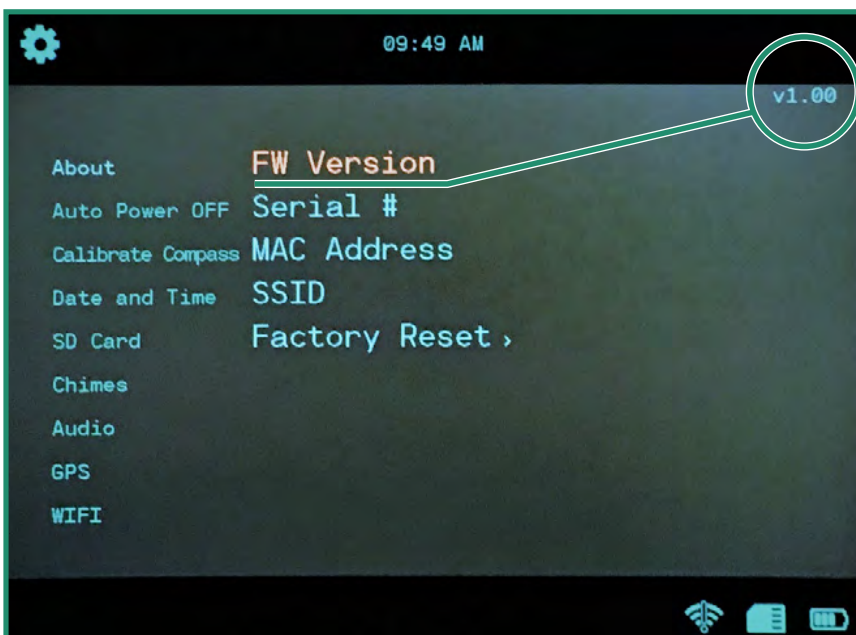

Isahluko 4. Imodi ye-WiFi/Izilungiselelo

4.1.1 Ukusetha kabusha kwasefekthri

Ukusetha kabusha kwasefekthri kubuyisela ikhamera kuzilungiselelo zayo ezimisiwe.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.
2. Guqula kwesokudla kokuthi Mayelana futhi phansi ukuze Ukusetha Kabusha Kwasekuqaleni. Khetha okuthi 'Yebo' ukuze usethe kabusha ikhamera yakho.
3. Uma Ukusetha Kabusha Kwasekuqaleni kuqediwe, uzobuyela kumenyu yangaphambilini. Cindezela okuthi SET ukuze uphume kumenyu. Vala ikhamera yakho bese uyivula futhi ukuze uqedele Ukusetha Kabusha Kwasekuqaleni.




4.2 Amandla Azenzakalelayo AVALWE

Inketho yokuvala amandla ngokuzenzakalelayo ivala ikhamera ngokuzenzakalelayo kumafreyimu wesikhathi okuthi Akusoze, imizuzu emi-5, imizuzu eyi-10, noma imizuzu engama-20. Isilungiselelo esimisiwe sithi Ungalokothi.



1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.

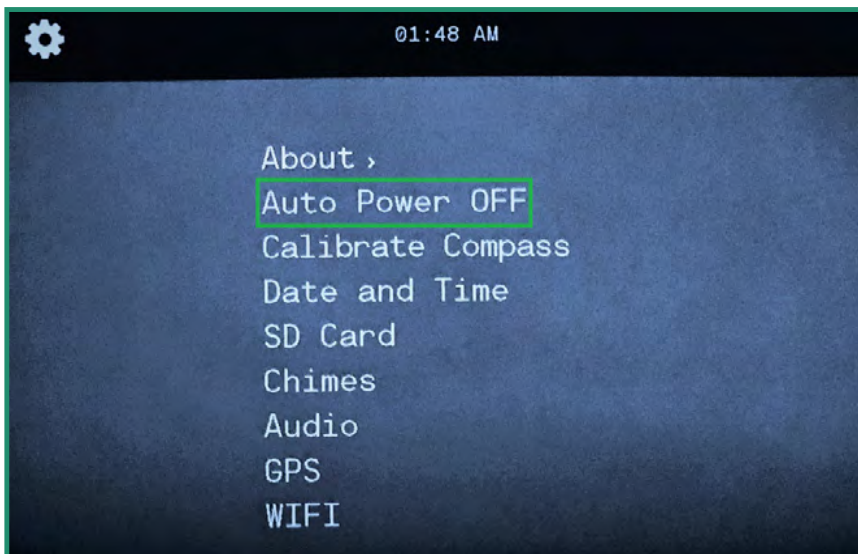

Isahluko 4. Imodi ye-WIFI/Izilungiselelo

2. Shintshela phansi kokuthi UVALE Ngokuzenzakalelayo futhi uye kwesokudla uye kuzinketho zokuvala Amandla.




3. Shintshela phansi kwinketho efaneleka kangcono ukusebenzisa ikhamera yakho bese ucindezela okuthi SET.
4. Vula Ukudayela Izilungiselelo kwenye Imodi ukuze uphume kumenyu.

4.3 Ikhamipasi (AYITHOLAKALI KUWO WONKE AMAKHAMERA)


Ikhamera inekhamipasi kagesi elinganiselwe efekthri. Uma uzwa sengathi ikhamipasi yakho icishiwe ungayilinganisa kabusha ngokwenza.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.

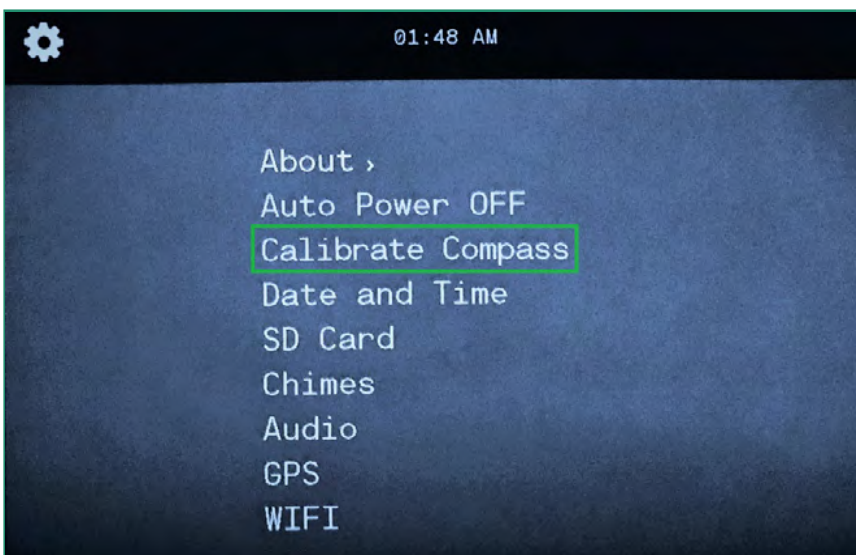

Isahluko 4. Imodi ye-WiFi/Izilungiselelo

2. Shintshela phansi kokuthi Calibrate Compass futhi kwesokudla ukuze ufinyelele imiyalelo egqwayizayo.

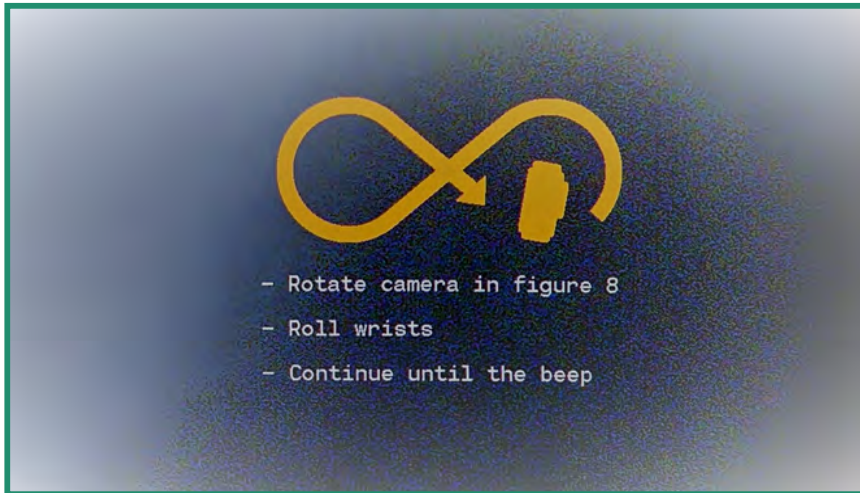

3. Uma ulinganise kahle, uzobona lo mlayezo: "Ukulinganisa Kwekhampasi Kuphumelele."

Uma ikhampasi ihluleka ukulinganisa, uzozwa umsindo obhodlayo futhi ubone umlayezo othi: "Phinda uzame ukulinganisa ikhampasi."


4.4 Idethi Nesikhathi

Ukusetha usuku nesikhathi, bheka "Isigaba 1.5 Ukusetha Usuku Nesikhathi" ekhasini 15. Ungakwazi futhi ukusetha usuku nesikhathi bese ushintsha ifomethi ngaphansi kwe-GPS Set.

4.4.1 Isethi ye-GPS (AYITHOLAKALI KUWO WONKE AMAKHAMERA)

Ungakwazi ukwenza i-GPS isethe isikhathi.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.

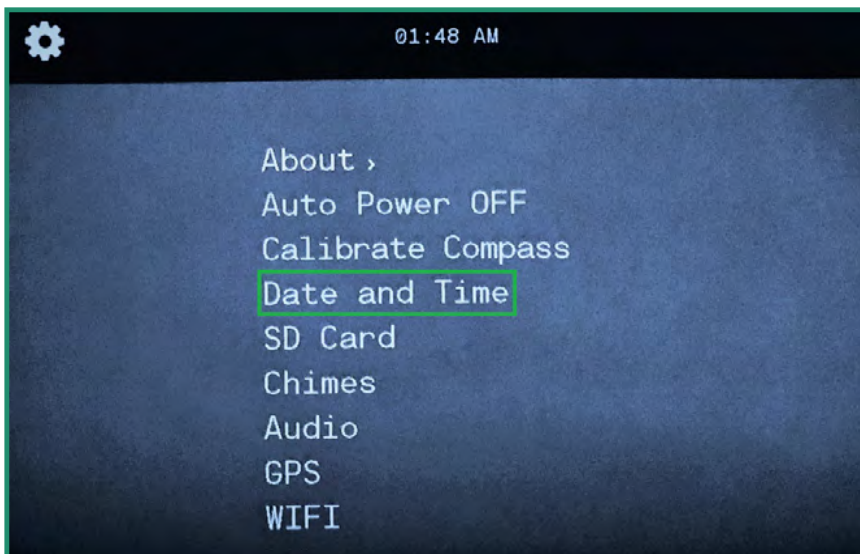

Isahluko 4. Imodi ye-WIFI/Izilungiselelo

2. Shintshela phansi kokuthi Idethi nesikhathi futhi kwesokudla uye ku-GPS Set bese uye kokuthi ongakhetha kukho.



Isahluko 4. Imodi ye-WIFI/Izilungiselelo

3. Guqula kwesokudla kuNdawo Yesikhathi bese ucindezela okuthi SETHA ukuze ukhethe Indawo yakho Yesikhathi.



4. Guqula kwesokunxele kabili ukuze uphume kumenyu.

5. Uma ufuna ukusetha i-Daylight Savings Time ukuthi ivuleke, guqulela uye phansi ku-DST bese kwesokudla kokuthi Vuliwe bese ucindezela okuthi SET.




6. Guqula kwesokunxele kabili ukuze uphume kumamenyu amancane.

Isahluko 4. Imodi ye-WIFI/Izilungiselelo


4.4.2 Ifomethi

Ungashintsha ifomethi yedethi nesikhathi.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.


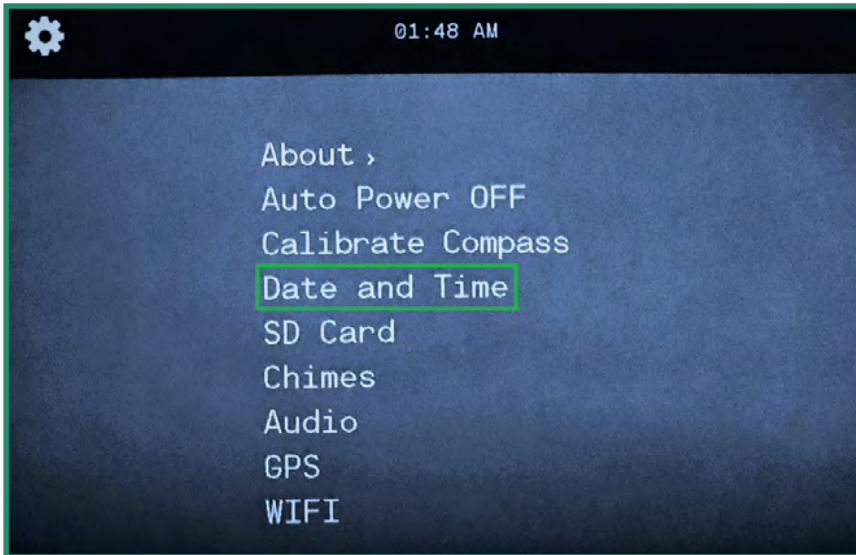


2. Shintshela phansi kokuthi Idethi nesikhathi bese uguqulela kwesokudla uye kokuthi Ukufometha.

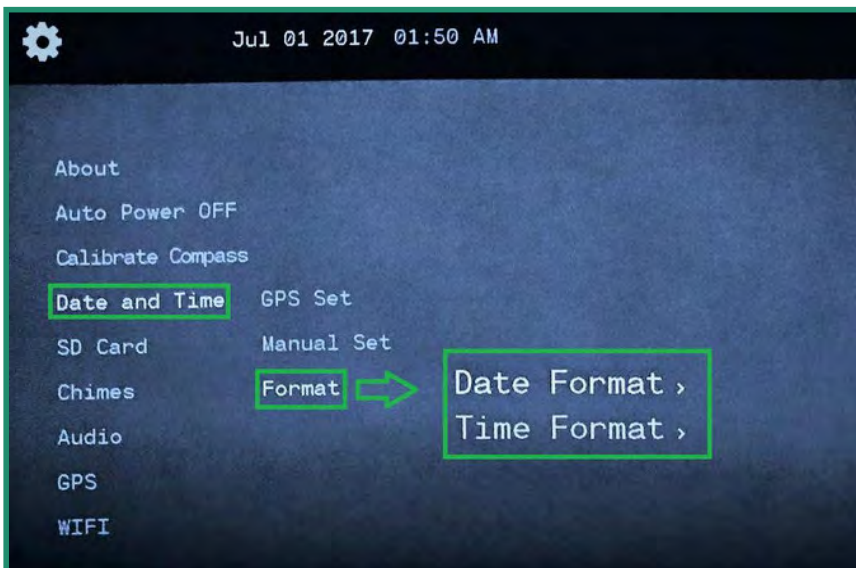


Isahluko 4. Imodi ye-WIFI/Izilungiselelo

3. Shintshela kwesokudla futhi uye kwifomethi yedethi bese ucindezela u-SET.
4. Izinketho ezikhethiwe ziphezulu esikrinini. Ifomethi yedethi ezenzakalelayo iwunyaka wosuku. Ukuze ushintshe ifomethi, guqulela phezulu naphansi futhi ifomethi izoshintsha.

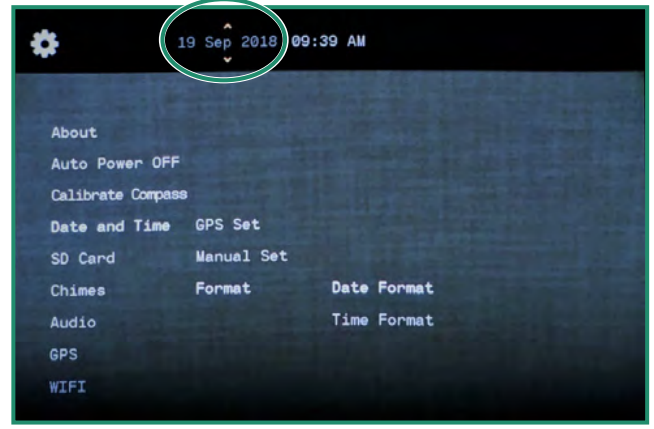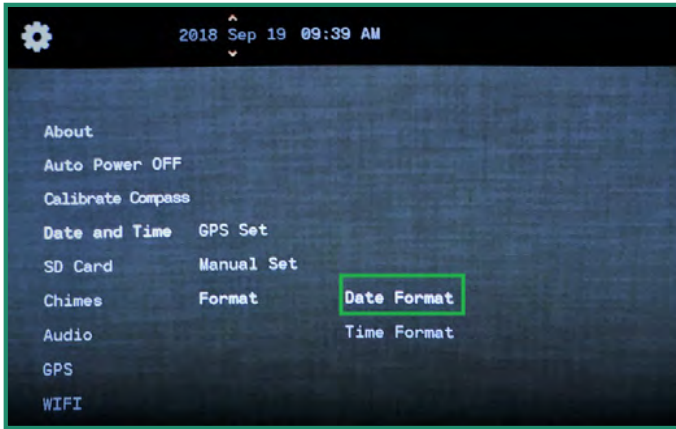

5. Shintshela phansi kokuthi Ifomethi Yesikhathi bese uguqulela kwesokudla. Izinketho ezikhethiwe ziphezulu esikrinini. Ifomethi yesikhathi ezenzakalelayo amahora ayi-12. Ukuze ushintshele emahoreni angama-24, guqula bese ucindezela u-SET.

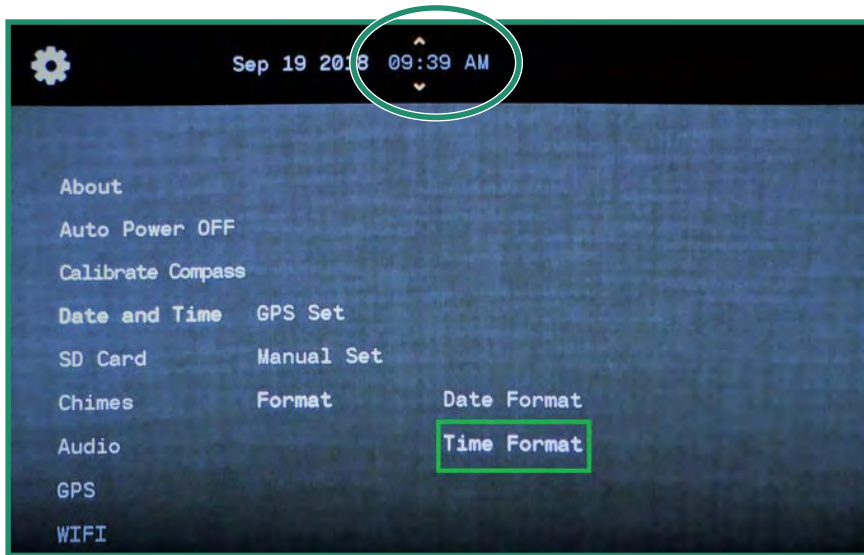



6. Khetha inketho oyifunayo bese ucindezela SET.

Isahluko 4. Imodi ye-WiFi/Izilungiselelo

4.5 Ikhadi le-SD

Uma ikhadi lakho le-SD lonakala, ungalifometha ngekhamera.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.
2. Shintshela ekhadini le-SD futhi kwesokudla kabili ukuze Ukufometha.
3. Guqulela kuYebo bese ucindezela SET.

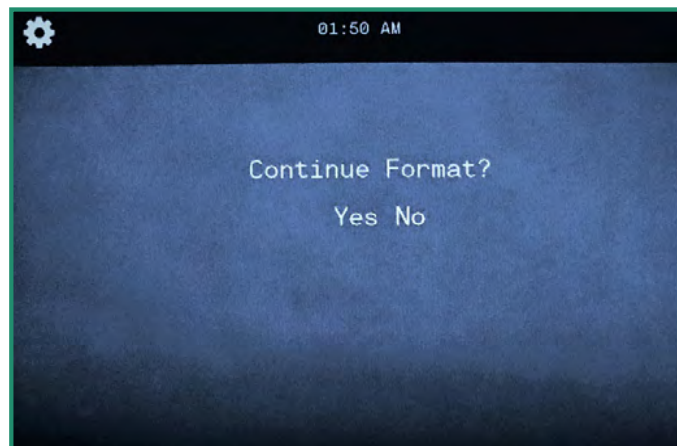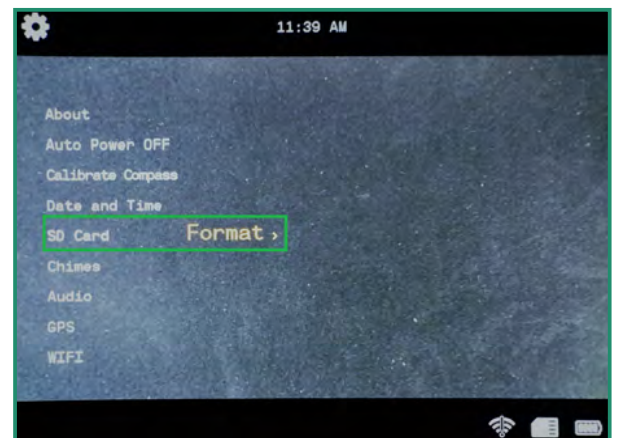

Qaphela: Uma ungafuni ukufometha Ikhadi le-SD, khetha Cha bese ucindezela SET bese uguqulela kwesokunxele uye kumenyu enkulu.

ISEXWAYISO


Ukufometha ikhadi lakho le-SD kuzosula yonke idatha yekhadi!

Isahluko 4. Imodi ye-WiFi/Izilungiselelo


4.6 Ama-Chimes

Ikhamera idlala ama-chime ngemisebenzi ehlukenene nalapho uvula futhi uyivala ikhamera.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.

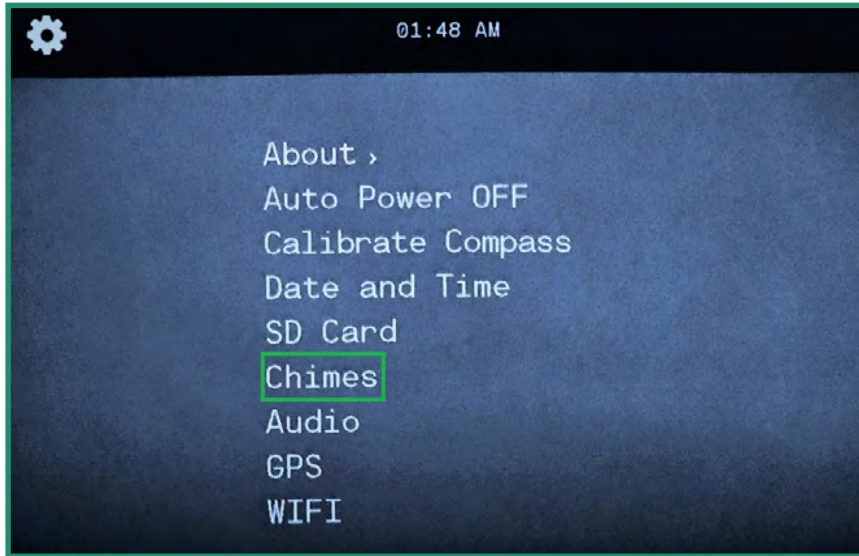

2. Shintshela phansi ku-Chimes futhi kwesokudla ukuze uvule noma Ukuvala ama-Chimes.

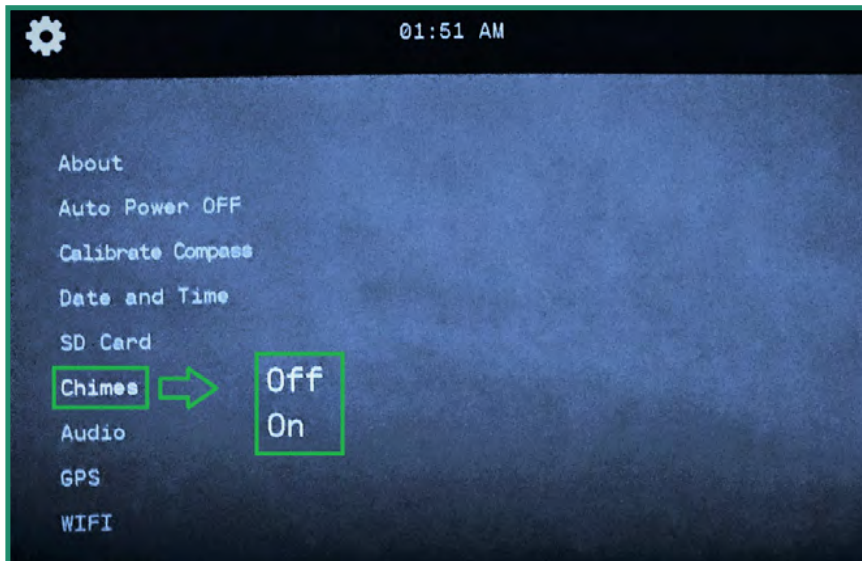


3. Khetha Valiwe noma Vuliwe bese ucindezela SET.

Isahluko 4. Imodi ye-WIFI/Izilungiselelo


4.7 Okulalelwayo

Umsindo odlalwayo kuvidiyo ungasethwa kokuthi Valiwe, Phezulu, Maphakathi noma Phansi.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.

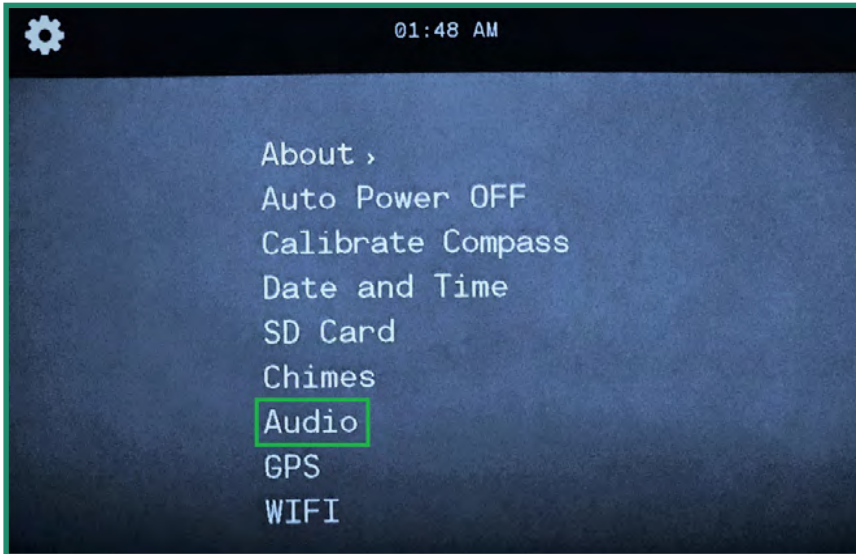

2. Shintshela phansi Umsindo futhi uye kwesokudla izinketho zevolumu.

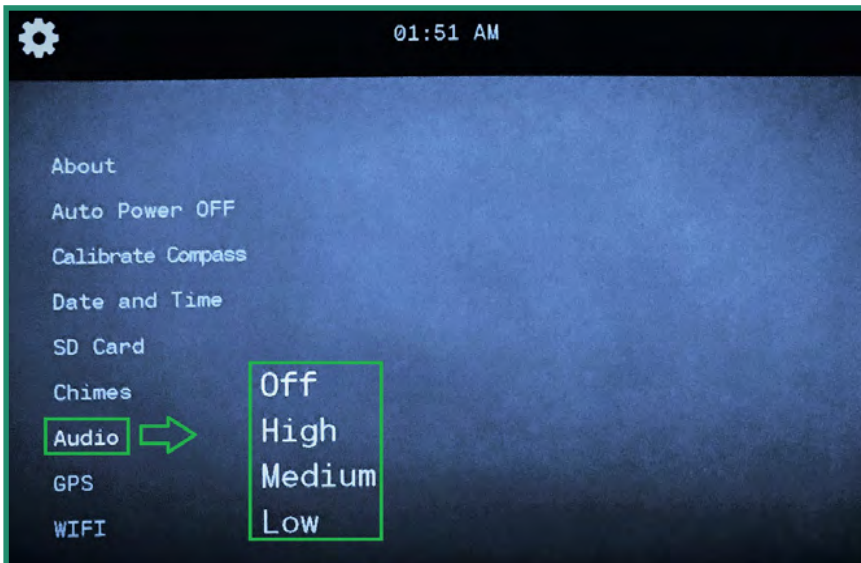

3. Khetha inketho yevolumu oyifunayo bese ucindezela SET.

Isahluko 4. Imodi ye-WIFI/Izilungiselelo


4.8 I-GPS (AYITHOLAKALI KUWO WONKE AMAKHAMERA)

I-GPS yekhamera ibonisa i-longitude yakho kanye ne-latitude. Izixhumanisi ze-GPS ziyabonakala kusitholi sokubuka uma sikuSithombe, Ividiyo, noma Imodi ye-Loop.

4.8.1 Ivula i-GPS


Qaphela: I-GPS isebenza kuphela uma ungaphandle futhi idinga imizuzu engu-1-2 ukuze ikhamera ithole indawo yokuqala.

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.

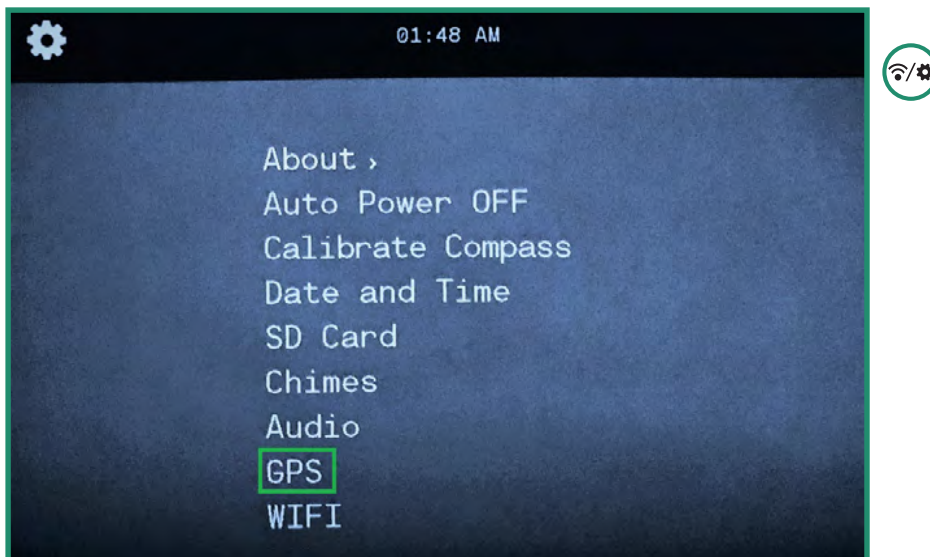

Isahluko 4. Imodi ye-WIFI/Izilungiselelo


2. Shintshela phansi ku-GPS futhi uye ngqo kumenyu ye-GPS.

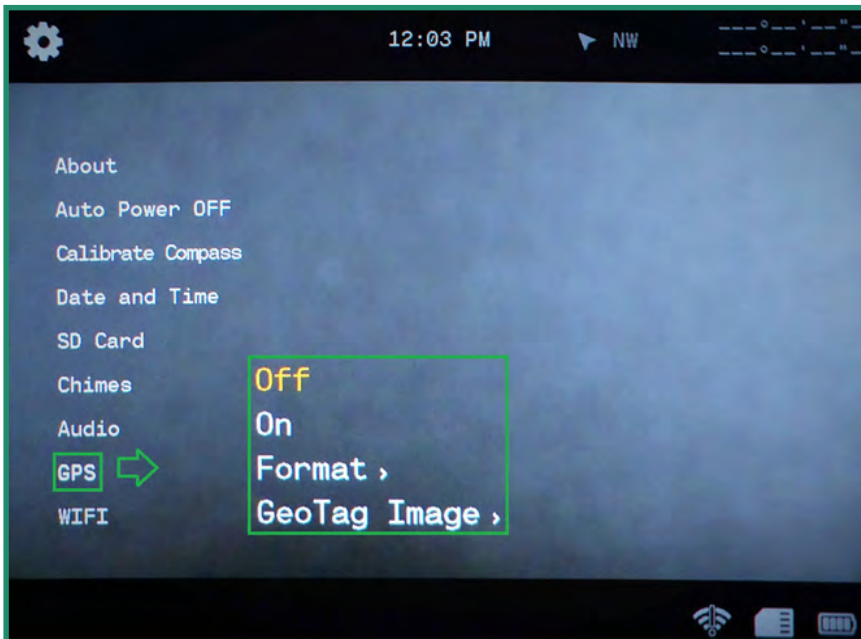

3. Yehla uye ku-Vula bese ucindezela u-SET.

4. Vula ikhamera ku-Isithombe, Ividiyo, noma I-Loop Mode bese uphumela ngaphandle ukuze wamukele isignali.

5. Izixhumanisi ze-GPS zisekhoneni eliphezulu kwesokudla semenyu.

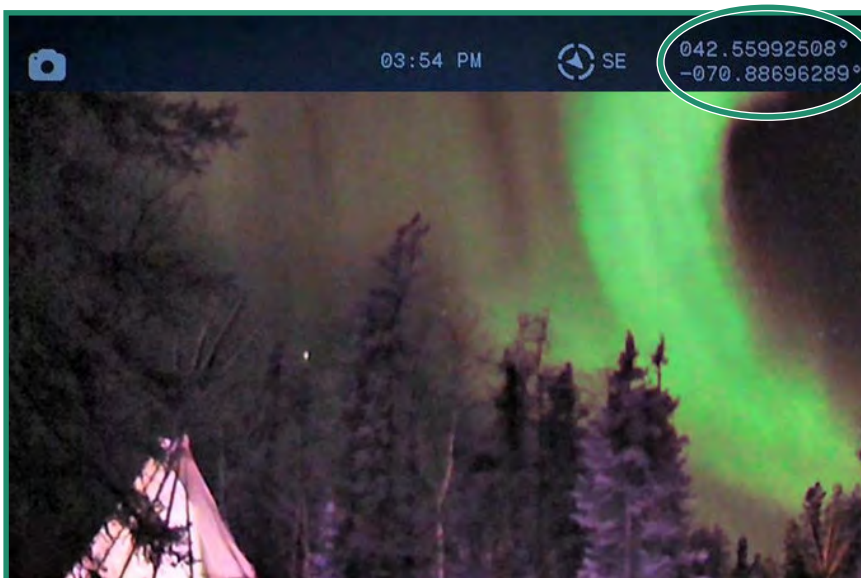


4.8.2 Ukushintsha ifomethi ye-GPS


Ungashintsha ifomethi ye-GPS isuke kumadigri/imizuzu/amasekhondi iye kumadesimali.

Isahluko 4. Imodi ye-WiFi/Izilungiselelo

1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.

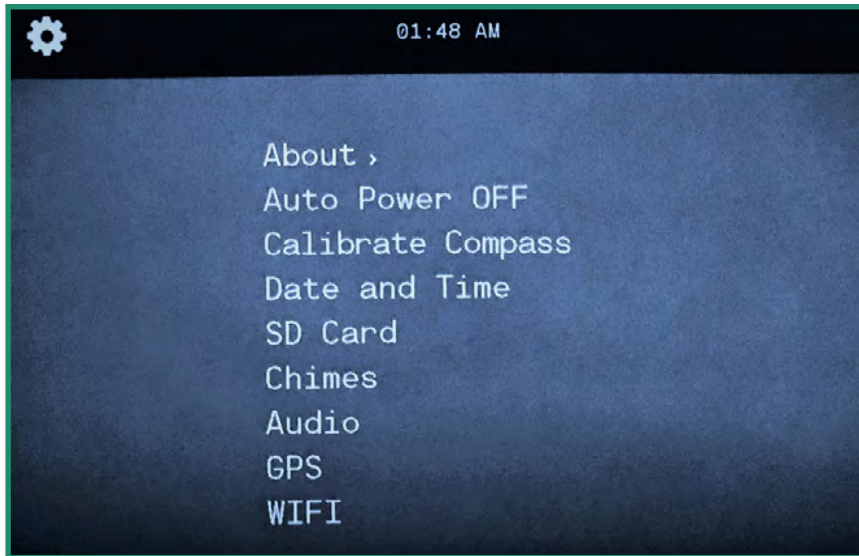


2. Shintshela phansi ku-GPS futhi uye ngqo kumenyu.

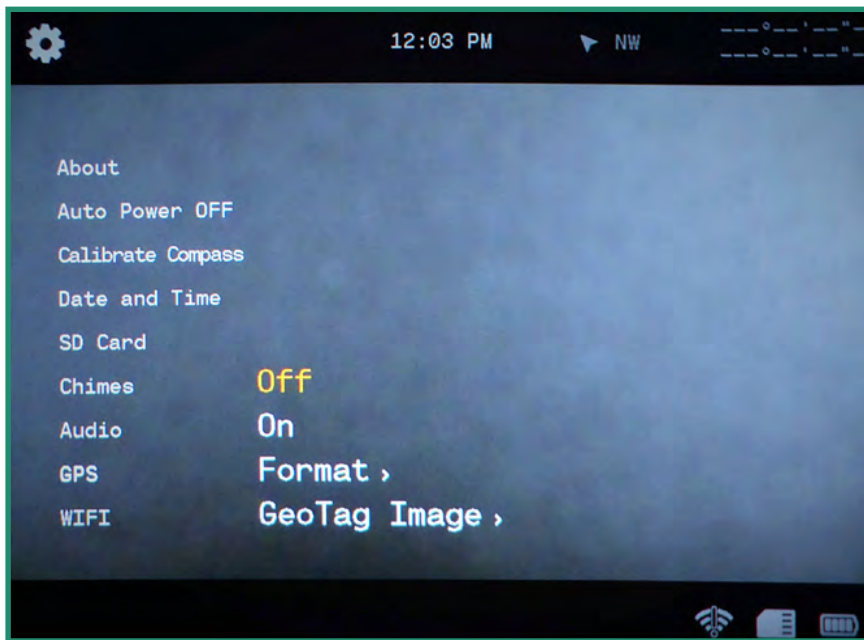

Isahluko 4. Imodi ye-WIFI/Izilungiselelo

3. Shintshela phansi kokuthi Ifomethi futhi uye kwesokudla Izinketho zefomethi.

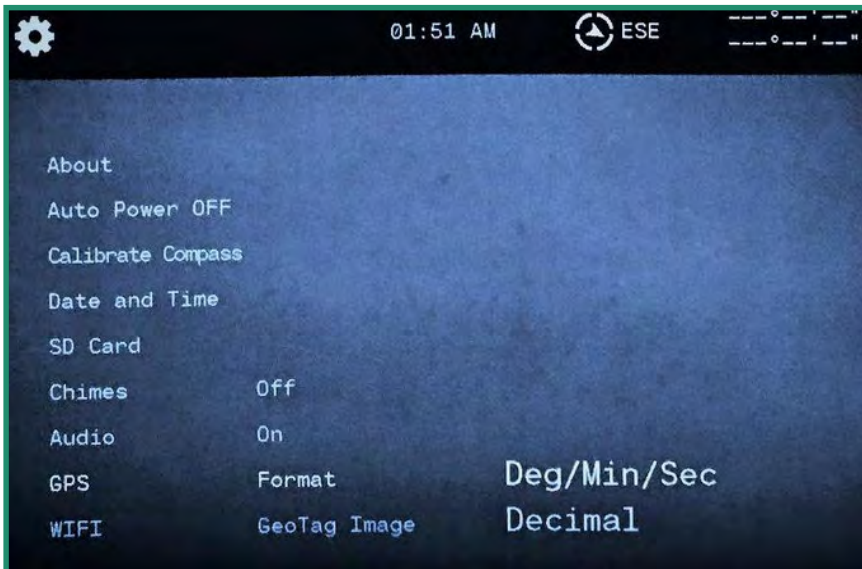


4. Khetha inketho bese ucindezela SET.

5. Guqula kwesokunxele ukuze uphume kumenyu ye-GPS.

Qaphela: I-GPS idla amandla futhi kufanele icishwe ukuze inwebe impilo yebhethri uma ingasebenzi.


6. Vula ikhamera ku-Photo, Video, noma I-Loop Mode bese uphumela ngaphandle ukuze wamukele isignali. Izixhumanisi ze-GPS ziphezulu kwesokudla se-Viewfinder.

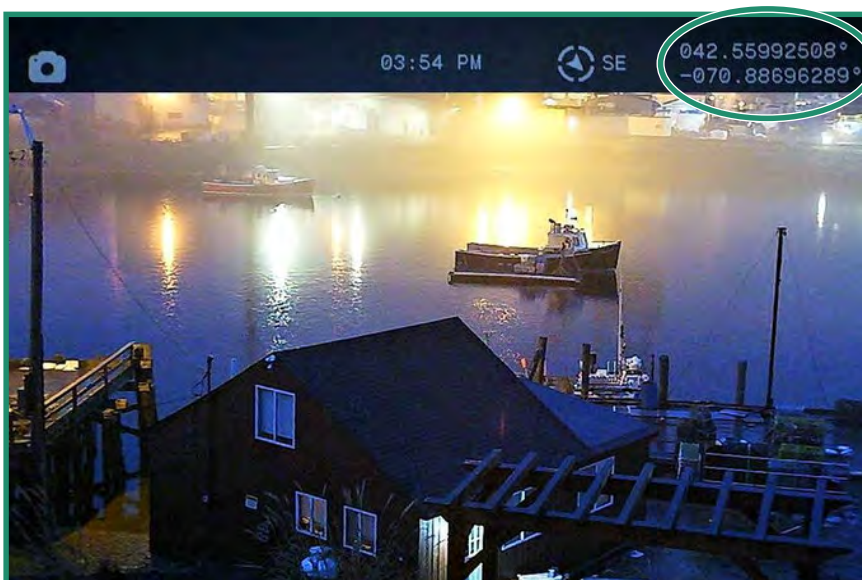


Isahluko 4. Imodi ye-WiFi/Izilungiselelo

4.8.3 Isithombe se-GeoTag (ASITHOLAKALI KUWO WONKE AMAKHAMERA)

Isithombe se-GeoTag sibhala imethadatha ye-GPS kuzo zombili izithombe namavidiyo. Ezithombeni, imethadatha ingabukwa nezibukeli ze-EXIF zezinkampani zangaphandle nezinye izinguqulo ze-Windows® ngokuchofa kwesokudla esithombeni, ukhethe izakhiwo kanye neminingwane.

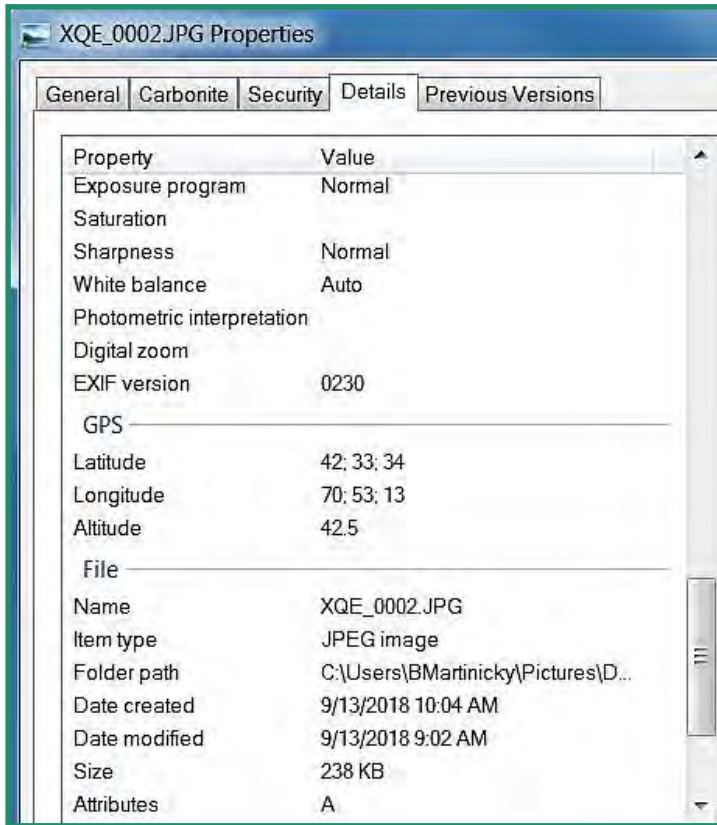


1. Vula ikhamera ngokuzungezisa Ukudayela Izilungiselelo kumodi ye-WiFi/Izilungiselelo ukuze ufinyelele imenyu.

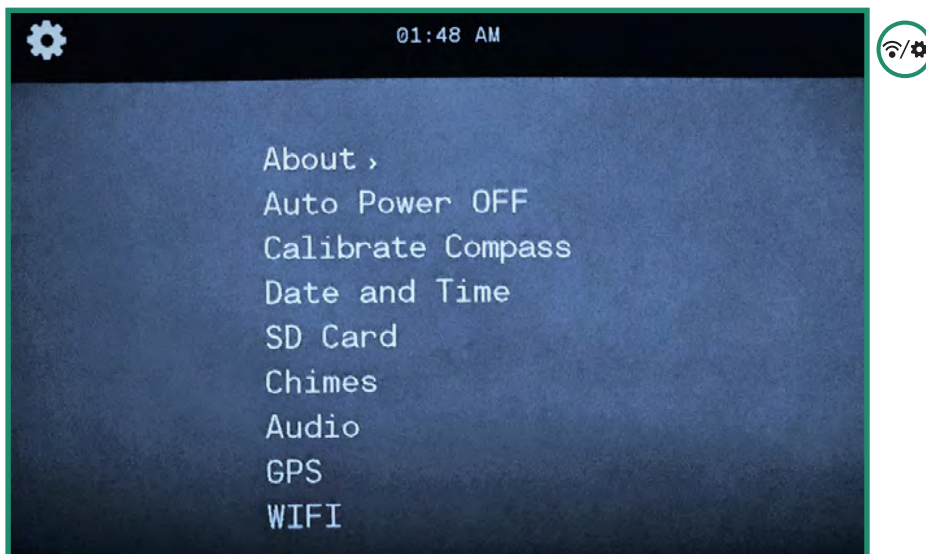

Isahluko 4. Imodi ye-WIFI/Izilungiselelo

2. Shintshela phansi ku-GPS futhi uye ngqo kumenyu ye-GPS.

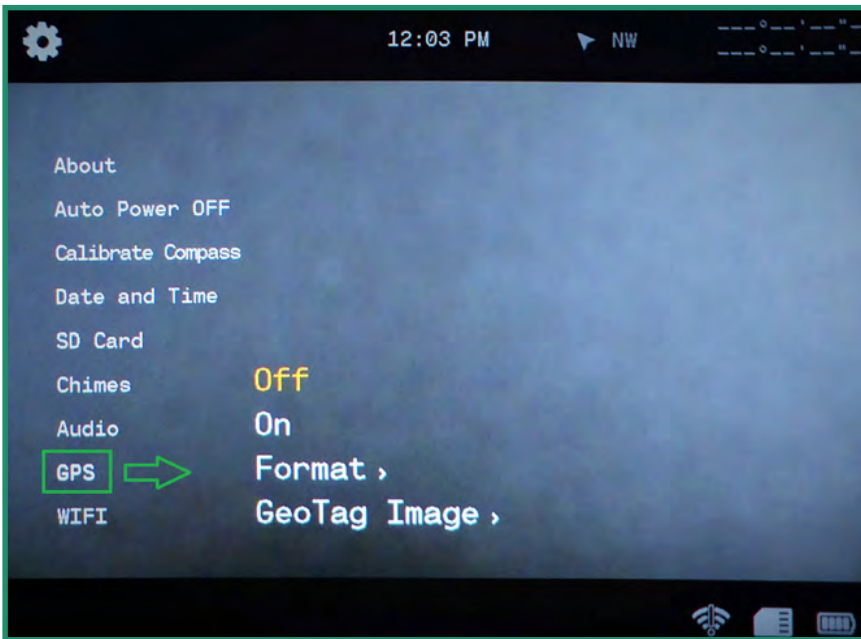

3. Shintshela phansi ku-GeoTag Image futhi kwesokudla uye kunketho ethi Valiwe noma Vuliwe. Cindezela okuthi SET ukuze ukhethe.



4. Guqula kwesokunxele ukuze uphume kumenyu ye-GPS.

4.9 WIFI

Ukuze ufunde kabanzi nge-WiFi, bheka "Isigaba 1.6 Ukulanda Uhlelo Lokusebenza lwe-SIONYX Aurora ukuze Uxhume Kukhamera Yakho" ekhasini 18.

Isahluko 5. Ulwazi Oluyisethenjwa

5.1 Ibhethri

5.1.1 Isebenza Izinga lokushisa Ibanga

Izinga lokushisa elisebenzayo lekhamera ye-Aurora lingu-14 °F - 104 °F (-10 °C - 40 °C) kumswakama ohlobene ongu-90%.

5.1.2 Amathiphu Okunciphisa Ukusetshenziswa Kwebhethri

Ukuze wonge amandla ebhethri lakho, landela lawa macebiso:

1. Vala ikhamera noma nini uma ungayisebenzisi.
2. Vala i-WiFi, i-GPS, i-EIS, umsindo nama-chime.
3. Yehlisa ukukhanya kwe-Viewfinder.
4. Nika amandla isici sokuvala amandla okuzenzakalelayo. Bheka “Isigaba 4.2 Ukucishwa Kokucisha Okuzenzakalelayo” ekhasini 78.

5.1.3 Isitoreji Sebhethri Nokuphatha

Nawa amanye amathiphu okugcina nokuphatha ibhethri.

Gwema ukubeka ikhamera yakho emazingeni okushisa abandayo kakhulu noma ashisayo kakhulu. Izimo zokushisa eziphansi noma eziphezulu zinganciphisa impilo yebhethri.

Gcina ibhethri likude nokushisa nomlilo. Ungawomisi ikhamera noma ibhethri ngomthombo wokushisa wangaphandle njengehhavini ye-microwave noma isomisi sezinwele.

Ungagcini ibhethri lakho ezintweni eziyinsimbi, njengezinhlamvu zemali, okhiye noma imigexo. Uma amatheminali ebhethri athintana nezinto zensimbi, lokhu kungase kubangele umlilo.

Ungenzi izinguquko kukhamera. Ungawasebenzisi amashaja angagunyaziwe. Ukwenza kanjalo kungase kubeke engozini ukuphepha, ukuthobela imithetho, ukusebenza, futhi kungase kuchithe iwaranti.

ISEXWAYISO

Ungawisi, ungawuhlakazi, uvule, uchofoze, ungagobi, ugoqe, ungabhobozi, ungahlikihli, ushise noma upende ikhamera noma ibhethri. Ungafaki izinto ezingaziwa ebhethrini elivula ikhamera. Uma ibhethri lingalingani, sicela uhlole ukuma kwebhethri futhi ungaliphoqelesi ekuvuleni ibhethri.

Ungayisebenzisi ikhamera noma ibhethri uma yonakele – isibonelo, uma iqhekekile, ibhobokile noma ilinyazwa amanzi. Yeka ukusebenzisa ibhethri uma kunokungajwayelekile okubonakalayo njengephunga elingavamile, ukushisa, ukonakala noma ukuguquguquka kombala. Ukuqaqa noma ukubhoboza ibhethri kungabangela ukuqhuma noma umlilo.

5.1.4 Ukulahlwa Kwebhethri

Izindawo eziningi zinemithetho ekhona edinga ukugaywa kabusha kwebhethri. Ukuze ulahle ngokuphephile amabhethri e-lithium-ion, vikela amatheminali ekuchayekeni kwenye insimbi.

Isahluko 5. Ulwazi Oluyisethenjwa

Amabhethri e-lithium-ion aqukethe izinto ezigaywa kabusha futhi amukelwe ukuze agaywe kabusha wuhlelo lokugaywa kabusha kwebhethri lwe-rechargeable battery recycling coloration (RBRC). Vakashela i-call2recycle kokuthi call2recycle.org. Ungalokothi ulahle ibhethri emlilweni ngoba lingase liqhume.

ISEXWAYISO

Sebenzisa kuphela amabhethri anconyiwe ashintshwayo ekhamera yakho.

Gcina ibhethri likude nezinsana nezingane ezingaphansi kweminyaka engu-5 ubudala.

Qiniseka ukuthi ugada izingane futhi uzifundise ngokusetshenziswa nokunakekelwa okufanele kwebhethri.

5.2 Imininingwane Yekhamera

Inzwa	Ukukhanya Okuphansi Okuphezulu CMOS
Umbono Wasebusuku	Inkanyezi Engenanyanga Iyakwazi (Pro)
Bonisa	Umbala noma i-monochrome
Ilensi	16mm; f/1.4 (Ebusuku), f/2.0 (Twilight), f/5.6 (Usuku) okukhethekayo
Ividiyo	360p/720p • .MOV
FPS	7.5, 15, 24, 30, 60
Isithombe	.9 MP izithombe
Isivinini Sokuvala	1.5 sec, 1 sec, 1/.2 sec, 1/4 sec, 1/7.5 sec, 1/15 sec, 1/30 sec, 1/60 sec, 1/120 sec, 1/240 sec, 1/480 sec, 1/1000 sec, 1/2000 sec, 1/4000 sec, 1/8000 sec
IMU	I-GPS, i-Accelerometer, Ikhampasi (AYITHOLAKALI KUWO WONKE AMAKHAMERA)
Ukuxhumana	WiFi, USB 2.0
Isitoreji	I-Micro SD 4-32 GB (ayifakiwe)
Isitholi Sokubuka	Isibonisi se-Micro OLED
Ukumelana Namanzi	I-IP67 Engazweli Amanzi
Ibhethri ye-Lithium-ion	Ishajwa kabusha 2h ngokuqhubekayo
Apps	iOS, Android

Isahluko 5. Ulwazi Oluyisethenjwa

Ukumelana Namanzi

I-Aurora iyamelana nokuchaphazeka, amanzi, nothuli futhi ihlolwa ngaphansi kwezimo zaselabhorethri ezilawulwayo ngesilinganiso se-IP67 ngaphansi kwe-IEC standard 60529. I-Aurora ayizwani namanzi ezinyaweni ezingu-3 imizuzu engu-30.

Uma i-Aurora yakho imanzi noma isanda kuba emanzini, qiniseka ukuthi uyomisa kahle ngaphambi kokukhipha i-Viewfinder ukuze uvimbele noma imaphi amanzi ukuthi angangeni emzimbeni wekhamera.

5.3 SIONYX Ukuphathwa Kwamakhasinde

Ukuze ufinyelele Ukunakekelwa Kwekhasimende kwe-SIONYX, xhumana nathi kokulandelayo:

<https://support.sionyx.com/support/home>

support@sionyx.com

Isahluko 6. Ukuxazulula izinkinga

Uma kwenzeka iphutha uma usebenzisa ikhamera, umyalezo uzovela ku-Viewfinder. Ilambu elibomvu elihambisanayo nalo lizokhanya eceleni kwekhamera.

Iphutha	Inkinga	Indlela Yokulungisa
Ukushisisa Kwekhamera	Uma izinga lokushisa lekhamera lifinyelela ku-104 °F (40 °C) izovaleka ngokuzenzakalelayo.	Ikhamera izosebenza uma izinga lokushisa lifinyelela ebangeni lokusebenza.
Ibhethri Liphansi	Ibhethri ayishajiwe ngokwanele ukusebenzisa ikhamera.	Shaja ibhethri.
Alikho Ikhadi le-SD Kufakiwe	Ikhadi le-SD alifakiwe	Khipha umlayezo ngokucindezela inkinobho ethi SET. Faka Ikhadi le-SD.
Ikhadi le-SD elingafomethiwe	Ikhadi le-SD alifomethiwe.	Fometha Ikhadi le-SD.
Iphutha lekhadi le-SD	Uma ikhadi le-SD lingaziwa.	Uma Ikhadi le-SD lingaphezu kuka-32 GB ikhadi ngeke lisebenze. Faka ikhadi le-SD elingu-32 GB. (PRO = 256GB)
Ikhadi le-SD ligcwele	Uma singekho isikhala ekhadini le-SD.	Faka esikhundleni ngekhadi elisha le-SD noma ususe izithombe ekhadini le-SD lamanje.
Sicela ubeke idethi nesikhathi	Isibuyekezo se-Firmware	Khipha umlayezo ngokucindezela inkinobho ethi SET. Setha idethi nesikhathi.
Ukuxhumeka kwe-WIFI kulahlekile	Uma ukuxhumeka kwe-WiFi kulahleka.	Ibonisa umlayezo kuze kube yilapho i-WiFi imiswa kabusha noma imodi yokudayela izilungiselelo ishintshiwe.
Ukuxhumeka kwe-WIFI akutholakali	Uma uxhumano lwe-WiFi lungatholakali.	Ibonisa umlayezo kuze kube yilapho i-WiFi iyasungulwa noma imodi yokudayela izilungiselelo ishintshiwe.
Iphutha lebanga lokushwiba	Uma imodi ye-Panorama ivuliwe futhi indlela yokushwiba ayilungile noma ukunyakaza kushesha kakhulu.	Umlayezo uzonyamalala ngokuzenzakalelayo. Phinda inqubo ye-Panorama.
Awekho amaSathelayithi	Uma i-GPS ingakwazi ukuthola isignali yesathelayithi imizuzu emi-5 ngemva kokusetha Vuliwe.	Ikhamera idinga ukuba ngaphandle inombono ocacile wesibhakabhaka.
Asikho Isithombe	Kumodi yokudlala uma singekho isithombe esingaboniswa.	Kumodi yokudlala azikho izithombe ezingaboniswa ekhadini le-SD. Guqula Ukudayela Izilungiselelo uye kwenye Imodi.

Isahluko 7. Iwaranti

7.1 SiOnyx Aurora Buyela / Ukuhwebelana Inqubomgomo Yesiqinisekiso Esinomkhawulo

7.1.1 Yini Okumbozwe Ngalesi Siqiniseko Esinomkhawulo

I-SIONYX, LLC ("SIONYX" noma "thina") iqinisekisa umthengi wangempela womsebenzisi ("wena") umkhiqizo we-SIONYX kanye nezinsiza eziqukethwe ephaketheni langempela ("SIONYX Product"), okuhlanganisa ibhethri, ibhande lentamo, isikhwama sokuzivikela, nekhebula le-USB, ngokumelene nokukhubazeka kokubalulekile nomsebenzi lapho isetshenziswa ngokuvamile ngokuvumelana neziqondiso ezishicilelwe ze-SIONYX isikhathi ESIWODWA (1) UNYAKA kusukela ngedethi yokuthenga kwasekuqaleni umthengi womthengi ("Inkathi Yesiqinisekiso"). Imihlahlandlela eshicilelwe ye-SIONYX ihlanganisa, kodwa ayikhawulelwe, ulwazi oluqukethwe ekucacisweni kobuchwepheshe, imanyuwali yabasebenzisi, nokuxhumana kwesevisi.

Lesi siqinisekiso esikhawulelwe sisebenza kuphela futhi sisebenziseka ezweni lapho Umkhiqizo we-SIONYX wathengwa khona, inqobo nje uma lelo zwe lisohlwini lwamazwe athile lapho sithengisa khona ikhamera ye-Aurora.

Uma uMkhiqizo we-SIONYX wehluleka phakathi Nenkathi Yesiqinisekiso, phakathi nesikhathi esinengqondo sokuthengisa, sizowulungisa noma siwushintshe njengoba kuchazwe ngezansi.

7.1.2 Okungamboziwe Ngalesi Siqiniseko Esinomkhawulo

Lesi siqinisekiso esikhawulelwe asisebenzi kunoma yimiphi imikhiqizo yezingxenyekazi zekhompuyutha engeyona eye-SIONYX nanoma iyiphi isofthiwe, ngisho noma ipakishwe noma ithengiswe ngehadiwe ye-SIONYX. Abakhiqizi, abahlinzeki, noma abashicileli, ngaphandle kwe-SIONYX, bangakunikeza iziqinisekiso zabo kuwe - sicela ubathinte ukuze uthole ulwazi olwengeziwe. Isofthiwe esatshaliswa i-SIONYX enomkhiqizo we-SIONYX noma ngaphandle kwawo (okuhlanganisa, kodwa kungagcini nje, isofthiwe yesistimu) ayimbozwanga lesi siqinisekiso esinomkhawulo. Sicela ubhekisele esivumelwaneni selayisense esihambisana nesofthiwe ukuze uthole imininingwane yamalungelo akho maqondana nokusetshenziswa kwayo. I-SIONYX ayiqinisekisi ukuthi ukusebenza koMkhiqizo we-SIONYX ngeke kuphazamiseke noma kungabi namaphutha. I-SIONYX ayinasibopho ngomonakalo ovela ngenxa yokwehluleka ukulandela imiyalelo ehlobene nokusetshenziswa koMkhiqizo we-SIONYX.

Lesi siqinisekiso esilinganiselwe asisebenzi: (a) ezingxenyeni ezisebenzisekayo, njengamabhethri noma okokuvikela okuklanyelwe ukuncipha ngokuhamba kwesikhathi, ngaphandle uma ukwehluleka kwenzeke ngenxa yesici empahleni yezinto zokwakha noma umsebenzi; (b) ekulimaleni kwezimonyo, okuhlanganisa kodwa okungagcini nje ngokuklwebheka (okuhlanganisa namalensi), ama-dent, namapulasitiki aphukile ezikhumulweni; (c) umonakalo odalwe ukusebenzisa omunye umkhiqizo; (d) umonakalo odalekile ngengozi, ukuhlukumeza, ukusetshenziswa kabi, ukuphazamisa, uketshezi (okungaphezu kwesitifiketi se-IP67), inhlanzi, umthelela, umlilo, ukuntula ukunakekelwa okufanele noma ukulungiswa, ukuzamazama komhlaba, noma enye imbangela yangaphandle; (e) umonakalo odalwe ukusebenzisa uMkhiqizo we-SIONYX ngaphandle kwemihlahlandlela eshicilelwe ye-SIONYX; (f) umonakalo odalwe ukusetshenziswa kwezingxenywe ezingagunyaziwe noma isevisi (okuhlanganisa ukuthuthukiswa nokunwetshwa) okwenziwa yinoma ubani ongamele i-SIONYX noma Umhlinzeki Wesevisi Ogunyaziwe we-SIONYX ("SASP"); (g) Emkhiqizweni we-SIONYX oshintshiwe ukuze ushintshe ukusebenza noma amandla ngaphandle kwemvume ebhaliwe ye-SIONYX; (h) nokulimala okudalwe ukuguga okujwayelekile noma okunye ngenxa yokuguga okuvamile koMkhiqizo we-SIONYX; noma (i) uma noma iyiphi inombolo ye-serial isusiwe noma yonakalisiwe eMkhiqizweni we-SIONYX.

Isahluko 7. Iwaranti

7.1.3 Yiziphi Izixazululo Zakho Ngaphansi Kwalesi Siqiniseko Esinomkhawulo?

Zonke izimangalo zewaranti zizodinga inombolo ye-RMA. Ukuze uxoxe ngesimangalo sewaranti futhi uthole inombolo ye-RMA, sicela uthinte support@SIONYX.com. Uzodingeka ukuthi ulethe irisidi yokuthengisa/ubufakazi bokuthenga obubonisa usuku lokuthenga, inani elikhokhiwe kanye nendawo othenge kuyo. Uma isimangalo sitholwa phakathi Nenkathi Yesiqinisekiso futhi Umkhiqizo we-SIONYX utholwa uhlulekile ngokusekelwe ekuhlolweni kwefoni/i-imeyili okwenziwa yi-SIONYX Aurora Customer Care sizokwenza, ngokuzikhethela:

- lungisa ikhamera noma isisekeli, noma
- ukushintshanisa ikhamera noma isisetshenziswa nomkhiqizo omusha, noma owenziwe ngezingxenye ezintsha ezisetshenziswayo noma ezisetshenzwa futhi osebenza ngokulingana nowokuqala, noma
- shintshanisa ikhamera noma isisetshenziswa nomkhiqizo oyimodeli entsha nethuthukisiwe enomsebenzi okungenani olinganayo noma othuthukisiwe kumkhiqizo wokuqala.

Ngokuvumelana nemithetho esebenzayo, Isikhathi Sewaranti ngeke sinwetshwe noma sivuselelwe noma sithinteke ngenxa yokushintshisana okulandelayo, ukuthengiswa kabusha, ukulungiswa, noma ukushintshwa kwekhamera noma insiza. Kodwa-ke, ingxenye ekhandwayo noma eshintshwayo phakathi Nenkathi Yesiqinisekiso izoqinisekiswa isikhathi esisele Sesikhathi Sewaranti sokuqala noma izinsuku ezingamashumi ayisishiyagalolunye (izinsuku ezingu-90 kusukela ngosuku lokukhandwa noma ukushintshwa, kuye ngokuthi iluphi olude).

7.1.4 Imikhawulo Yesiqinisekiso Ingaphansi Komthetho Wabathengi

Ngokwezinga elivunyelwe umthetho, lesi siqiniseko esinomkhawulo kanye nezixazululo ezishiwo kukhethekile futhi esikhundleni salokho. yazo zonke ezinye iziqinisekiso, amakhambi, nemibandela, kungaba ngomlomo, ebhaliwe, esemthethweni, evezwayo, noma eshiwo futhi imele sonke isibopho sethu sanoma yikuphi ukwephulwa kwalesi siqinisekiso esilinganiselwe. Ngaphandle kokuthi kuhlinzekwe kulesi siqiniseko esilinganiselwe kanye nezinga eliphezulu elivunyelwe umthetho, asinasibopho sanoma imiphi imiphumela, isigameko, isipesheli noma isijeziso somonakalo noma ukulahlekelwa, kungakhathaliseki ukuthi kuqondile noma ngokungaqondile, okubangelwa ukusetshenziswa kwalo mkhiqizo, noma okubangelwa ukusetshenziswa kwalo mkhiqizo. noma yikuphi ukwephulwa kwalesi siqinisekiso esilinganiselwe. I-SIONYX iyazilahla zonke iziqinisekiso ezingokomthetho nezicatshangelwayo, okuhlanganisa ngaphandle komkhawulo, iziqinisekiso zokuthengiselana nokufaneleka ngenjongo ethile neziqinisekiso ngokumelene nezici ezifihliwe noma ezicashile, ngokwezinga elivunyelwe umthetho. Kuze kube manje njengoba lezi ziqinisekiso zingenakukhishwa, i-SIONYX ikhawulela ubude besikhathi nezixazululo zalezo ziqinisekiso kubude besikhathi salesi siqinisekiso esinqunyelwe futhi, ngenketho ye-SIONYX, ukulungisa noma ukumiselela amasevisi achazwe ngenhla. Ezinye izifundazwe (amazwe noma izifundazwe) aziyivumeli imikhawulo yokuthi iwaranti eshiwoyo (noma umbandela) ingase ihlale isikhathi eside kangakanani, noma ukukhishwa noma umkhawulo wokulimala kwengozi noma okuwumphumela, ukuze imikhawulo echazwe ngenhla ingasebenzi kuwe.

Lesi Siqiniseko sikunikeza amalungelo athile omthetho, futhi ungase ube namanye amalungelo ahluka ngokwezifundazwe (noma ngezwe noma isifundazwe). Ngaphandle kwalokho okuvunyelwe ngumthetho, i-SIONYX ayibandakanyi, ayikhawuleli, noma imise okwesikhashana amanye amalungelo okungenzeka ube nawo, okuhlanganisa nalawo angase avele ngenxa yokungathobeki kwenkontileka yokuthengisa. Ukuze uthole ukuqonda okugcwele kwamalungelo akho kufanele uthintane nemithetho yezwe lakini, isifundazwe noma yesifunda sakho.

7.1.5 Imikhiqizo Ebuyayo

Ungakwazi ukubuyisela okuthengiswayo ukuze uthole imbuyiselo yenani lomkhiqizo, noma ukushintshanisa, uma ukubuyisela kwenziwa phakathi nezinsuku eziyi-14 zokuthola into. Ukubuyiselwa kwemali ngeke kufake noma yiziphi izinkokhiso zokuthumela ezibuyiswayo kanye nenkokhelo yokubuyisela isitoko engu-15%. Unesibopho sazo zonke izindleko zokuthumela zokubuyisela ukuthunyelwa, ngaphandle kokuhluleka ngaphandle kwebhokisi okubhekwa njengokuhluleka yi-SIONYX Customer Care.

Zonke izimbuyiselo zizodinga inombolo ye-RMA. Ukuze uxoxe ngembuyiselo futhi uthole inombolo ye-RMA, sicela uthinte support@SIONYX.com.

Wonke ama-oda kufanele ahlolwe amakhasimende zingakapheli izinsuku ezingama-30 kusukela osukwini lokuthenga. Ngemuva kwalesi sikhathi, i-SIONYX ngeke ibe nesibopho sezinto ezilimele ekuthunyelweni, ezilahlekile, nanoma yiziphi ezinye izinkinga ezingahlobene nokusekelwa kobuchwepheshe.

Imikhiqizo ebuyiselwe noma eshintshiwe kufanele ibe misha sha, esimweni se-mint. Izinto kumele zibe sempakheni yomkhiqizo womkhiqizi ongalimele, nazo zonke izingxenye namaphepha, okuhlanganisa izincwajana zeziyalezo nezinto zokupakisha. Sicela ungabeki izitikha noma amalebula okuthumela ephaketheni lomkhiqizo womkhiqizi wangempela.

Ngeke samukele i-C.O.D. ukuthunyelwa noma imikhiqizo ngaphandle kwenombolo ye-RMA. Imikhiqizo ethunyelwe endaweni yethu ngaphandle kwenombolo ye-RMA izolahlwa. Ngeke kube khona umbuzo noma enye indlela mayelana nale nqubo.

Sicela uvumele kufikela kuzinsuku eziyi-10 (eziyishumi) zebhizinisi (kusukela ngesikhathi esithola ngaso imbuyiselo) ukuze ukushintshana kwakho noma ukubuyisela kuzocutshungulwa. Ikheli lokubuyisela uzonikezwa lona I-SIONYX Customer Care uma uthintana nenombolo ye-RMA. Imibuzo? Sicela uthinte support@SIONYX.com.

Ukunakekelwa Kwamakhasimende kwe-Aurora - <https://support.SIONYX.com/support/home>
ISIMEMEZELO ESULULIWE SOKUVUMELANA Ngakho, i-SIONYX,LLC, imemezela ukuthi okokusebenza okuhlinzekiwe kuyahambisana ne:
I-Radio Equipment (RE) Directive (2014/53/EU)
I-RoHS Directive 2011/65/EU

Umbhalo ogcwele wesimemezelo sokuvumelana kwe-EU uyatholakala kokuthi <https://support.SIONYX.com/support/solutions/articles/61000285264-where-can-i-find-your-declaration-of-conformity-for-aurora->